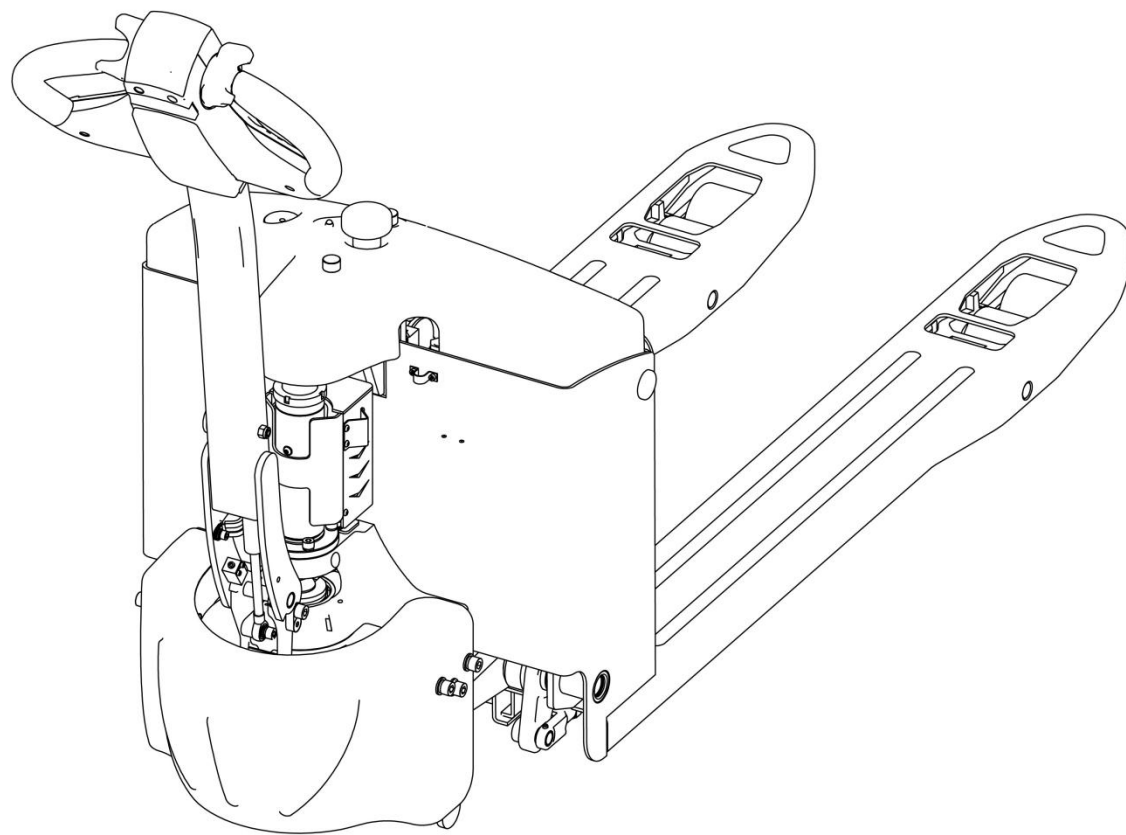




SL15GI
Electric pallet truck
电动托盘搬运车
Parts Manual 零件目录

20240929 V02

PARTS ORDERING INSTRUCTIONS

HOW TO ORDER

When you order, supply the part number, quantity, model and serial numbers of your machine. Supplying this information will assure prompt, efficient handing of your order.

Since your dealer carries many parts in stock and maintains up-to-date prices on all parts, he will be able to process your order immediately. If, for some reason, the part is not in stock, he will order it from the factory. In either event, he maintains a current file of service manuals, which give all available parts ordering or technical information.

WHERE TO ORDER

Always order parts from the dealer who sold you your truck. If it is necessary for the dealer to order parts from the factory, he is able to get prompt service for you. Parts are shipped in accordance with shipping instructions given on the order.

INSTRUCTIONS FOR RETURNING PARTS

Under NO CIRCUMSTANCES will parts be accepted at the factory for credit without prior approval. We cannot accept responsibility for parts returned without authorization.

If you have some parts which must be returned, contact your dealer. If he believes parts should be returned, he will arrange for authorization to return the parts.

CHANGES

When changes are made to the machine, revised pages for this manual will be issued. These pages must be inserted in your parts manual as soon as they are received.

Failure to keep your parts manuals up to date will result in confusion and may cause you to order wrong parts.

零件订购说明

如何订购

当您订购的时候，您需要提供叉车零件的编号，数量，型号和序列号。提供这些信息能够保证您的订购更加的高效。

因为您的经销商有很多零件的存货，而且需要保持所有零件的价格是最新的，所以他会尽快地处理您的订购需求。假如因为某些原因，存货中没有这个零件，那么他会从公司订货。无论怎样的情况，他手里都会有一份服务手册文件，它能提供所有可用的零件的订购信息或者技术信息。

订购地点

当您需要订购零件时，请到销售给您叉车的经销商那里订购。如果经销商有必要从公司订购零件，他能为您提供快捷的服务。根据您的订购信息，零件和它对应的操作说明会一起装好。

零件的退还说明

一般情况下，因为信用的关系，退还的零件没有事先的同意，是不会被公司认可的。我们不会对没有经过授权但退还过来的零件负责。

如果您有一些零件一定要退还，请联系您的经销商。若经销商确认零件可以退还，则其会安排授权要退还的零件。

技术修改

当叉车技术有修改时，这本手册的修正页会重新发行。当您拿到这些修正页时，您一定要立即把它们插入到您的零件手册中。若没有及时的更新您的零件手册，则可能会导致您订购、维护等方面的错误。

GENERAL INFORMATION

INDEX

This parts manual is arranged for easy identification of parts .The index at the front of the catalog gives location of major groups and assemblies.

PART LIST

The Item, describes the item on the Figure you are looking at. The Part No. is a numerical description of the item and the part ordering number. The Description is a description of the part number in alphabetical form. The Qty is the quantity used on the machine. The Applied Date is a description when the part is applicable.The Remark is the explanation of the part for a supplement such as the model the capability, the characteristic etc.

HOW TO READ PARTS MANUAL

HELP 1:

Item	Part No	Description	Qty	Applied Date	Remark
------	---------	-------------	-----	--------------	--------

A →

1		02.XDC.3556	Battery	1		24V/20AH
1		02.XDC.3557	Battery	1		24V/30AH
1		02.XDC.3558	Battery	1		24V/40AH
2		03.0132	Screw M5×8	5		

B →

7		03.0245	Nut M12	2		
8		03.04790	Spring	2		
9	01	30.01.6685	Wheel Frame	1	-210125	
9	02	40.11.048	Wheel Frame	1	210125-	

C →

6		02.KSCX.0001	Cover	1		
7		03.0243	Nut M10	2		Cancel
8		40.11.040	Roller	2		
9		03.1088	Bolt M10×60	2		

D →

3		33.054.0001	Frame (550)	1		
3		33.054.0002	Frame (685)	1		
4		03.02393	Screw M6×16	6		
5		40.18.005	Shaft (550)	1		
5		40.15.044	Shaft (685)	1		

E →

6		33.036.0007	Push Rod Welding	2		For 1800Kg
7		03.0691	Bushing Φ19×Φ16×15	4		
8		03.0305	Round Pin Φ5×30	10		

A:The part of Index 1 is Optional.

B:The part of Index 9 has an Applicability, because it's our policy to constantly improve our products.

C:The part of Index 7 indicates that the part is canceled. Note the version number when ordering.

D:The part of Index 3 indicates that the frame welds have different specifications, 550 or 685 indicates the outer width of the forks. Index 5 indicates the parts used for the outer width of the forks.

E:The part of Index 6 indicates that the part is used for model with load capacity of 1800KG.

1. Record by time

– 210125 : Ending on January 25, 2021.

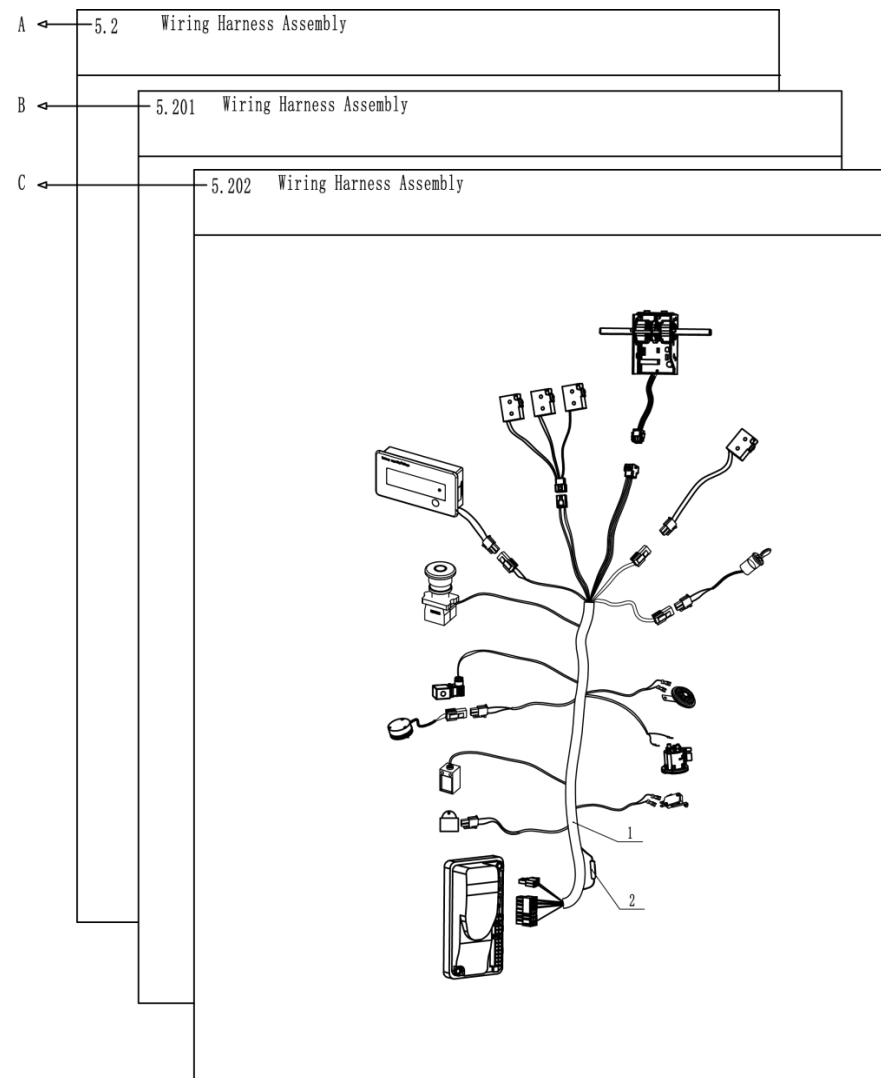
210125- : Beginning on January 25, 2021.

2. Record by serial number

01 : Ending at 01

02 : Starting at 02

HELP 2:



A:Section 5.2 is the original version.

B:Section 5.201 is the version that some parts in the Section 5.2 have been changed.

C:Section 5.202 is the version that some parts in the Section 5.201 have been changed.

When you order, Please locate specific parts information of your truck by the Applied Date of parts in each version.

概要
目录

将零件目录分组成几个易识别的部分，并把主要结构和总成放置在索引目录中。

零件明细表

Item 描述的是在插图上，您想要找的项目。**Part No.**是零件的一系列描述和它的订购号码。**Description** 是用文字的形式描述零件的号码。**Qty** 代表的是零件在叉车上使用的数量。**Applied Date** 表示的是零件适用的时间范围。**Remark** 是用来补充说明零件信息(例如车型、性能和特征等)。

怎么读取零件明目录

帮助 1:

Item 序号		Part No 代码	Description 名称		Qty 数量	Applied Date 适用日期	Remark 备注
A	1	02.XDC.3556	Battery	锂电池	1		24V/20AH
	1	02.XDC.3557	Battery	锂电池	1		24V/30AH
	1	02.XDC.3558	Battery	锂电池	1		24V/40AH
	2	03.0132	Screw M5×8	螺钉	5		
B	7	03.0245	Nut M12	螺母	2		
	8	03.04790	Spring	弹簧	2		
	9	01 30.01.6685	Wheel Frame	轮架	1	-210125	
	9	02 40.11.048	Wheel Frame	轮架	1	210125-	
C	6	02.KSCX.0001	Cover	前盖板	1		
	7	03.0243	Nut M10	螺母	2		Cancel/取消
	8	40.11.040	Roller	滚子	2		
	9	03.1088	Bolt M10×60	螺栓	2		
D	3	33.054.0001	Frame(550)	车架	1		
	3	33.054.0002	Frame(685)	车架	1		
	4	03.02393	Screw M6×16	螺钉	6		
	5	40.18.005	Shaft(550)	支撑轴	1		
	5	40.15.044	Shaft(685)	支撑轴	1		
E	6	33.036.0007	Push Rod Welding	推杆	2		For 1800Kg
	7	03.0691	BushingΦ19×Φ16×15	复合套	4		
	8	03.0305	Round PinΦ5×30	弹性圆柱销	10		

A: 序号 1 表示该零件有几个品种可供您的选择。

B: 序号 9 表示该零件有一个适用的时间范围。这是因为我们在不断地进行产品的升级。

C: 序号 7 表示该零件取消，订购时注意版本号。

D: 序号 3 表示车架焊接体有不同的规格，550 或 685 表示货叉的外宽。序号 5 表示配用于货叉外宽的零部件。

E: 序号 6 表示该零件配用载重 1800KG 车型。

1. 用时间记录

– **210125** : 截止到 2021 年 01 月 25 日

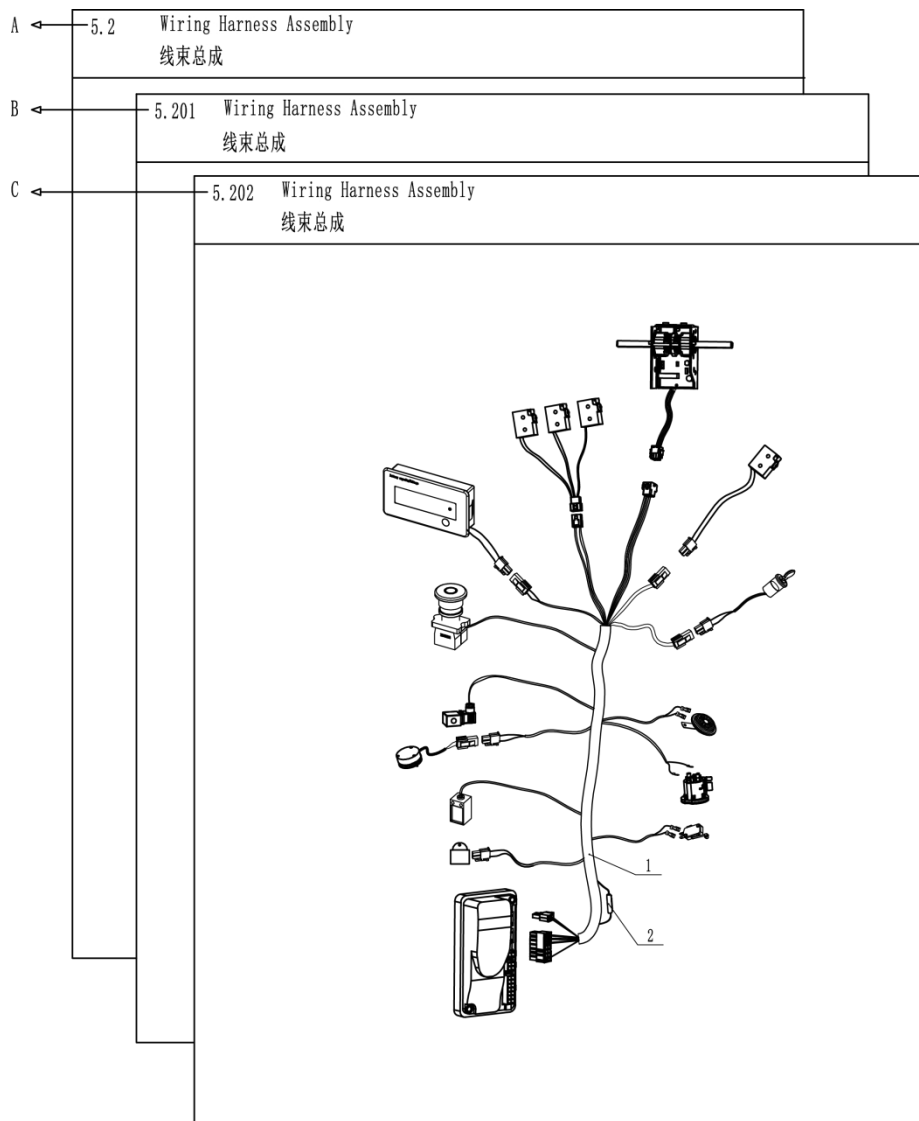
210125- : 起始于 2021 年 01 月 25 日

2. 用序列号记录

01 : 截止序列号 01

02 : 起始序列号 02

帮助 2:



A: 章节 5.2 表示原始版本;

B: 章节 5.201 表示在原始版本（章节 5.2）上零件有所变更；

C: 章节 5.202 表示在变更版本（章节 5.201）上零件有所变更。

当您订购零件时，请根据每个版本中零件的适用时间来判断您所选购车型的零件信息。

Index 目录

1. Frame System 车身系统

1.1 Frame System 车架系统.....	1
1.2 Connecting Rod Rocker Assembly(Double Wheel) 连杆摇臂组件(双轮).....	2
1.3 Connecting Rod Rocker Assembly(Single Wheel) 连杆摇臂组件(单轮).....	4
1.4 Cover Assembly 外罩总成.....	6

2. Driving System 驱动系统

2.1 Driving System 驱动系统.....	7
2.2 Driving System(For Caster Assembly) 驱动系统(带辅助轮).....	8
2.3 Driving Assembly 驱动总成.....	9
2.4 Caster Assembly 辅助轮组件.....	11

3. Operating System 操作系统

3.1 Operating Handle Assembly 操作手柄组件.....	12
3.2 Control Pod Assembly 手柄头总成.....	13

4. Hydraulic System 液压系统

4.1 Hydraulic System 液压系统.....	15
4.2 Power Unit Assembly 动力单元组件.....	16

4.3 Lifting Cylinder 起升油缸.....	17
5. Electric System 电气系统	
5.101 Electric System 电气系统.....	18
5.201 Wiring Harness Assembly 线束总成.....	20
5.301 Wiring Harness Assembly(Two-section style)线束总成(两节式)	21
5.401 Wiring Harness Assembly(Detachable)线束总成(可拆式)	22
5.5 Cable Assembly 电缆总成.....	23

修订记录

版 本	修订人	更改编号	修订事项
20231219 V01	朱阳敏		首次发布；
20240929 V02	李航远	20240929001	5. 101 电器总成，原控制器总成 70302000002 (1212P-2507) 更换为 70302000123 (1212C-2571)。 5. 201 线束总成，原控制线组件 20101030066 更换为 20101030175。 5. 301 线束总成，原控制线组件 20101030923 更换为 20101030186。 5. 401 线束总成，原控制线组件 20101030924 更换为 20101030187。

1.1		Frame System 车架系统								
				Item	Part No.	Description	Qty	Applied Date	Remark	
				序号	代码	名称	数量	适用日期	备注	
				1		30201060024	Screw M6×10 螺钉	2		03.0175
				2		30411060002	Lock washer Φ6 弹垫	2		03.0011
				3		30401060001	Flat Washer Φ6 平垫	2		03.00512
				4		20201000525	Lifting Plate 开关触板	1		40.13.005
				5		30211040001	Screw M4×6 螺钉	2		03.0222
				6		54101000047	Saddle Clamp 骑马卡	1		40.12.016
				7	01	20101010706	Frame (560) 车架	1	-220715	
				7	02	20101010117	Frame (560) 车架	1	220715-	33.028.0002
				7	01	20101010707	Frame (685) 车架	1	-220715	
				7	02	20101010116	Frame (685) 车架	1	220715-	33.028.0001
				7		20101010708	Frame (560) 车架(H=75mm)	1		
				7		20101010709	Frame (685) 车架(H=75mm)	1		
				7		20101010710	Frame (560) 车架(H=65mm)	1		
				7		20101010711	Frame (685) 车架(H=65mm)	1		
				8		90501000195	Pearl Cotton 珍珠棉	Req.		20.0156
9		20201000541	Cover 前面板	1		40.13.009				
10		30251080029	Screw M8×16 螺钉	4		03.0116				
11		54316000016	Cushion 防震垫	2		02.01.2127				
12		50101250010	Shaft (560) 支撑轴	1		40.11.079				
12		50101250006	Shaft (685) 支撑轴	1		40.11.035				
13		30421250002	Cir clips For Hole Φ25 孔用挡圈	2		03.0024				
14		30311100001	Nut 螺母 M10	2		03.0243				
14		51108000010	Roller 滚子	2		40.11.040				
15		51108000013	Roller 滚子(H=75mm)	2		40.11.040-2				
16		30101100005	Bolt 螺栓 M10×60	2		03.03820				

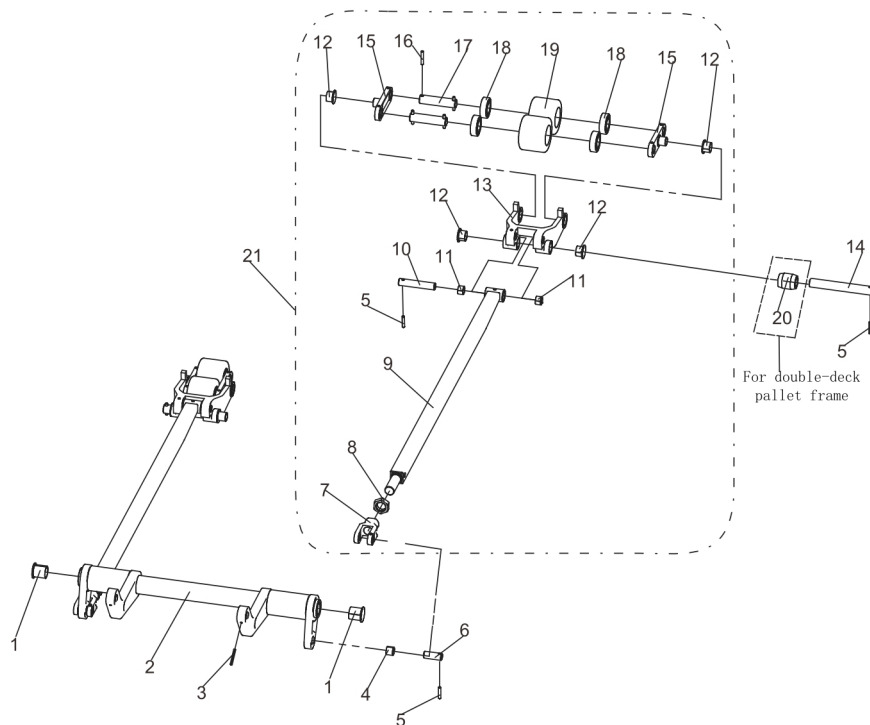
Note 1:Item 7 is the lowest height of forks(to the ground), 85mm,75mm,65mm are available.85mm is standard and 75mm,65mm are optional.

注释 1: 序号 7 为车架的货叉离地高度, 有 85mm,75mm,65mm。其中高度 75mm 和 65mm 为选配。

Note 2:Item 14.15.16 Used for double-sided pallet frame.

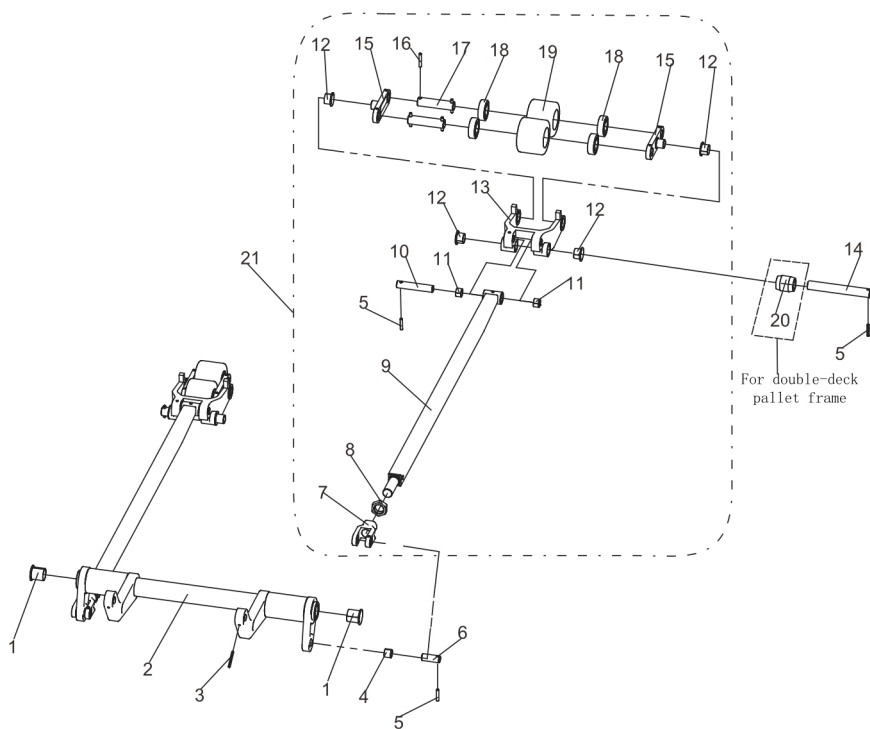
注释 2: 序号 14.15.16 用于双面托盘车架。

1.2 Connecting Rod Rocker Assembly(Double Wheel) 连杆摇臂组件(双轮)

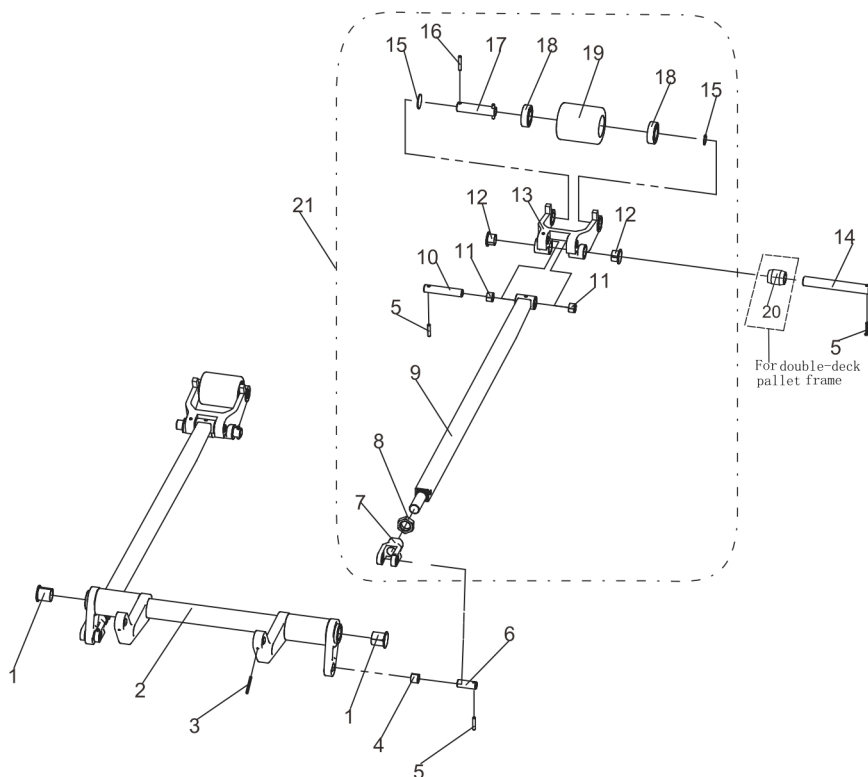


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	20301020752	Connecting Rod Assembly 连杆组件	2		
1	54001000003	Bushing $\Phi 28 \times \Phi 25 \times 27$ 带肩复合套	2		03.04422
2	55102000024	Ring Rod (560) 圆环棒	1		33.028.0004
2	55102000023	Ring Rod (685) 圆环棒	1		33.028.0003
2	55102000092	Ring Rod (560) 圆环棒 (H=75mm)	1		
2	55102000093	Ring Rod (685) 圆环棒 (H=75mm)	1		
2	55102000094	Ring Rod (560) 圆环棒 (H=65mm)	1		
2	55102000095	Ring Rod (685) 圆环棒 (H=65mm)	1		
3	30501040005	Round Pin $\Phi 4 \times 40$ 弹性圆柱销	2		03.03100
4	54002000017	Bushing $\Phi 19 \times \Phi 16 \times 15$ 复合套	2		03.0691
5	30501050008	Round Pin $\Phi 5 \times 30$ 弹性圆柱销	6		03.0305
6	50101160009	Shaft 小轴	2		40.14.052
7	55502000003	Push Rod Bracket 推杆叉	2		40.14.048
8	30301220002	Nut M22 $\times$ 1.5 螺母	2		03.0286
9	55501000047	Push Rod Welding 推杆	2		33.028.0007
9	55501000171	Push Rod Welding 推杆 (H=75mm)	2		
9	55501000172	Push Rod Welding 推杆 (H=65mm)	2		
10	50101160004	Shaft 推杆安装轴	2		40.11.038
11	54002000024	Bushing $\Phi 19 \times \Phi 16 \times 12$ 复合套	4		03.0451
12	54001000009	Bushing $\Phi 23 \times \Phi 20 \times 16.5$ 带肩复合套	8		03.0453
13	55103000004	Wheel Bracket 轮架 (双面托盘)	2		40.11.037
13	55103000010	Wheel Bracket 轮架	2		40.11.086
13	55103000011	Wheel Bracket 轮架 (H=75mm)	2		
13	55103000014	Wheel Bracket 轮架 (H=65mm)	2		
14	50101200004	Shaft 轮架安装轴 (双面托盘)	2		40.11.036
14	50101200055	Shaft 轮架安装轴	2		
15	51251000014	Bracket 连板	4		30.01.1290
16	30501050003	Round Pin $\Phi 5 \times 35$ 弹性圆柱销	8		03.0303

1.2 Connecting Rod Rocker Assembly(Double Wheel) 连杆摇臂组件(双轮)

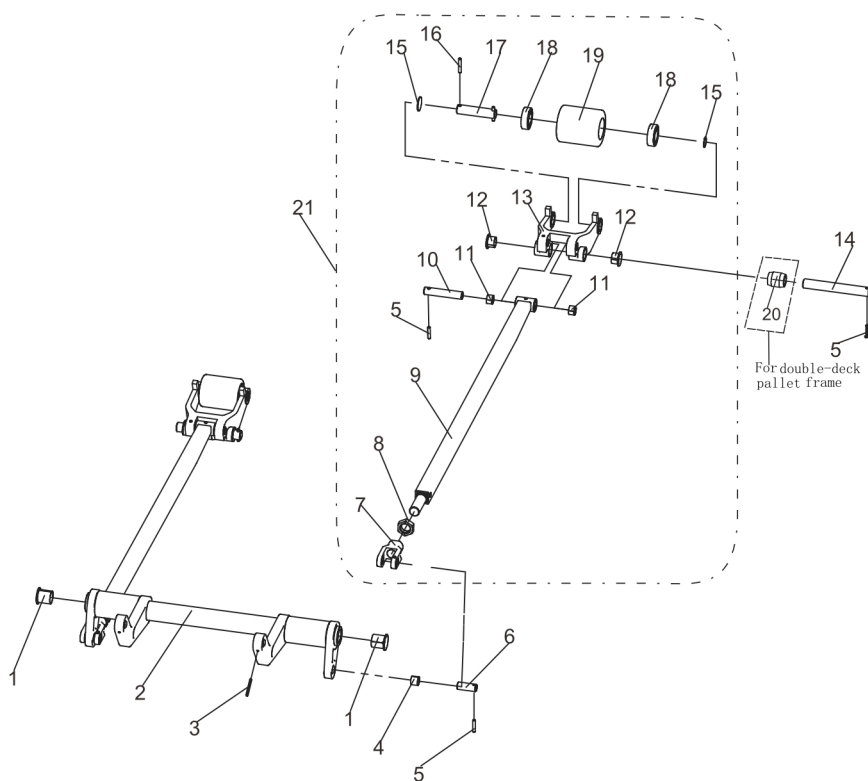
[illegible]

1.3 Connecting Rod Rocker Assembly(Single Wheel) 连杆摇臂组件(单轮)

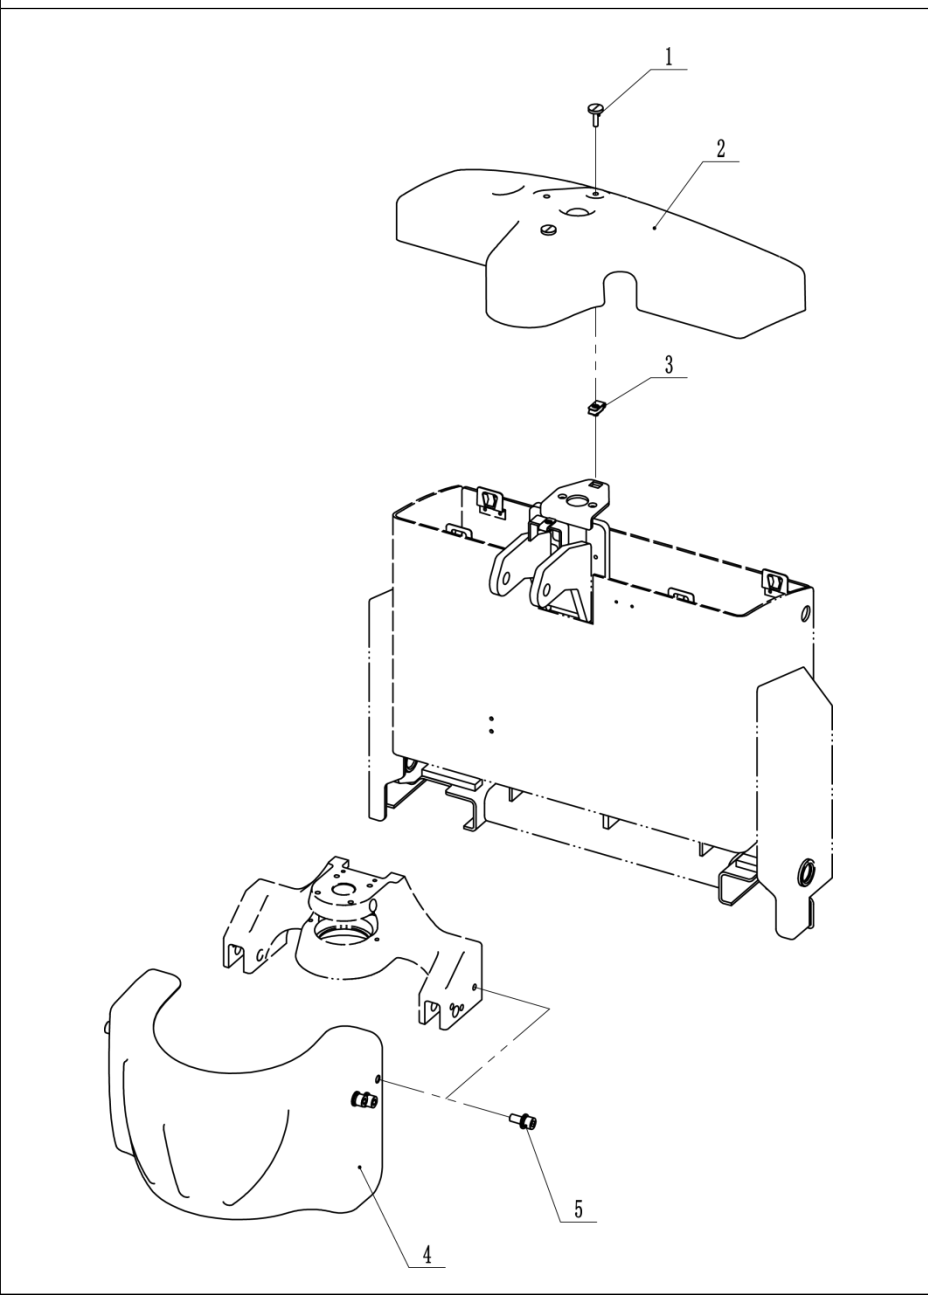


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	20301020753	Connecting Rod Assembly 连杆摇臂组件	2		
1	54001000003	Bushing $\Phi 28 \times \Phi 25 \times 27$ 带肩复合套	2		03.04422
2	55102000024	Ring Rod (560) 圆环棒	1		33.028.0004
2	55102000023	Ring Rod (685) 圆环棒	1		33.028.0003
2	55102000092	Ring Rod (560) 圆环棒 (H=75mm)	1		
2	55102000093	Ring Rod (685) 圆环棒 (H=75mm)	1		
2	55102000094	Ring Rod (560) 圆环棒 (H=65mm)	1		
2	55102000095	Ring Rod (685) 圆环棒 (H=65mm)	1		
3	30501040005	Round Pin $\Phi 4 \times 40$ 弹性圆柱销	2		03.03100
4	54002000017	Bushing $\Phi 19 \times \Phi 16 \times 15$ 复合套	2		03.0691
5	30501050008	Round Pin $\Phi 5 \times 30$ 弹性圆柱销	6		03.0305
6	50101160009	Shaft 小轴	2		40.14.052
7	55502000003	Push Rod Bracket 推杆叉	2		40.14.048
8	30301220002	Nut M22 $\times$ 1.5 螺母	2		03.0286
9	55501000047	Push Rod Welding 推杆	2		33.028.0007
9	55501000171	Push Rod Welding 推杆 (H=75mm)	2		
9	55501000172	Push Rod Welding 推杆 (H=65mm)	2		
10	50101160004	Shaft 推杆安装轴	2		40.11.038
11	54002000024	Bushing $\Phi 19 \times \Phi 16 \times 12$ 复合套	4		03.0451
12	54001000009	Bushing $\Phi 23 \times \Phi 20 \times 16.5$ 带肩复合套	4		03.0453
13	55103000004	Wheel Bracket 轮架	2		40.11.037
13	55103000006	Wheel Bracket 轮架 (H=75mm)	2		40.11.037-2
13	55103000014	Wheel Bracket 轮架 (H=65mm)	2		40.11.089
14	50101200004	Shaft 轮架安装轴 (双面托盘)	2		40.11.036
14	50101200055	Shaft 轮架安装轴	2		
15	50301205001	Washer 垫圈	Req.		30.01.3460
16	30501050003	Round Pin $\Phi 5 \times 35$ 弹性圆柱销	4		03.0303
17	50101200019	Shaft 承载轮销轴	2		30.01.3629

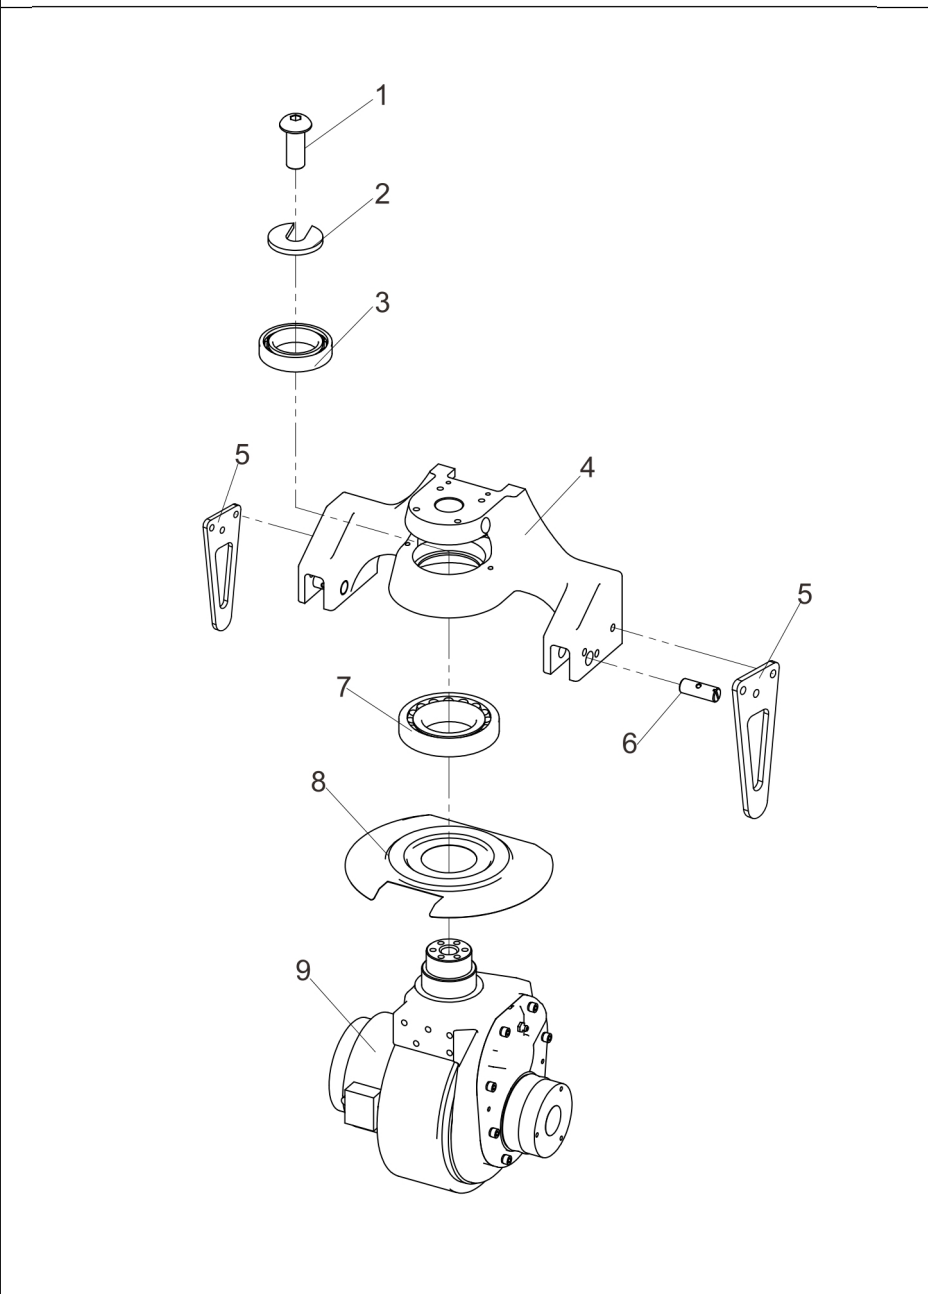
1.3 Connecting Rod Rocker Assembly(Single Wheel) 连杆摇臂组件(单轮)

[illegible]

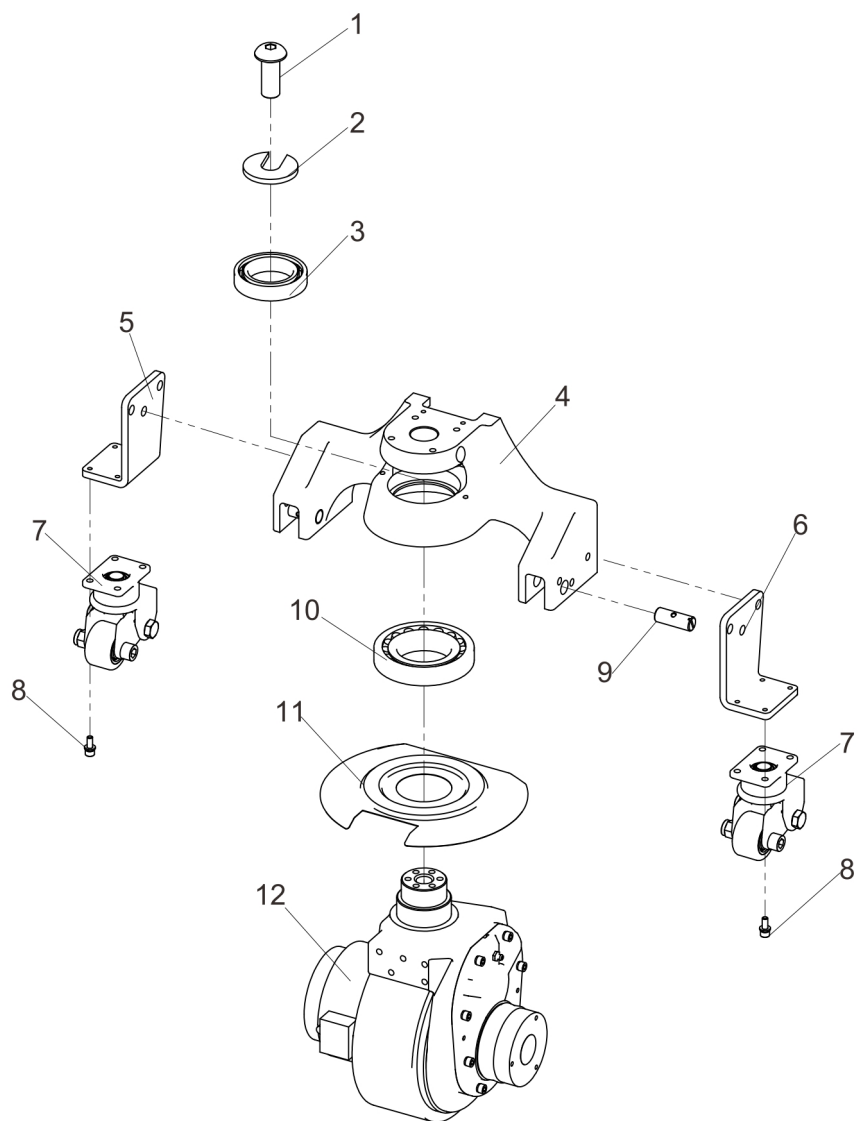
1.4	Cover Assembly 外罩总成
-----	------------------------

[illegible]

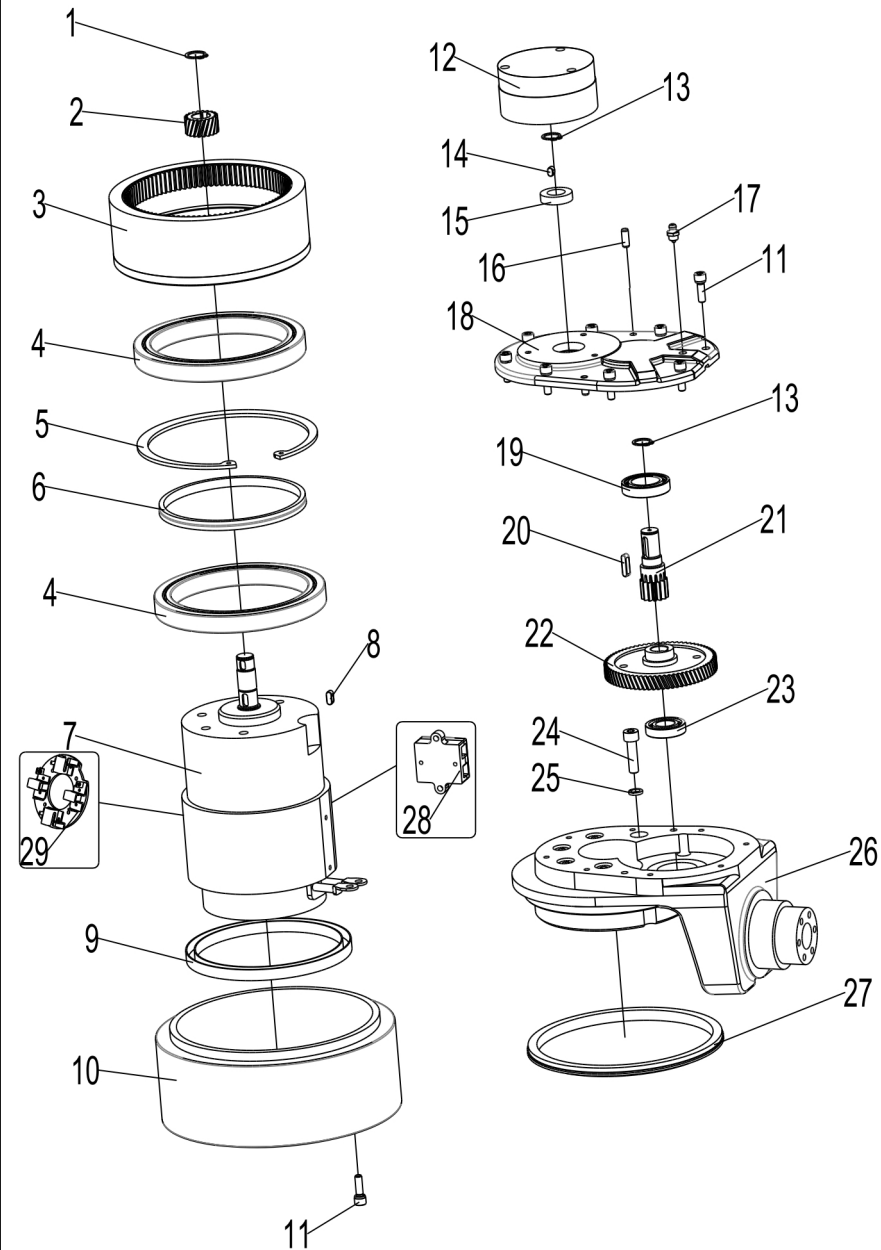
2.1	Driving System 驱动系统
-----	------------------------

[illegible]

2.2 Driving System(For Caster Assembly) 驱动系统(带辅助轮)

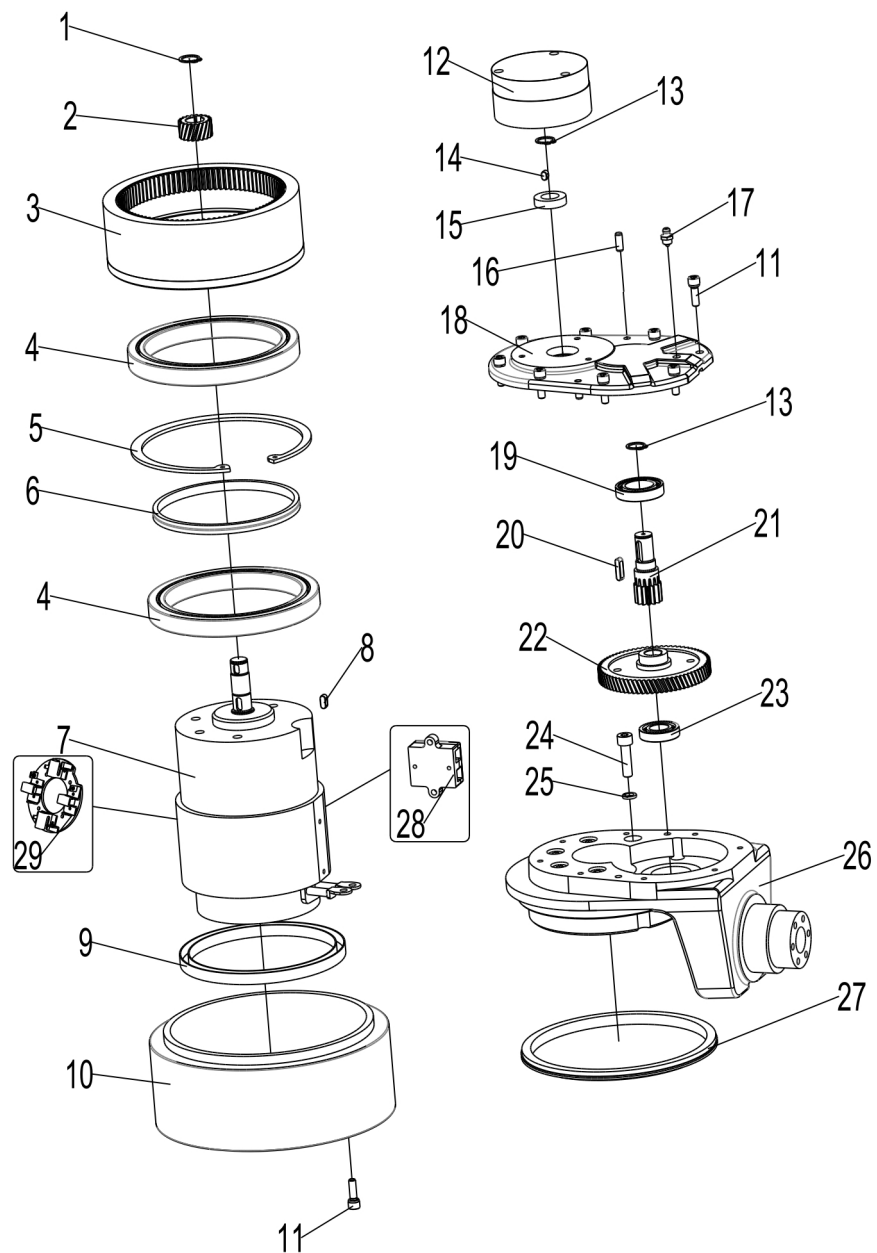
[illegible]

2.3 Driving Assembly 驱动总成

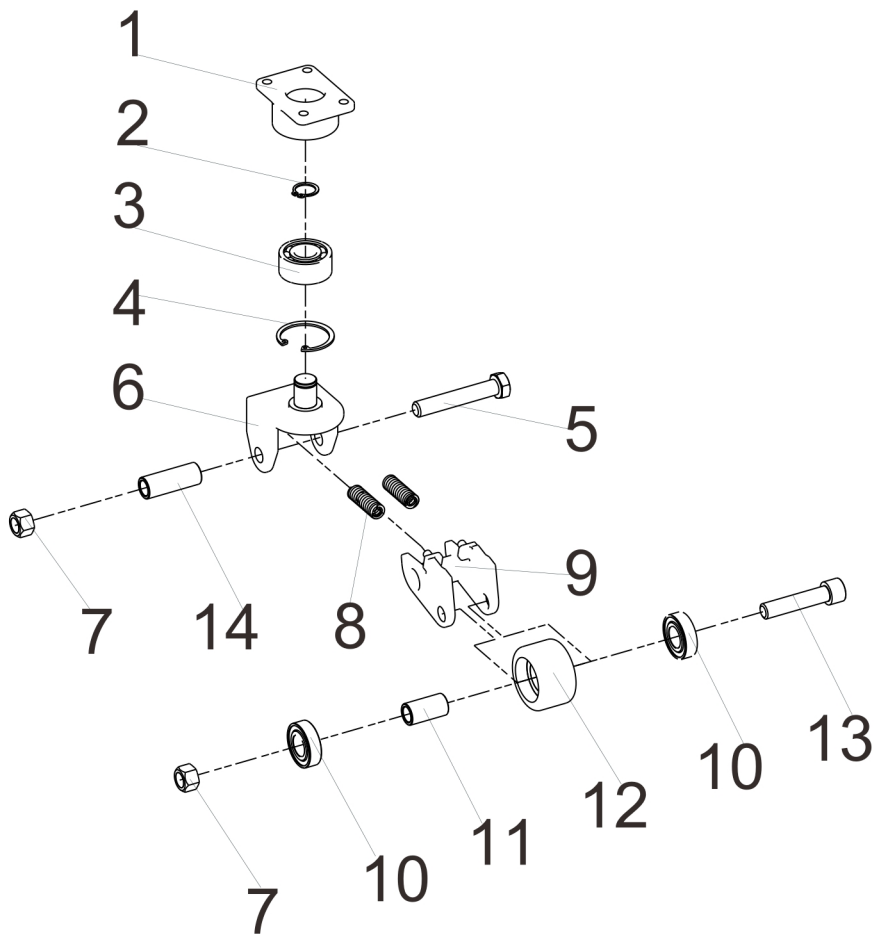


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	52101000020	Driving Assembly 驱动总成	1		
1	30421160001	Cir clip For Shaft Φ16 轴用挡圈	1		03.0062
2	52202120001	Driving Gear 主动斜齿轮	1		02.01.00702
3	52201150005	Internal Gear 内齿轮	1		02.01.00684
4	30701120003	Bearing 61824 轴承	2		02.01.006810
5	30421000002	Cir clip For Hole Φ150 孔用挡圈	1		03.0709
6	52105000040	Spacer 隔套	1		02.01.9294
7	70402000022	Motor 电机	1		02.DJ.00850
8	30601050003	Flat Key Pin 平键销	1		03.0716
9	30802128001	Oil Seal 油封	1		02.01.3703
10	51241000104	Driving Wheel 驱动轮	1		02.QDL.0272
11	30201060003	Screw M6×20 螺钉	16		03.1180
12	55704000001	Brake Assembly 刹车总成	1		02.01.3596
13	30421150001	Cir clip For Shaft Φ15 轴用挡圈	2		03.0061
14	30601050005	Flat Key Pin 平键销	1		03.0975
15	30802016001	Oil Seal 油封	1		03.0719
16	30501060003	Cylindrical Pin Φ6×16 圆柱销	2		03.0439
17	30821008001	Grease Fitting 黄油嘴	1		03.0506
18	52105000041	Gearbox Cover 箱盖	1		02.01.210707
19	30701025001	Bearing 61905 轴承	1		03.90.075
20	30601050004	Flat Key Pin 平键销	1		03.0717
21	52201150006	Transmission Gear 传动齿轮	1		02.01.00701
22	52202120004	Driven Gear 被动斜齿轮	1		02.01.00703
23	30701017001	Bearing 16003 轴承	1		03.90.074
24	30201080006	Screw M8×30 螺钉	5		03.01571
25	30411080002	Lock Washer Φ8 弹垫	5		03.0012
26	52105000038	Gearbox 齿轮箱	1		02.CLX.210715
27	30802155001	Big Oil Seal 大油封	1		02.01.3681

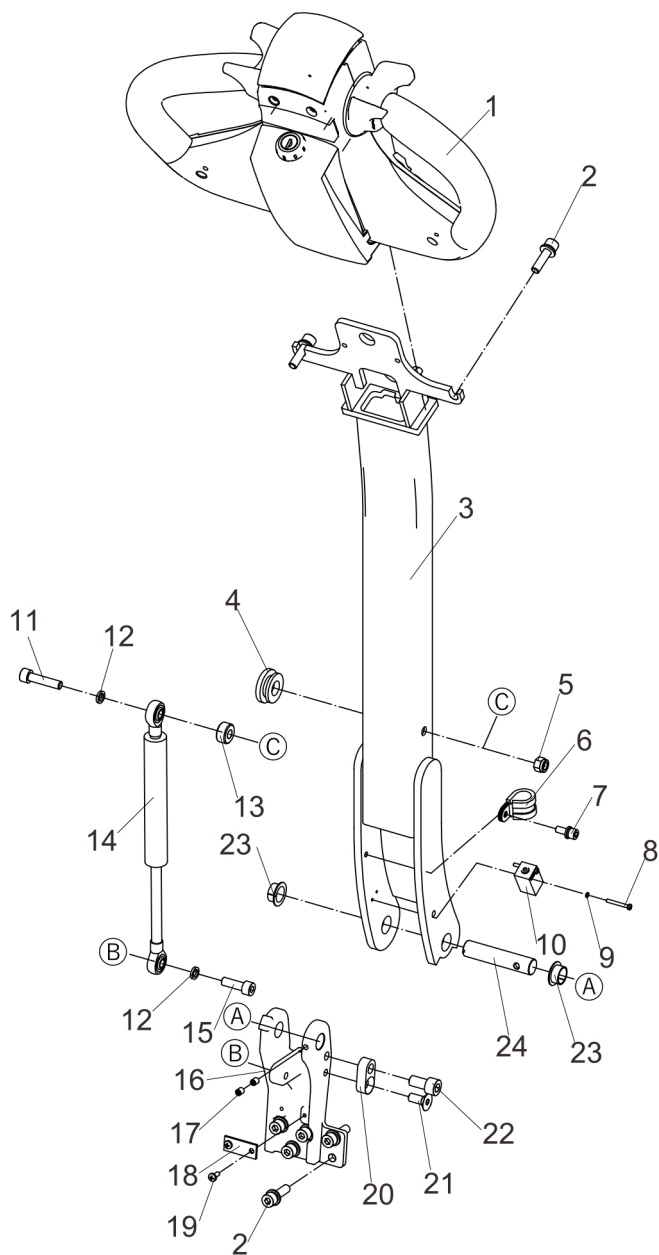
2.3 Driving Assembly 驱动总成

[illegible]

2.4	Caster Assembly 辅助轮组件
-----	--------------------------

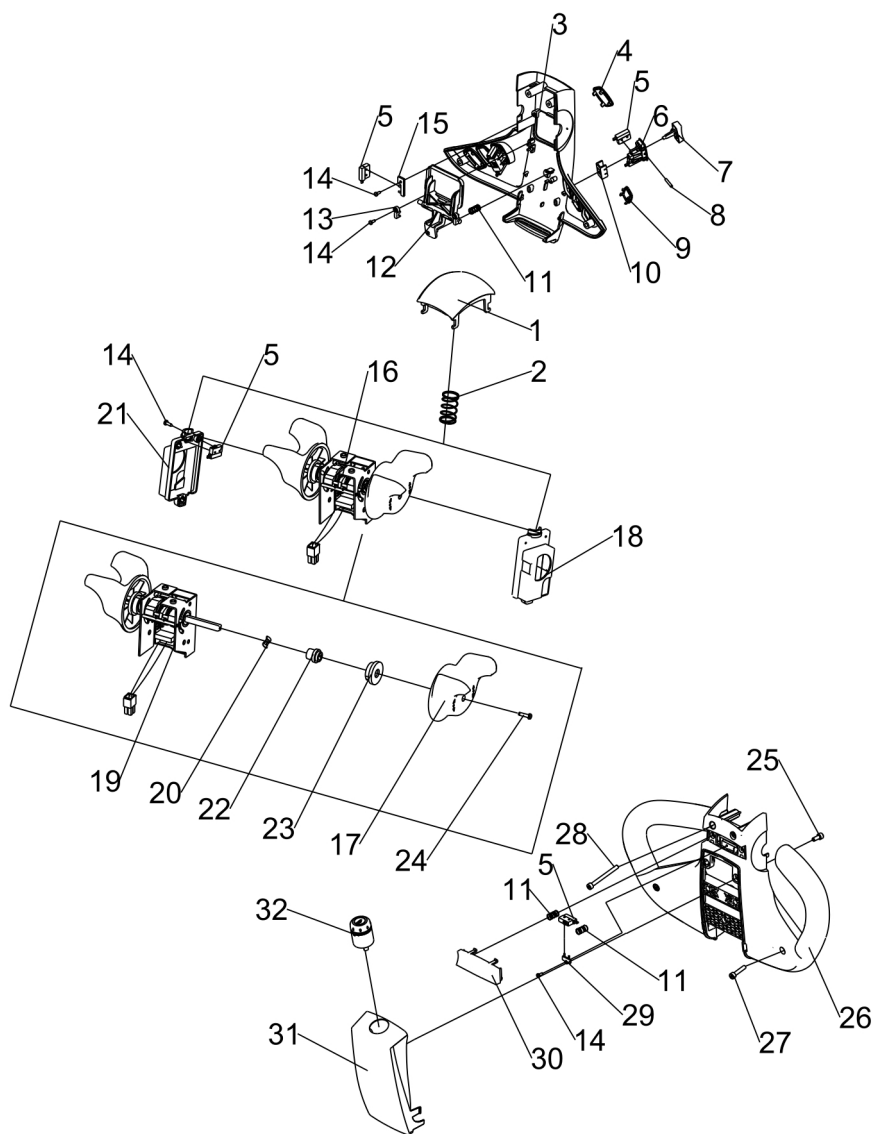
[illegible]

3.1 Operating Handle Assembly 操作手柄组件



Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	20301020640	Handle Assembly 手柄总成	1		
1	71501000008	Control Pod Assembly 手柄头总成(铅酸)	1		02. SB. 317518
1	71501000064	Control Pod Assembly 手柄头总成(锂电)	1		
2	30201080023	Screw M8×30 螺钉	7		03. 01573
3	55221000051	Control Handle 手柄杆	1		
4	54316000016	Cushion 防震垫	1		02. 01. 2127
5	30301080001	Nut M8 螺母	1		03. 0258
6	54101000037	R-hoop Φ16 R型箍	1		03. 04617
7	30201060037	Screw M6×16 螺钉	1		03. 0934
8	30201030004	Screw M3×25 螺钉	2		03. 01301
9	30411030001	Lock Washer Φ3 弹垫	2		03. 00091
10	70109000009	Proximity Switch 接近开关	1		19. 0364
11	30201080032	Screw M8×35 螺钉	1		03. 0158
12	30411080002	Lock Washer Φ8 弹垫	2		03. 0012
13	50301090003	Sleeve 隔套	1		40. 11. 066
14	50407000014	Gas Spring 气弹簧	1		02. QTH. 2217
15	30201080005	Screw M8×25 螺钉	1		03. 01560
16	20201000910	Bracket 关节座	1	-240225	40. 11. 063
16	54202000024	Bracket 关节座	1	240225-	
17	30221060006	Screw M6×8 螺钉	2		03. 0270
18	20201000295	Bracket 压线板	1	-240225	40. 11. 064
18	54101000040	R-hoop Φ14 R型箍	1	240225-	
19	30211040013	Screw M4×10 螺钉	2		03. 0230
20	20201000134	Proximity Block 限位块	1	-240225	40. 12. 031
21	30251080028	Screw M8×20 螺钉	1	-240225	03. 0092
22	30201100022	Screw M10×20 螺钉	1	-240225	03. 0163
23	54001000008	BushingΦ18×Φ16×10 带肩复合套	2		03. 0452
24	50101160007	Shaft 关节轴	1		40. 11. 065

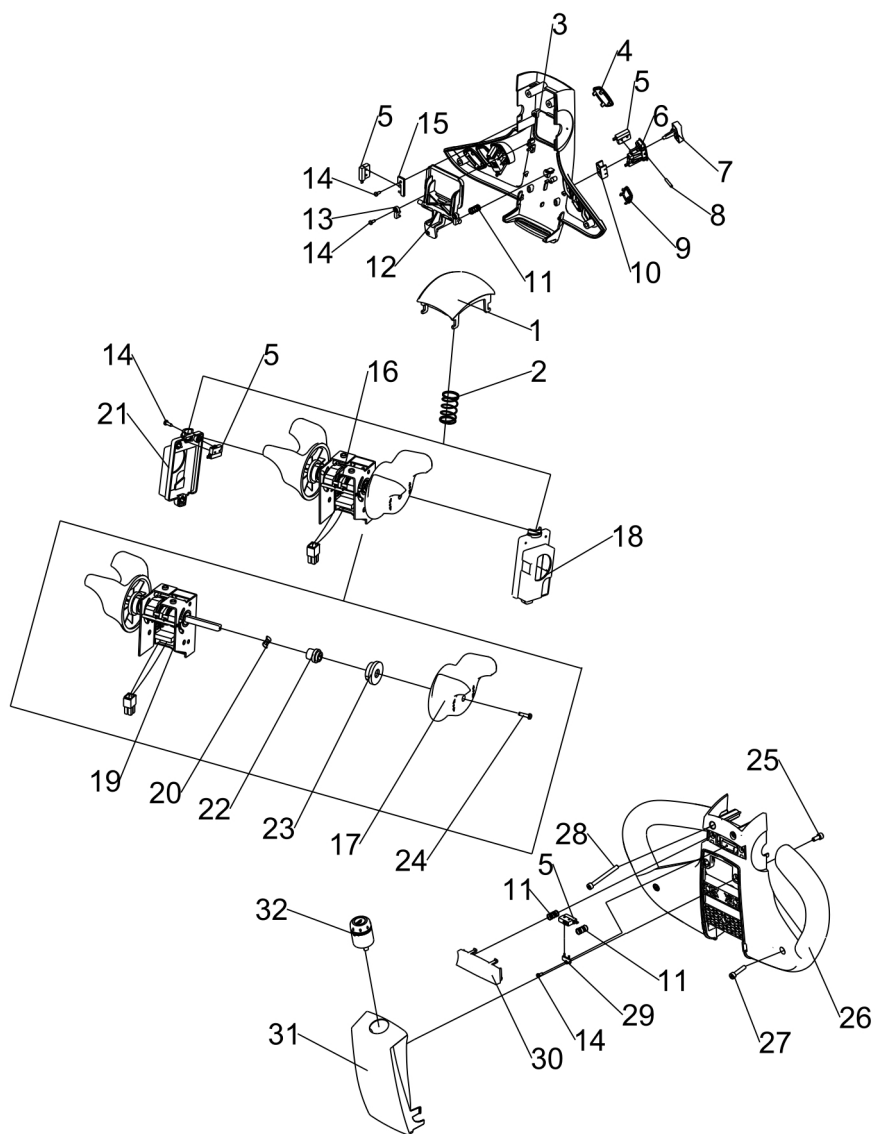
3.2 Control Pod Assembly 手柄头总成



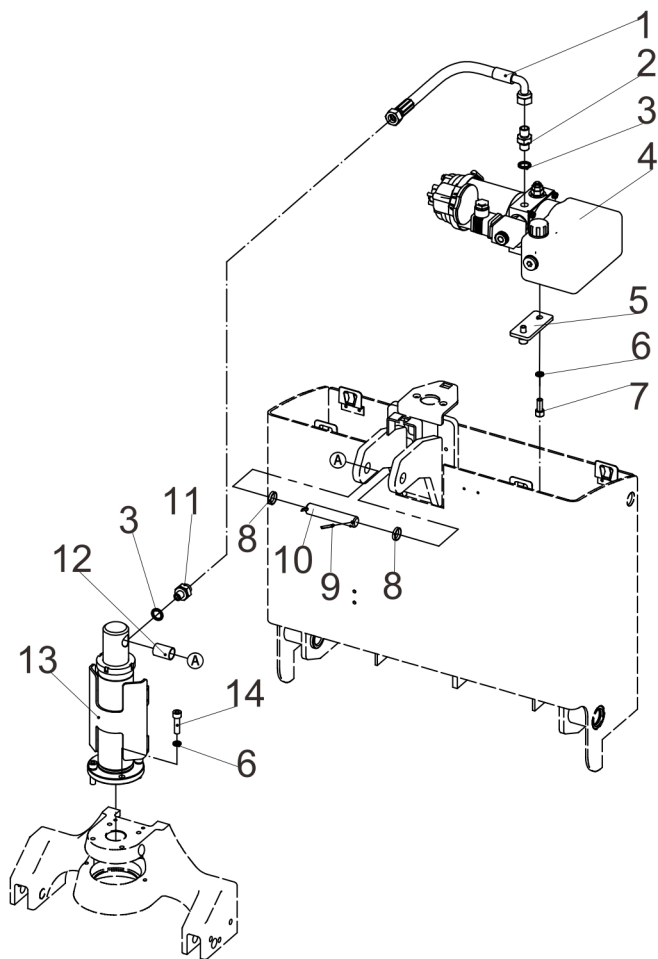
Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	71501000008	Control Pod Assembly 手柄头总成	1		
1	71511000015	Belly Switch 肚皮开关	1		16.0038
2	71511000016	Spring 弹簧	1		03.0725
3	71511000001	Upper Cover 上盖	1		02.01.31770
4	70601000017	Electricity Meter (Lead Acid Battery) 电量表 (铅酸电池)	1		
4	70601000018	Electricity Meter (Lithium Battery) 电量表 (锂电池)	1		
5	70103000006	Micro Switch 微动开关	7		
6	71511000007	Lift Button Base 升降按钮底座	2		02.01.317718
7	71511000004	Lift Button 升降按钮	2		02.01.317721
8	71511000017	Cylindrical Pin $\Phi 3 \times 17$ 圆柱销	2		03.0760
9	71511000014	Button Plug 按钮堵头	3		02.01.317725
10	73109000011	Fixing Sleeve 固定套	2		30.01.3427
11	71511000018	Spring 弹簧	3		
12	71511000005	Horn Button 喇叭按钮	1		02.01.317723
13	71511000345	Button Clip 按钮卡子	2		02.01.317724
14	30231030002	Screw 螺钉	5		02.SB.PJ.0012
15	71511000107	Install The Card 安装卡	1		02.SB.PJ.0006
16	70132000105	Accelerator Assembly 加速器总成	1		02.01.2155
17	71511000115	Knob 旋钮	2		02.SB.PJ.0027
18	71511000013	Bracket Right 支架右	1		30.01.3424
19	70132000001	Accelerator 加速器	1		02.01.2151
20	30431080001	Wave Washers 波形垫圈	2		03.0735
21	71511000012	Bracket Left 支架左	1		30.01.3423
22	71511000112	Shaft Sleeve 轴外套	2		30.01.3426
23	71511000113	Shaft Jacket 轴外套	2		02.SB.PJ.0025
24	30211030008	Screw M3 $\times$ 12 螺钉	2		

3.2 Control Pod Assembly

手柄头总成

[illegible]

4.1	Hydraulic System 液压系统
-----	--------------------------

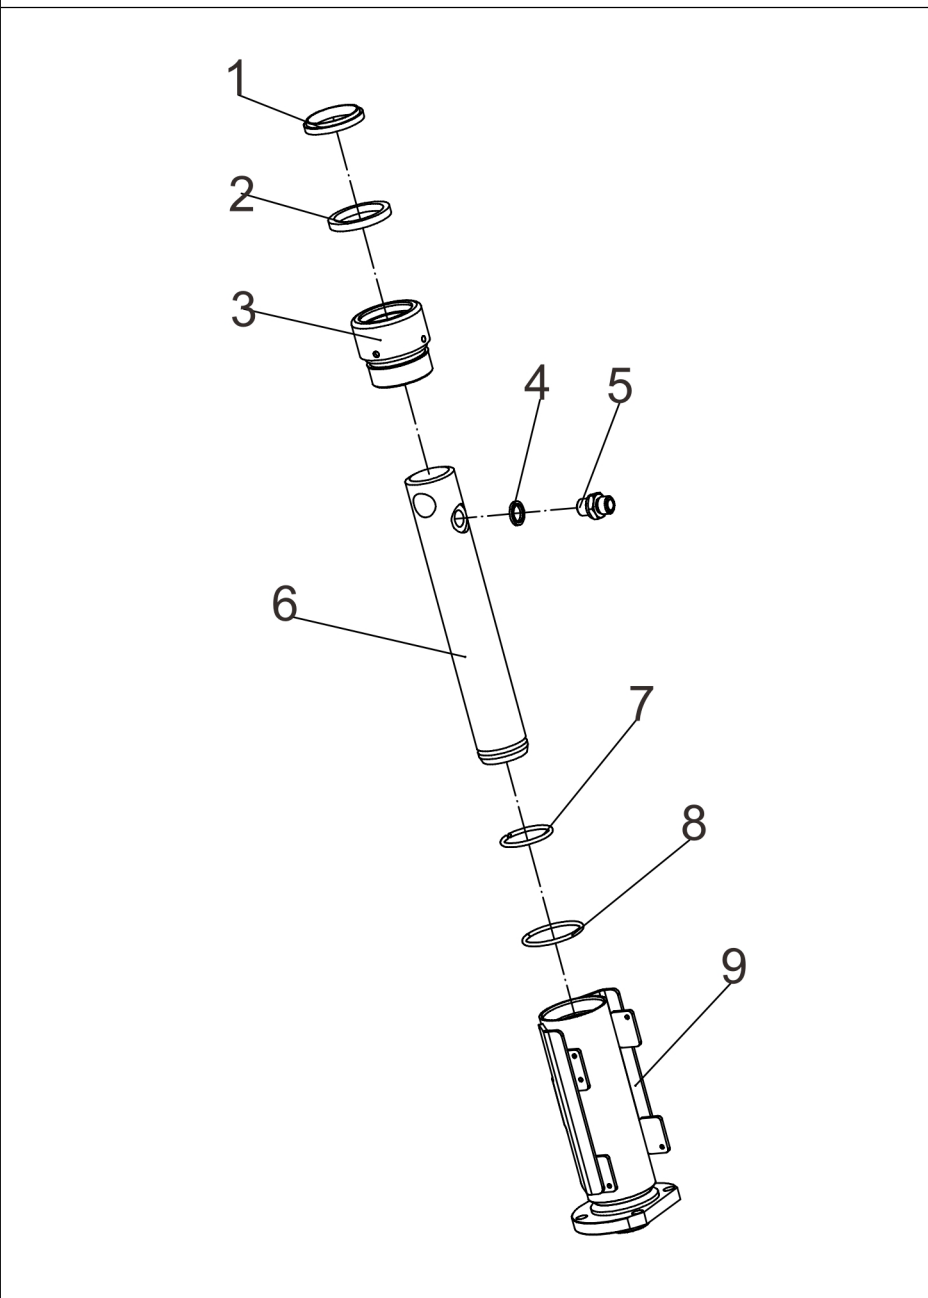
[illegible]

4.2

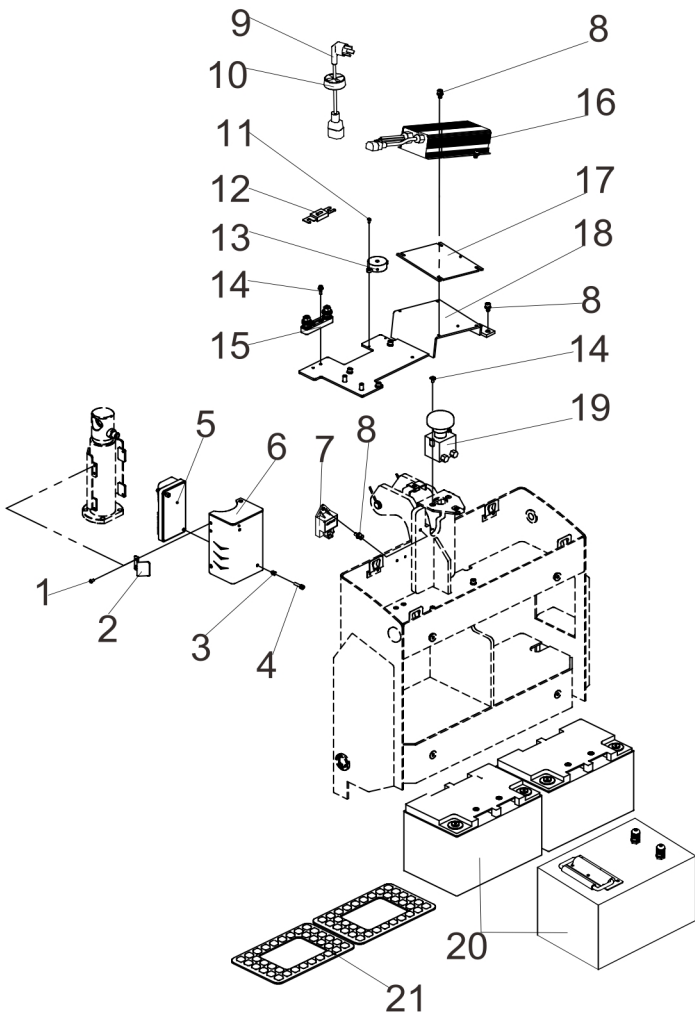
Power Unit Assembly
动力单元组件

Item		Part No.	Description	Qty	Applied Date	Remark
序号		代码	名称	数量	适用日期	备注
A		40401024082	Power Unit Assembly 动力单元组件	1		02.DLDY. 3473
1		20101030752	Cable 接触器连接线	1		
2		70402000111	Motor 提升电机	1		02.DJ. 33635
3		54312000001	Cover 烟斗护套	2		02.01. 2231
4		70303000006	Relay Starter 直流接触器	1		02.01. 2207
5		54012000012	Clamp 抱箍	2		03. 1045
6		40411000027	Coupling 联轴器	1		02.01. 9308
7		40407000006	Adapter 中心块	1		02.01. 9309
8		40405000038	Check Valve 单向阀	1		02.01. 9028
9		71531000003	Valve Element 电磁阀	1		02.01. 9150
10		71531000031	Electromagnet 电磁阀线圈	1		02.01. 9366
11		40201140004	Connect 直接头	1		02. YYL. 3715
12		40405000056	Relief Valve 溢流阀	1		02.01. 9151
13		40405000006	Pressure Valve 压力补偿阀	1		02.01. 9385
14		30801067001	O-ring 0型圈	1		02.01. 9317
15		30801017001	O-ring 0型圈	1		02.01. 9157
16		40402000006	Gear Pumps 齿轮泵	1		02.01. 9059
17		30201050020	Screw M5×65 螺钉	2		03. 0967
18		30411050001	Gas Spring Φ5 弹垫	6		03. 00132
19		40411000060	Right Angle Joints 直角管	1		02.01. 0340
20		40412000005	Filter 滤网	1		02.01. 9310
21		40410000010	Cover 油箱盖	1		02.01. 30423
22		40409000002	Tank 油箱	1		02.01. 9311
23		30401050001	Flat Washer Φ5 平垫	4		03. 00511
24		30101050010	Bolt M5×12 螺栓	4		03. 0911

4.3	Lifting Cylinder 起升油缸
-----	--------------------------

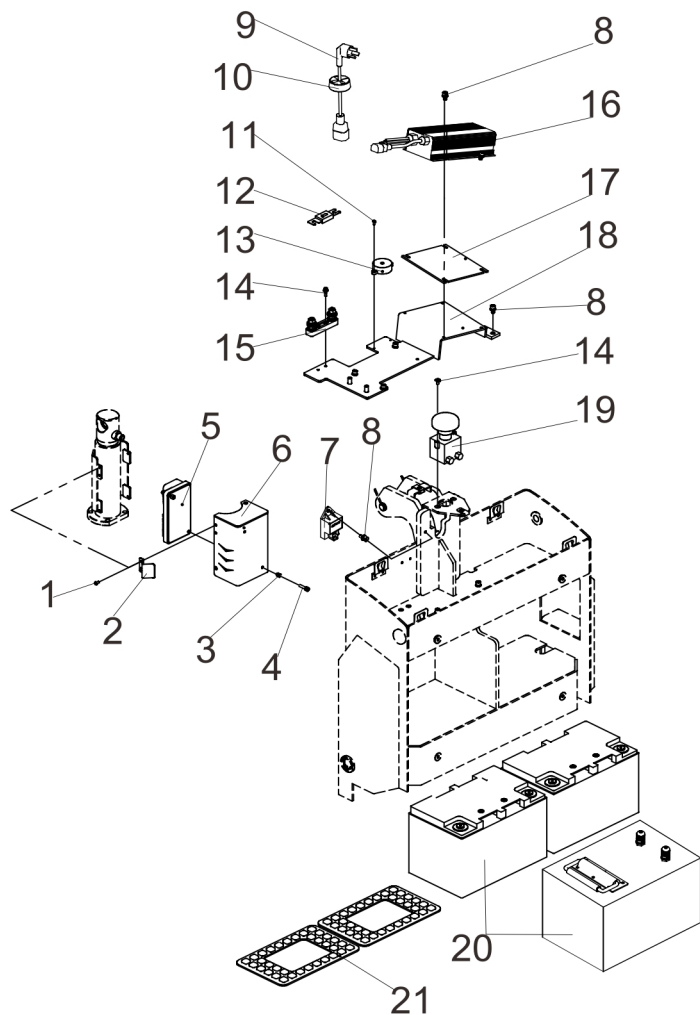
[illegible]

5.101 Electrical System
电气系统

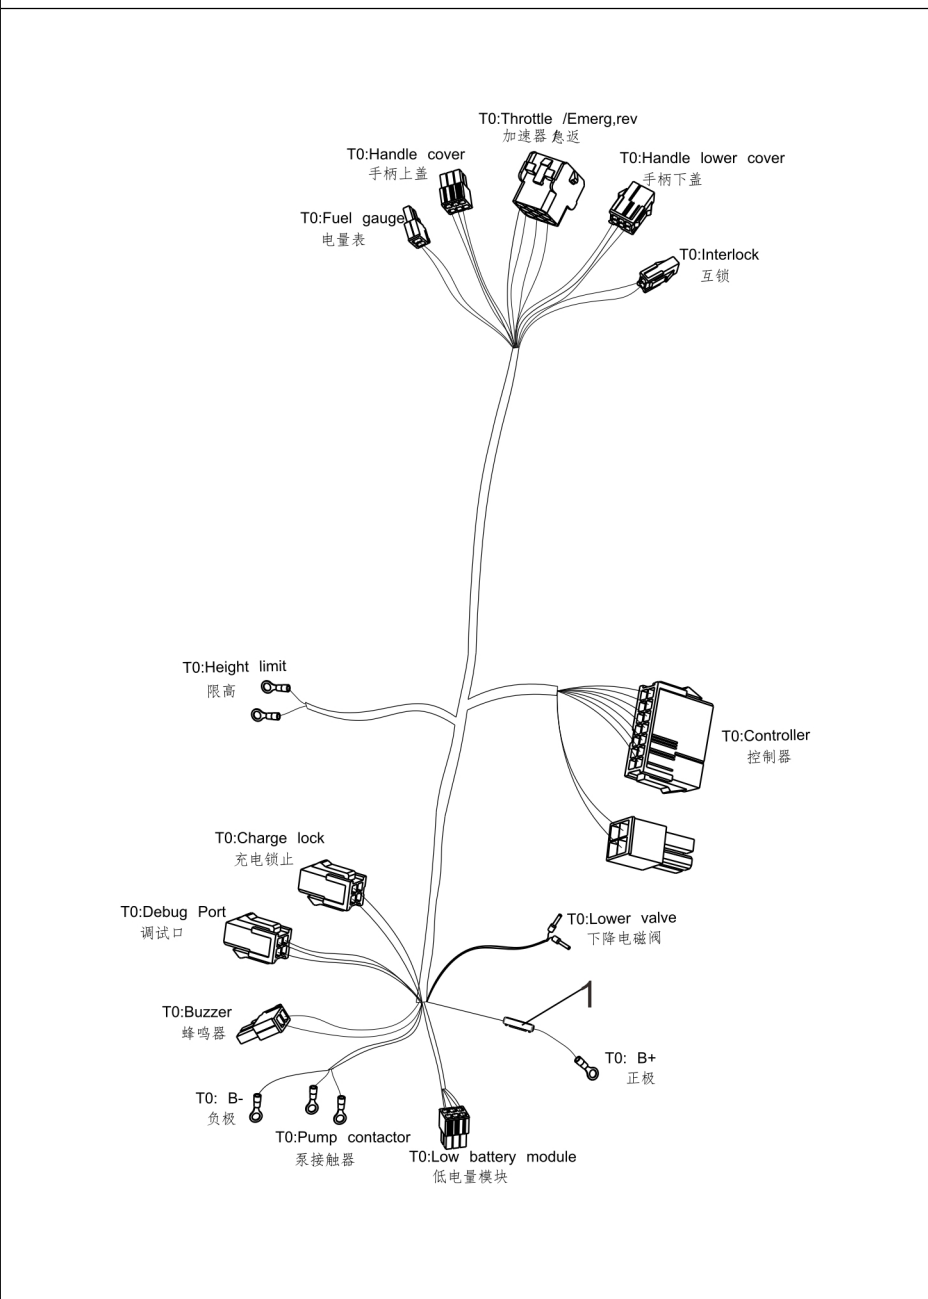


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
1	30251040003	Screw M4×8 螺钉	2		03.01174
2	54101000048	Line Card 线卡	1		40.12.025
3	30301050002	Nut M5 螺母	2		03.0255
4	30201050012	Screw M5×30 螺钉	2		03.01330
5	01 70302000002	Controller 控制器 1212P	1	-20240929	02.KZQ.2167
5	02 70302000123	Controller 控制器 1212C	1	20240929-	
5	70302000003	Controller 控制器 1212C	1		02.KZQ.2377
5	70302000000	Controller 控制器 D2	1		02.KZQ.2376
6	20101010680	Cover 电控安装罩	1		
7	70307000011	Relay 起升锁止继电器	1		02.01.2216
8	30201060038	Screw M6×12 螺钉	8		03.1231
9	70422000020	Charger Cable CHINA 充电线国标	1		
9	70422000003	Charger Cable END 充电线英标	1		
9	70422000001	Charger Cable USA 充电线美标	1		
9	70422000019	Charger Cable EUROPE 充电线欧标	1		16.0324
9	70422000008	Charger Cable AUS 充电线澳标	1		16.0366
10	54331000004	Line Seat 线座	1		02.01.312415
11	30211030002	Screw M3×8 螺钉	2		03.02151
12	70701000002	fuse 保险丝	1		19.03450
13	70223000001	Buzzer 蜂鸣器	1		19.03620
14	30211050003	Screw M5×12 螺钉	4		03.0133
15	70711000001	Fuse Base 熔断器座	1		02.01.3057
16	70411010013	Charger 充电器	1		02.CDQ.330513
16	70412010001	Charger 锂电池充电器	1		02.CDQ.3505
17	54316000009	Cushion 减震垫	1		30.09.0004
18	20101010063	Electrical Boards 电器安装板	1		33.015.0012
19	70104000005	Switch 急停开关	1		02.01.2170
20	70502120010	Battery 电池	2		02.XDC.3460

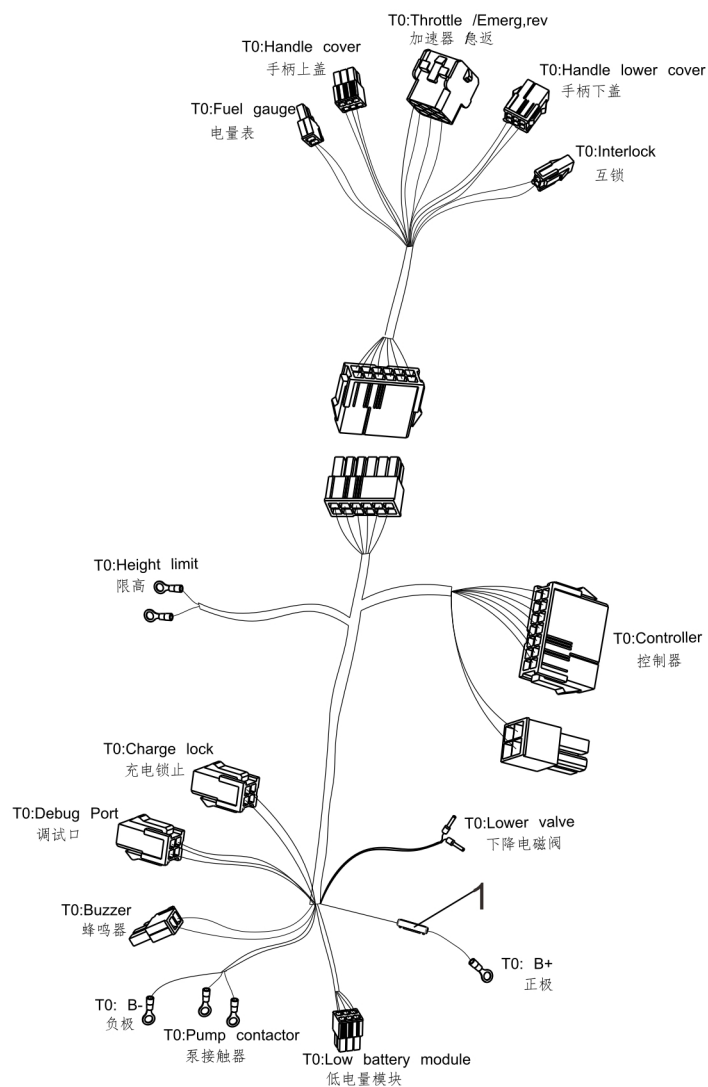
5.101	Electrical System 电气系统
-------	---------------------------

[illegible]

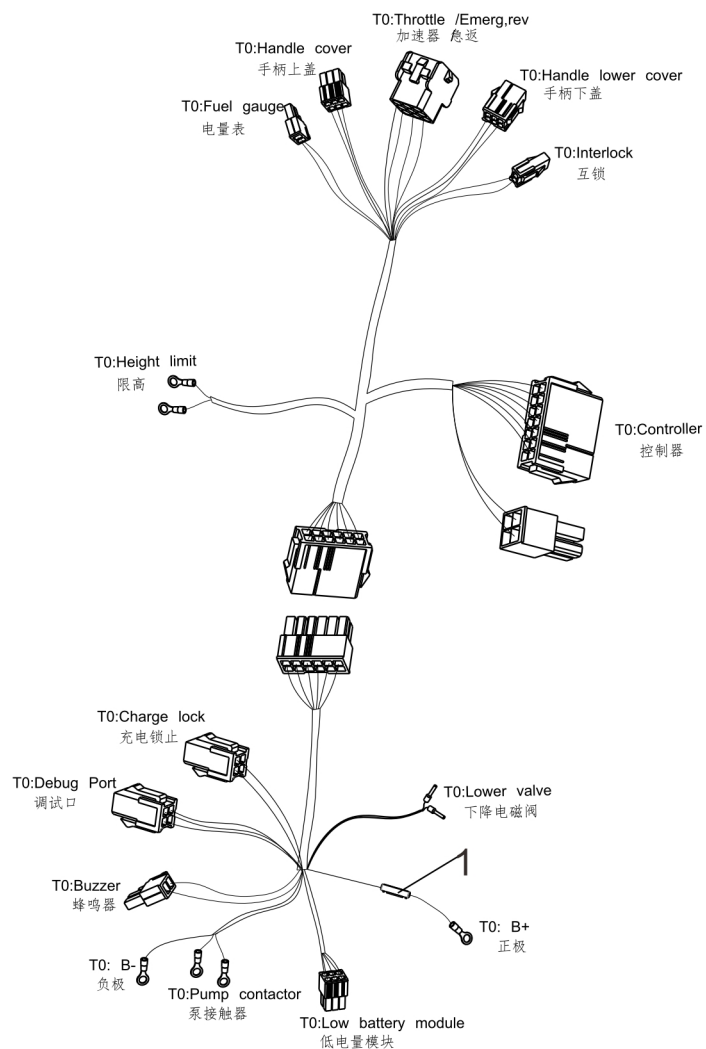
5.201	Wiring Harness Assembly 线束总成
-------	---------------------------------

[illegible]

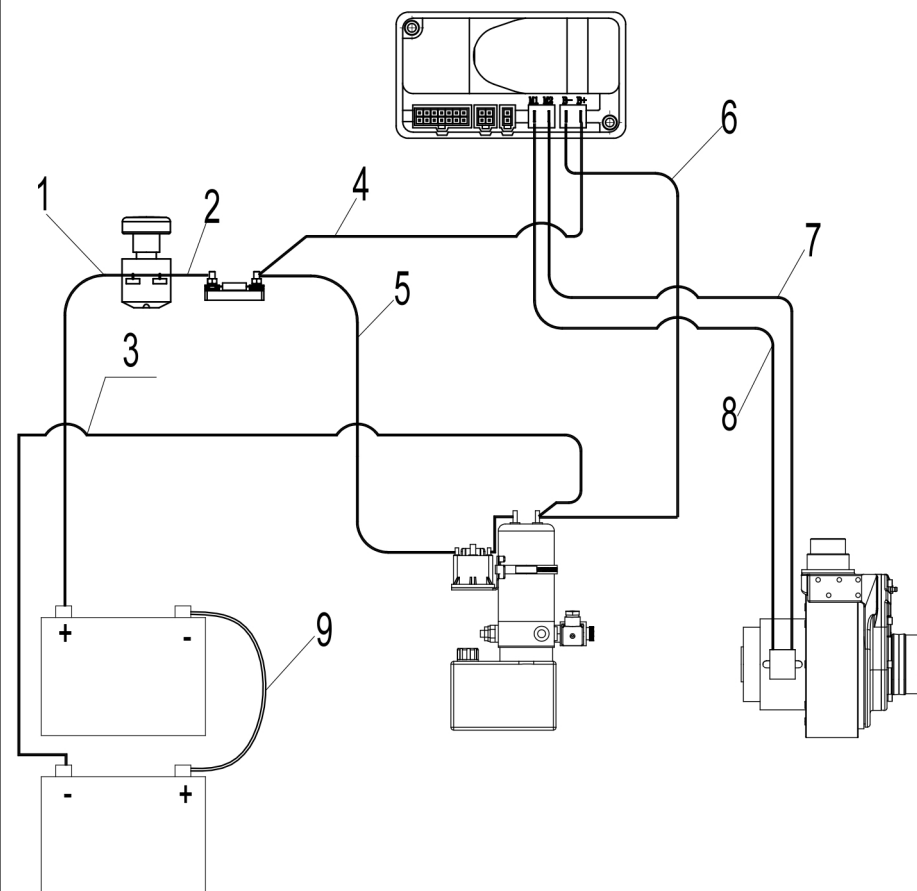
5.301 Wiring Harness Assembly (Two-section style) 线束总成(两节式)

[illegible]

5.401	Wiring Harness Assembly (Detachable) 线束总成 (可拆式)
-------	--

[illegible]

5.5	Cable Assembly 电缆总成
-----	------------------------

[illegible]

零件目录最终由制造商保留解释权！

The power of interpretation of this part catalogue will be preserved by the manufacturer eventually!