


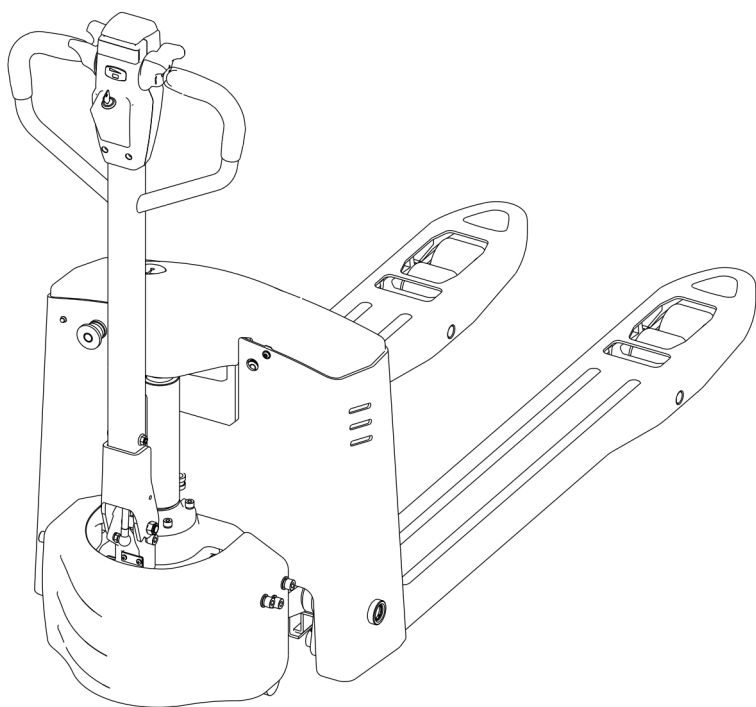

SL15S6

Electric pallet truck

电动托盘搬运车

Parts list 零件目录

20240620 V02

PARTS ORDERING INSTRUCTIONS

HOW TO ORDER

When you order, supply the part number, quantity, model and serial numbers of your machine. Supplying this information will assure prompt, efficient handing of your order.

Since your dealer carries many parts in stock and maintains up-to-date prices on all parts, he will be able to process your order immediately. If, for some reason, the part is not in stock, he will order it from the factory. In either event, he maintains a current file of service manuals, which give all available parts ordering or technical information.

WHERE TO ORDER

Always order parts from the dealer who sold you your truck. If it is necessary for the dealer to order parts from the factory, he is able to get prompt service for you. Parts are shipped in accordance with shipping instructions given on the order.

INSTRUCTIONS FOR RETURNING PARTS

Under NO CIRCUMSTANCES will parts be accepted at the factory for credit without prior approval. We cannot accept responsibility for parts returned without authorization.

If you have some parts which must be returned, contact your dealer. If he believes parts should be returned, he will arrange for authorization to return the parts.

CHANGES

When changes are made to the machine, revised pages for this manual will be issued. These pages must be inserted in your parts manual as soon as they are received.

Failure to keep your parts manuals up to date will result in confusion and may cause you to order wrong parts.

零件订购说明

如何订购

当您订购的时候，您需要提供叉车零件的编号，数量，型号和序列号。提供这些信息能够保证您的订购更加的高效。

因为您的经销商有很多零件的存货，而且需要保持所有零件的价格是最新的，所以他会尽快地处理您的订购需求。假如因为某些原因，存货中没有这个零件，那么他会从公司订货。无论怎样的情况，他手里都会有一份服务手册文件，它能提供所有可用的零件的订购信息或者技术信息。

订购地点

当您需要订购零件时，请到销售给您叉车的经销商那里订购。如果经销商有必要从公司订购零件，他能为您提供快捷的服务。根据您的订购信息，零件和它对应的操作说明会一起装好。

零件的退还说明

一般情况下，因为信用的关系，退还的零件没有事先的同意，是不会被公司认可的。我们不会对没有经过授权但退还过来的零件负责。

如果您有一些零件一定要退还，请联系您的经销商。若经销商确认零件可以退还，则其会安排授权要退还的零件。

技术修改

当叉车技术有修改时，这本手册的修正页会重新发行。当您拿到这些修正页时，您一定要立即把它们插入到您的零件手册中。若没有及时的更新您的零件手册，则可能会导致您订购、维护等方面的错误。

GENERAL INFORMATION

INDEX

This parts manual is arranged for easy identification of parts .The index at the front of the catalog gives location of major groups and assemblies.

PART LIST

The Item, describes the item on the Figure you are looking at. The Part No. is a numerical description of the item and the part ordering number. The Description is a description of the part number in alphabetical form. The Qty is the quantity used on the machine. The Applied Date is a description when the part is applicable.The Remark is the explanation of the part for a supplement such as the model the capability, the characteristic etc.

HOW TO READ PARTS MANUAL

HELP 1:

Item	Part No	Description	Qty	Applied Date	Remark
------	---------	-------------	-----	--------------	--------

A →

1		02.XDC.3556	Battery	1		24V/20AH
1		02.XDC.3557	Battery	1		24V/30AH
1		02.XDC.3558	Battery	1		24V/40AH
2		03.0132	Screw M5×8	5		

B →

7		03.0245	Nut M12	2		
8		03.04790	Spring	2		
9	01	30.01.6685	Wheel Frame	1	-210125	
9	02	40.11.048	Wheel Frame	1	210125-	

C →

6		02.KSCX.0001	Cover	1		
7		03.0243	Nut M10	2		Cancel
8		40.11.040	Roller	2		
9		03.1088	Bolt M10×60	2		

D →

3		33.054.0001	Frame (550)	1		
3		33.054.0002	Frame (685)	1		
4		03.02393	Screw M6×16	6		
5		40.18.005	Shaft (550)	1		
5		40.15.044	Shaft (685)	1		

E →

6		33.036.0007	Push Rod Welding	2		For 1800Kg
7		03.0691	Bushing Φ19×Φ16×15	4		
8		03.0305	Round Pin Φ5×30	10		

A:The part of Index 1 is Optional.

B:The part of Index 9 has an Applicability, because it's our policy to constantly improve our products.

C:The part of Index 7 indicates that the part is cancelled. Note the version number when ordering.

D:The part of Index 3 indicates that the frame welds have different specifications, 550 or 685 indicates the outer width of the forks. Index 5 indicates the parts used for the outer width of the forks.

E:The part of Index 6 indicates that the part is used for model with load capacity of 1800KG.

1. Record by time

– 210125 : Ending on January 25, 2021.


210125- : Beginning on January 25, 2021.

2. Record by serial number

01 : Ending at 01

02 : Starting at 02

HELP 2:

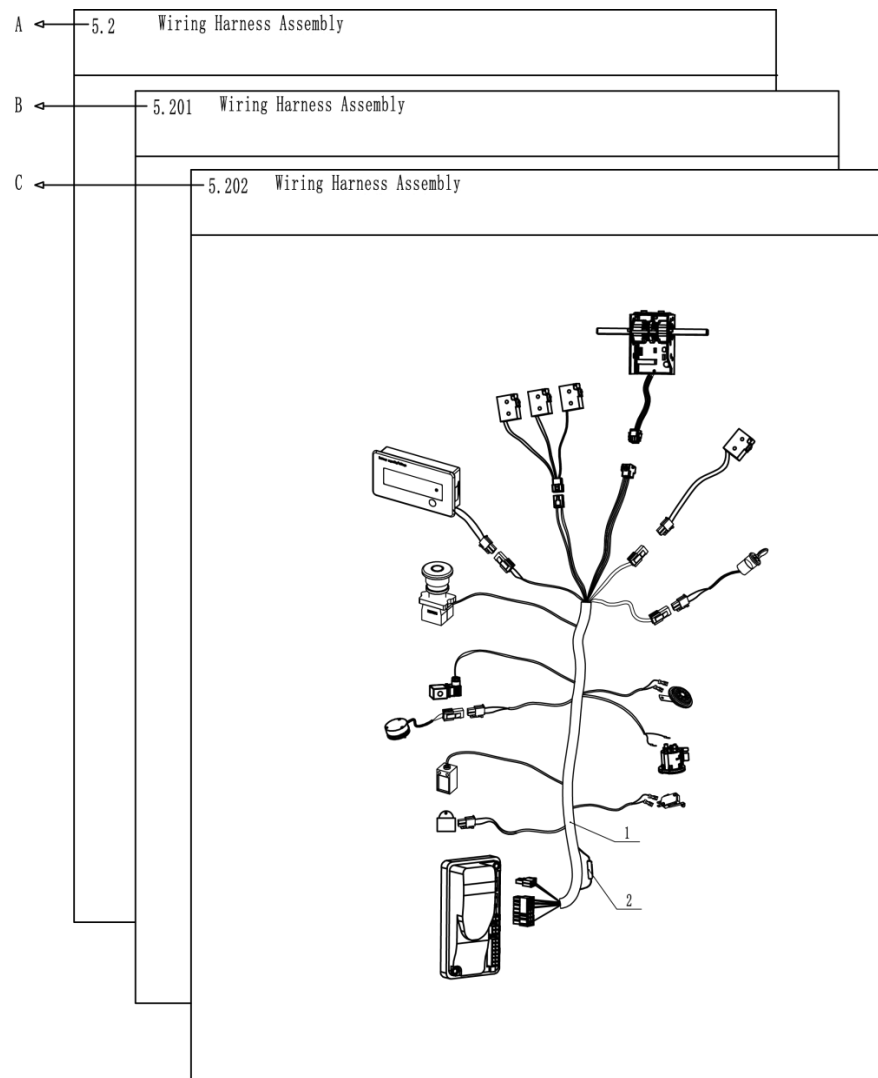

A:Section 5.2 is the original version.

B:Section 5.201 is the version that some parts in the Section 5.2 have been changed.

C:Section 5.202 is the version that some parts in the Section 5.201 have been changed.

When you order, Please locate specific parts information of your truck by the Applied Date of parts in each version.

概要
目录

将零件目录分组成几个易识别的部分，并把主要结构和总成放置在索引目录中。

零件明细表

Item 描述的是在插图上，您想要找的项目。**Part No.**是零件的一系列描述和它的订购号码。**Description** 是用文字的形式描述零件的号码。**Qty** 代表的是零件在叉车上使用的数量。**Applied Date** 表示的是零件适用的时间范围。**Remark** 是用来补充说明零件信息(例如车型、性能和特征等)。

怎么读取零件明目录

帮助 1:

Item 序号		Part No 代码	Description 名称		Qty 数量	Applied Date 适用日期	Remark 备注
A	➡	1		02. XDC. 3556	Battery 锂电池	1	24V/20AH
		1		02. XDC. 3557	Battery 锂电池	1	24V/30AH
		1		02. XDC. 3558	Battery 锂电池	1	24V/40AH
		2		03. 0132	Screw M5×8 螺钉	5	
B	➡	7		03. 0245	Nut M12 螺母	2	
		8		03. 04790	Spring 弹簧	2	
		9	01	30. 01. 6685	Wheel Frame 轮架	1	-210125
		9	02	40. 11. 048	Wheel Frame 轮架	1	210125-
C	➡	6		02. KSCX. 0001	Cover 前盖板	1	
		7		03. 0243	Nut M10 螺母	2	Cancel/取消
		8		40. 11. 040	Roller 滚子	2	
		9		03. 1088	Bolt M10×60 螺栓	2	
D	➡	3		33. 054. 0001	Frame (550) 车架	1	
		3		33. 054. 0002	Frame (685) 车架	1	
		4		03. 02393	Screw M6×16 螺钉	6	
		5		40. 18. 005	Shaft (550) 支撑轴	1	
		5		40. 15. 044	Shaft (685) 支撑轴	1	
E	➡	6		33. 036. 0007	Push Rod Welding 推杆	2	For 1800Kg
		7		03. 0691	BushingΦ19×Φ16×15 复合套	4	
		8		03. 0305	Round PinΦ5×30 弹性圆柱销	10	

A: 序号 1 表示该零件有几个品种可供您的选择。

B: 序号 9 表示该零件有一个适用的时间范围。这是因为我们在不断地进行产品的升级。

C: 序号 7 表示该零件取消，订购时注意版本号。

D: 序号 3 表示车架焊接体有不同的规格，550 或 685 表示货叉的外宽。序号 5 表示配用于货叉外宽的零部件。

E: 序号 6 表示该零件配用载重 1800KG 车型。

1. 用时间记录

– **210125** : 截止到 2021 年 01 月 25 日


210125- : 起始于 2021 年 01 月 25 日

2. 用序列号记录

01 : 截止序列号 01

02 : 起始序列号 02

帮助 2:

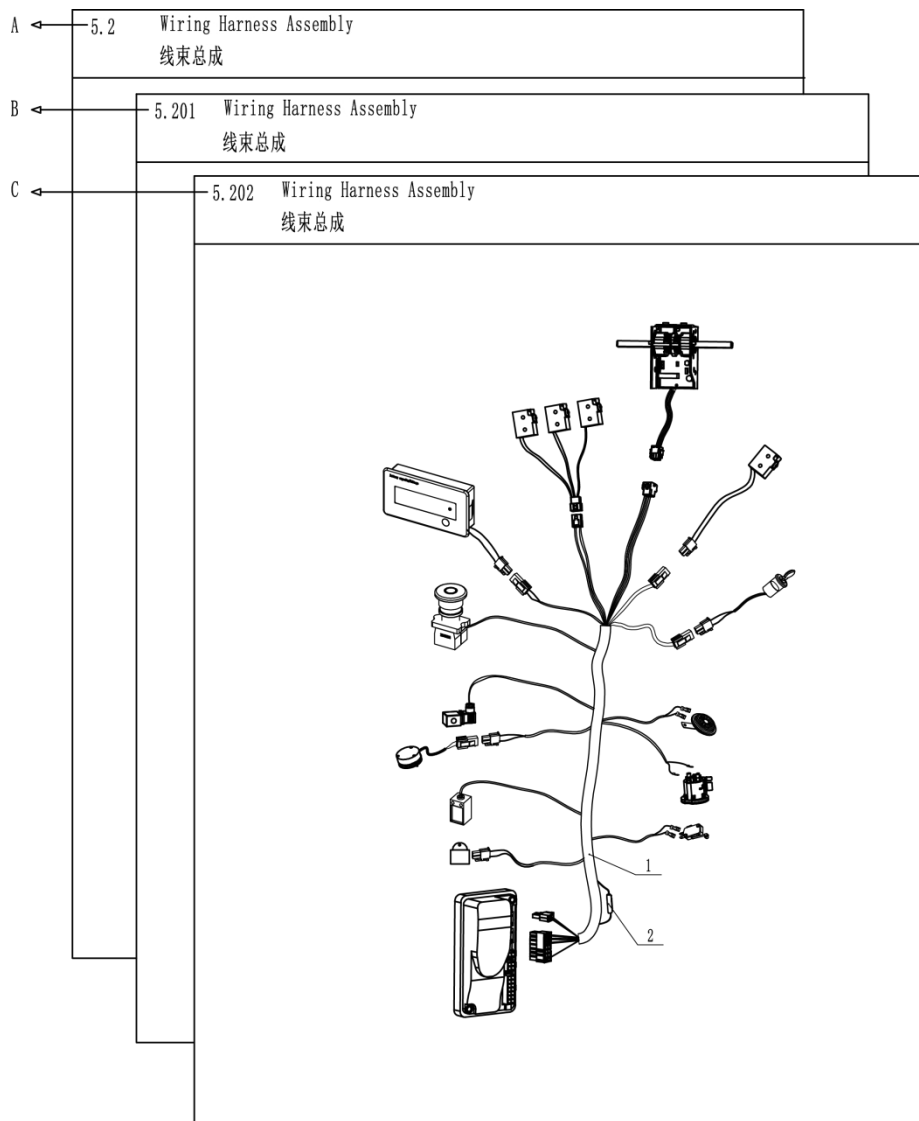

A: 章节 5.2 表示原始版本;

B: 章节 5.201 表示在原始版本（章节 5.2）上零件有所变更；

C: 章节 5.202 表示在变更版本（章节 5.201）上零件有所变更。

当您订购零件时，请根据每个版本中零件的适用时间来判断您所选购车型的零件信息。

Index 目录

1. Frame System 车身系统

1.1 Frame System 车架系统.....	1
1.2 Connecting Rod Rocker Assembly(Double Wheel) 连杆摇臂组件(双轮)	2
1.3 Connecting Rod Rocker Assembly(Double Wheel Double Sided Tray) 连杆摇臂组件 (双轮双面托盘)	3
1.4 Connecting Rod Rocker Assembly(Single Wheel) 连杆摇臂组件(单轮)	4
1.5 Connecting Rod Rocker Assembly(Single Wheel Double Sided Tray) 连杆摇臂组件 (单轮双面托盘)	5
1.6 Cover Assembly 外罩总成.....	6

2. Driving System 驱动系统

2.1 Driving System 驱动系统.....	7
2.2 Driving System(For Caster Assembly) 驱动系统(带辅助轮).....	8
2.3 Driving Assembly 驱动总成.....	9
2.4 Caster Assembly 辅助轮组件.....	11

3. Operating System 操作系统

3.1 Operating Handle Assembly 操作手柄组件.....	12
---	----


3.2 Control Pod Assembly 手柄头总成.....	14
3.3 Operating Handle Assembly(Intelligent) 操作手柄组件（智能）	15
3.4 Control Pod Assembly (Intelligent)手柄头总成（智能）	16
4. Hydraulic System 液压系统	
4.1 Hydraulic System 液压系统.....	17
4.2 Power Unit Assembly 动力单元组件.....	18
4.3 Lifting Cylinder 油缸.....	19
5. Electric System 电气系统	
5.1 Electric System 电气系统.....	20
5.2 Wiring Harness Assembly 线束总成.....	21
5.3 Wiring Harness Assembly(Intelligent)线束总成（智能）	22
5.4 Cable Assembly (lead acid battery)电缆总成（铅酸电池）	23
5.5 Cable Assembly (Lithium Battery) 电缆总成（锂电池）	24

修订记录

版 本	修订人	修订事项
20240620 V01	苑子恒	首次发布

1.1 Frame System

车架系统

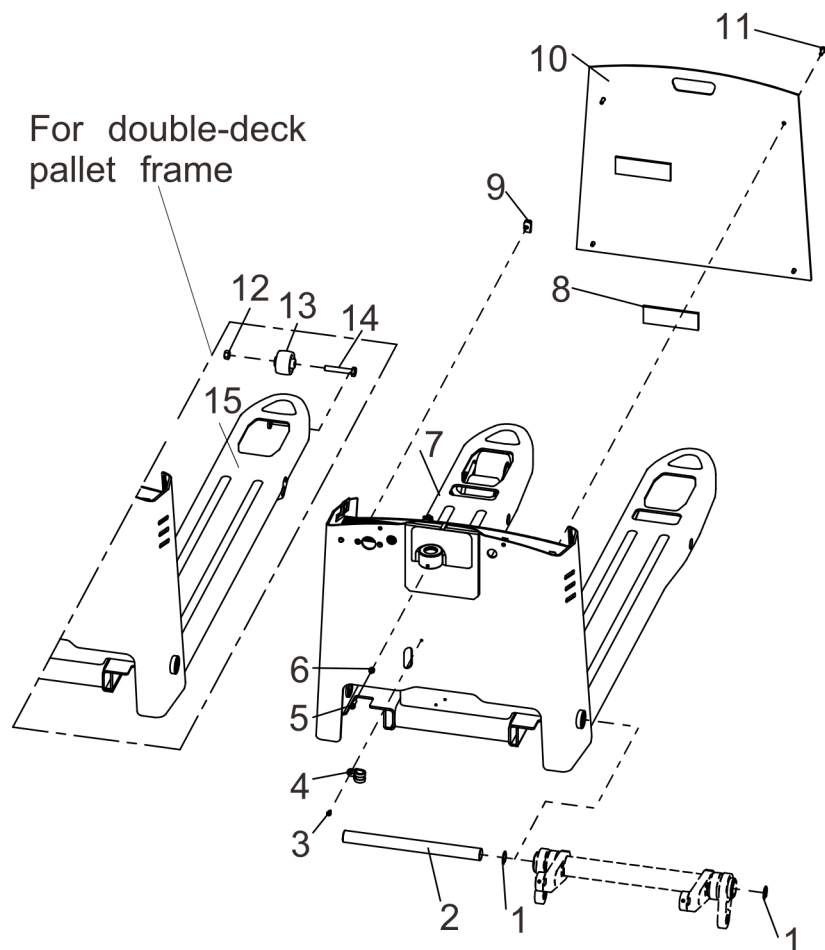


Note 1:Item 12.13.14 Used for double-sided pallet frame.

注释 1: 序号 12.13.14 用于双面托盘车架。


[illegible]

1.2 Connecting Rod Rocker Assembly(Double Wheel) 连杆摇臂组件(双轮)

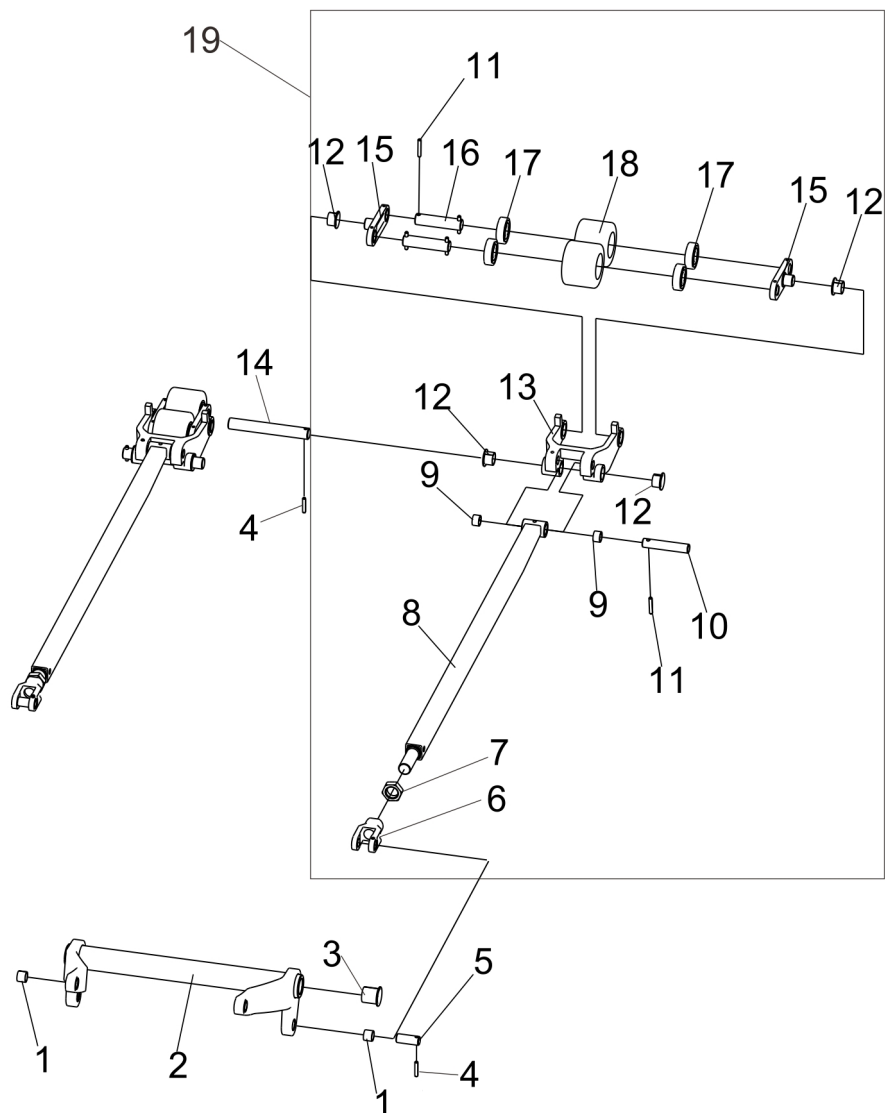

Item 序号		Part No 代码	Description 名称		Qty 数量	Applied Date 适用日期	Remark 备注
A		20301020868	Connecting Rod Rocker Assembly (Double, Wheel)	连杆摇臂组件 (双 轮)	2		
1		54002000017	Bushing $\Phi 19 \times \Phi 16 \times 15$	复合套	4		03. 0691
2		55102000034	Ring Rod (550)	圆环棒	1		33. 048. 0005
2		55102000035	Ring Rod (685)	圆环棒	1		33. 048. 0007
3		54001000003	Bushing $\Phi 28 \times \Phi 25 \times 27$	带肩复合套	2		03. 04422
4		30501050008	Round Pin $\Phi 5 \times 30$	弹性圆柱销	4		03. 0305
5		50101160009	Shaft	小轴	2		40. 14. 052
6		55502000003	Push Rod Bracket	推杆叉	2		40. 14. 048
7		30301220002	Nut M22 $\times$ 1.5	螺母	2		03. 0286
8		20301020889	Push Rod Welding	推杆 (H=75mm)	2		
9		54002000024	Bushing $\Phi 19 \times \Phi 16 \times 12$	复合套	4		03. 0451
10		50101160004	Shaft	推杆安装轴	2		40. 11. 038
11		30501050003	Round Pin $\Phi 5 \times 35$	弹性圆柱销	10		03. 0303
12		54001000009	Bushing $\Phi 23 \times \Phi 20 \times 16.5$	带肩复合套	8		03. 0453
13		55103000010	Wheel Bracket	轮架	2		40. 11. 086
14		20201000858	Shaft	轮架安装轴	2		
15		51251000014	Bracket	连板	4		30. 01. 1290
16		50101200008	Shaft	承载轮销轴	4		40. 11. 039
17		30701020007	Bearing 6204	轴承	8		03. 90. 057
18		51241000034	Loading Wheel	承载轮	4		02. L.Z. 0128
19		20301020869	Double Wheel Connecting Rod Wheel Frame	双轮连杆轮架	2		

1.3 Connecting Rod Rocker Assembly(Double Wheel Double Sided Tray)
连杆摇臂组件（双轮双面托盘）

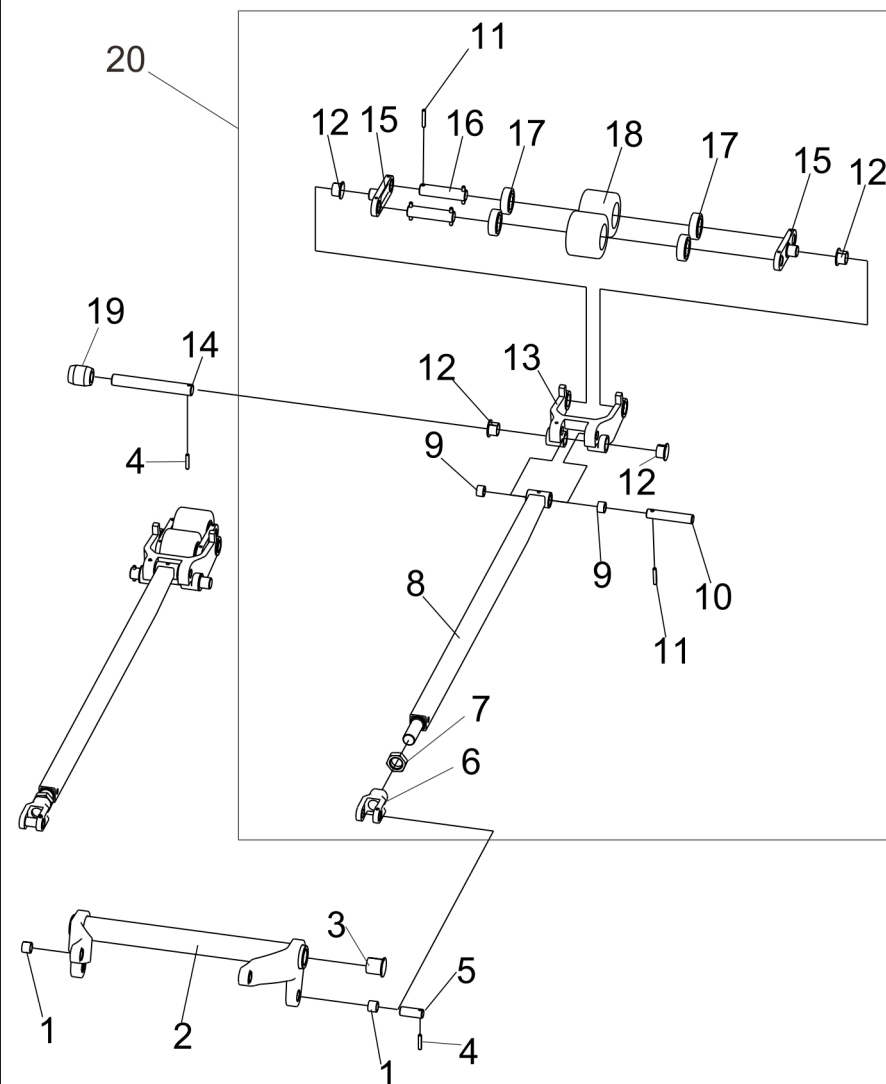


Item 序号	Part No 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	20301020870	Connecting Rod Rocker Assembly (Double Wheel Double Sided Tray) 连杆摇臂组件（双轮双面托盘）	2		
1	54002000017	BushingΦ19×Φ16×15 复合套	4		03.0691
2	55102000034	Ring Rod (550) 圆环棒	1		33.048.0005
2	55102000035	Ring Rod (685) 圆环棒	1		33.048.0007
3	54001000003	BushingΦ28×Φ25×27 带肩复合套	2		03.04422
4	30501050008	Round PinΦ5×30 弹性圆柱销	4		03.0305
5	50101160009	Shaft 小轴	2		40.14.052
6	55502000003	Push Rod Bracket 推杆叉	2		40.14.048
7	30301220002	Nut M22×1.5 螺母	2		03.0286
8	20301020889	Push Rod Welding 推杆 (H=75mm)	2		
9	54002000024	BushingΦ19×Φ16×12 复合套	4		03.0451
10	50101160004	Shaft 推杆安装轴	2		40.11.038
11	30501050003	Round PinΦ5×35 弹性圆柱销	10		03.0303
12	54001000009	BushingΦ23×Φ20×16.5 带肩复合套	8		03.0453
13	55103000010	Wheel Bracket 轮架	2		40.11.086
14	20201000858	Shaft 轮架安装轴	2		
15	51251000014	Bracket 连板	4		30.01.1290
16	50101200008	Shaft 承载轮销轴	4		40.11.039
17	30701020007	Bearing 6204 轴承	8		03.90.057
18	51241000034	Loading Wheel 承载轮	4		02.LZ.0128
19	51108000016	Roller 滚子	2		40.11.041
20	20301020871	Double Wheel Connecting Rod Wheel Frame Double Sided Tray 双轮连杆轮架双面托盘	2		

1.4


Connecting Rod Rocker Assembly(Single Wheel)

连杆摇臂组件(单轮)


Item	Part No	Description	Qty	Applied Date	Remark
序号	代码	名称	数量	适用日期	备注
A	20301020872	Connecting Rod Rocker Assembly(Single Wheel) 连杆摇臂组件(单轮)	2		
1	54002000017	BushingΦ19×Φ16×15 复合套	4		3. 0691
2	55102000034	Ring Rod (550) 圆环棒	1		33. 048. 0005
2	55102000035	Ring Rod (685) 圆环棒	1		33. 048. 0007
3	54001000003	BushingΦ28×Φ25×27 带肩复合套	2		3. 04422
4	30501050008	Round PinΦ5×30 弹性圆柱销	4		3. 0305
5	50101160009	Shaft 小轴	2		40. 14. 052
6	55502000003	Push Rod Bracket 推杆叉	2		40. 14. 048
7	30301220002	Nut M22×1.5 螺母	2		3. 0286
8	20301020889	Push Rod Welding 推杆 (H=75mm)	2		
9	30501050003	Round PinΦ5×35 弹性圆柱销	4		03. 0303
10	50101160004	Shaft 推杆安装轴	2		40. 11. 038
11	54002000024	BushingΦ19×Φ16×12 复合套	4		3. 0451
12	20201000858	Shaft 轮架安装轴	2		
13	54001000009	BushingΦ23×Φ20×16.5 带肩复合套	4		03. 0453
14	55103000004	Wheel Bracket 轮架	2		40. 11. 037
15	50301205001	Washer 垫圈	Req.		30. 01. 3460
16	50101200019	Shaft 承载轮销轴	2		30. 01. 3629
17	30701020006	Bearing 6304 轴承	4		03. 90. 036
18	51241000054	Loading Wheel 承载轮	2		02. LZ. 0143
19	20301020873	Single Wheel Connecting Rod Wheel Frame 单轮连杆轮架	2		

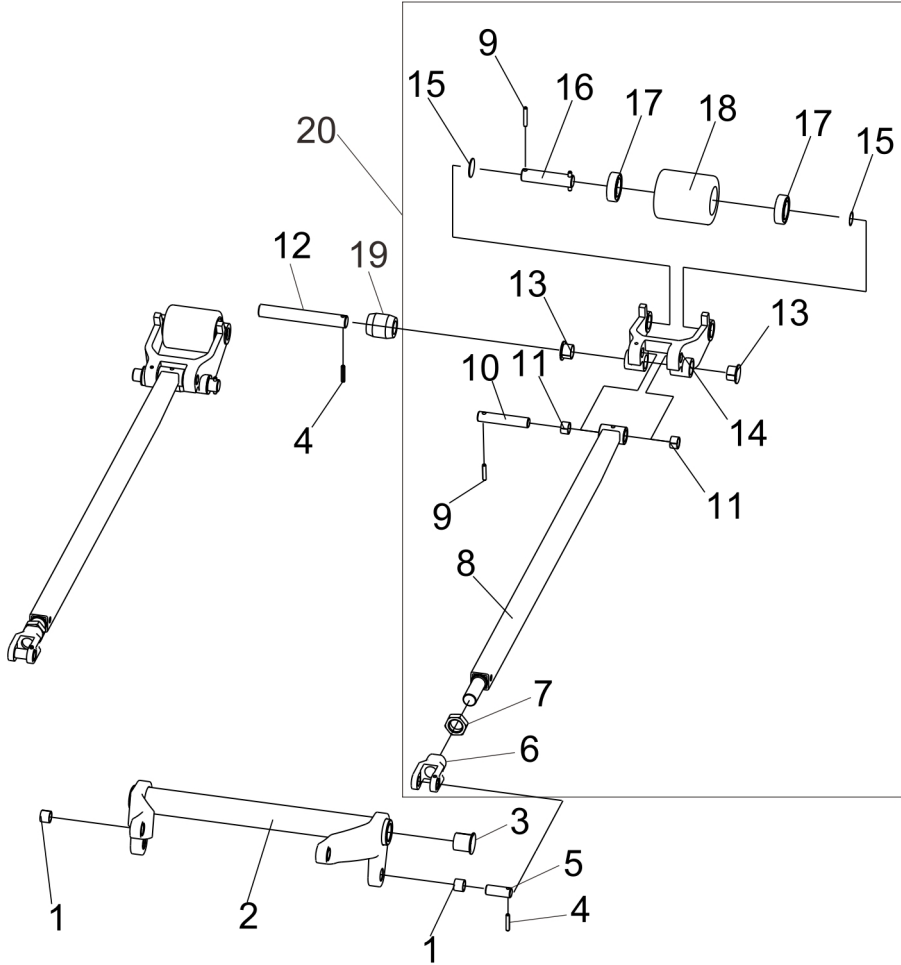1.5 Connecting Rod Rocker Assembly(Single Wheel Double Sided Tray) 连杆摇臂组件(单轮双面托盘)							
		Item 序号	Part No 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
		A	20301020874	Connecting Rod Rocker Assembly(Single Wheel Double Sided Tray) 连杆摇臂组件(单轮双面托盘)	2		
		1	54002000017	Bushing Φ19×Φ16×15 复合套	4		3.0691
		2	55102000034	Ring Rod (550) 圆环棒	1		33.048.0005
		2	55102000035	Ring Rod (685) 圆环棒	1		33.048.0007
		3	54001000003	Bushing Φ28×Φ25×27 带肩复合套	2		3.04422
		4	30501050008	Round Pin Φ5×30 弹性圆柱销	4		3.0305
		5	50101160009	Shaft 小轴	2		40.14.052
		6	55502000003	Push Rod Bracket 推杆叉	2		40.14.048
		7	30301220002	Nut M22×1.5 螺母	2		3.0286
		8		Push Rod Welding 推杆 (H=75mm)	2		
		9	30501050003	Round Pin Φ5×35 弹性圆柱销	4		03.0303
		10	50101160004	Shaft 推杆安装轴	2		40.11.038
		11	54002000024	Bushing Φ19×Φ16×12 复合套	4		3.0451
		12	20201000858	Shaft 轮架安装轴	2		
		13	54001000009	Bushing Φ23×Φ20×16.5 带肩复合套	4		03.0453
		14	55103000004	Wheel Bracket 轮架	2		40.11.037
		15	50301205001	Washer 垫圈	Req.		30.01.3460
		16	50101200019	Shaft 承载轮销轴	1		30.01.3629
		17	30701020006	Bearing 6304 轴承	4		03.90.036
		18	51241000054	Loading Wheel 承载轮	2		02.LZ.0143
		19	51108000016	Roller 滚子	2		40.11.041
		20	20301020875	Single Wheel Connecting Rod Wheel Frame Double Sided Tray 单轮连杆轮架双面托盘	2		


1.6	Cover Assembly 外罩总成
-----	------------------------

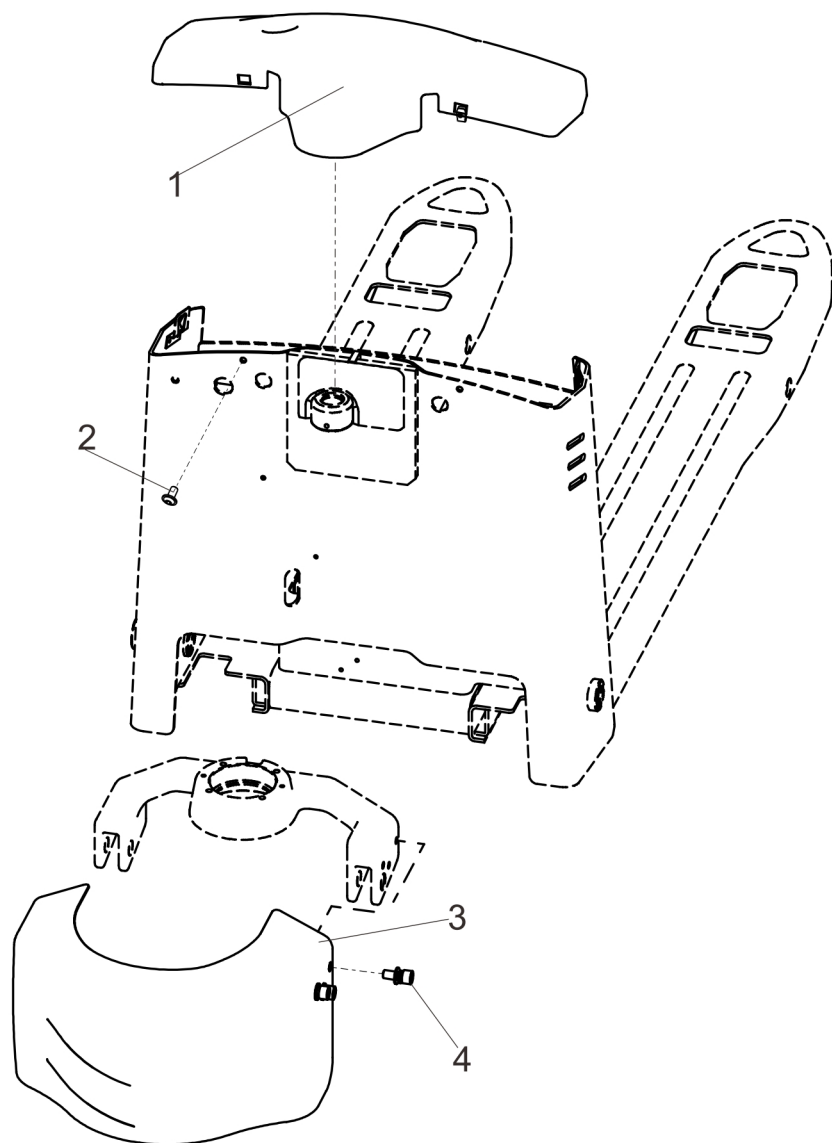[illegible]


2.1	Driving System 驱动系统
-----	------------------------

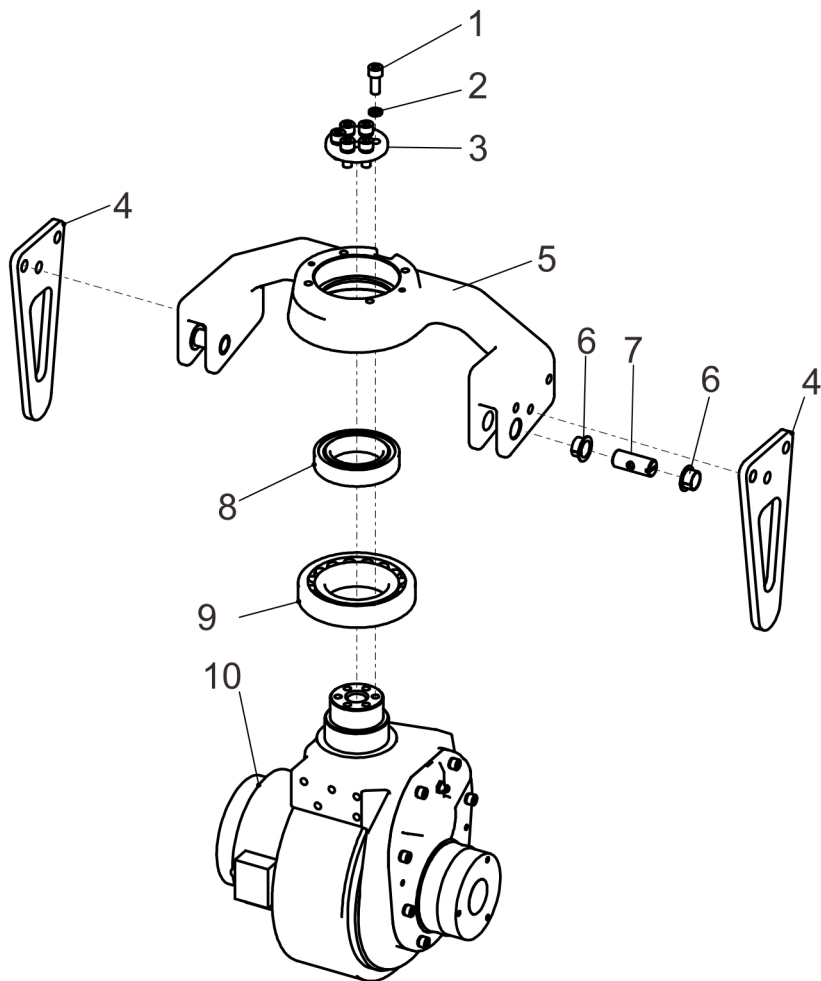[illegible]

2.2 Driving System(For Caster Assembly) 驱动系统(带辅助轮)

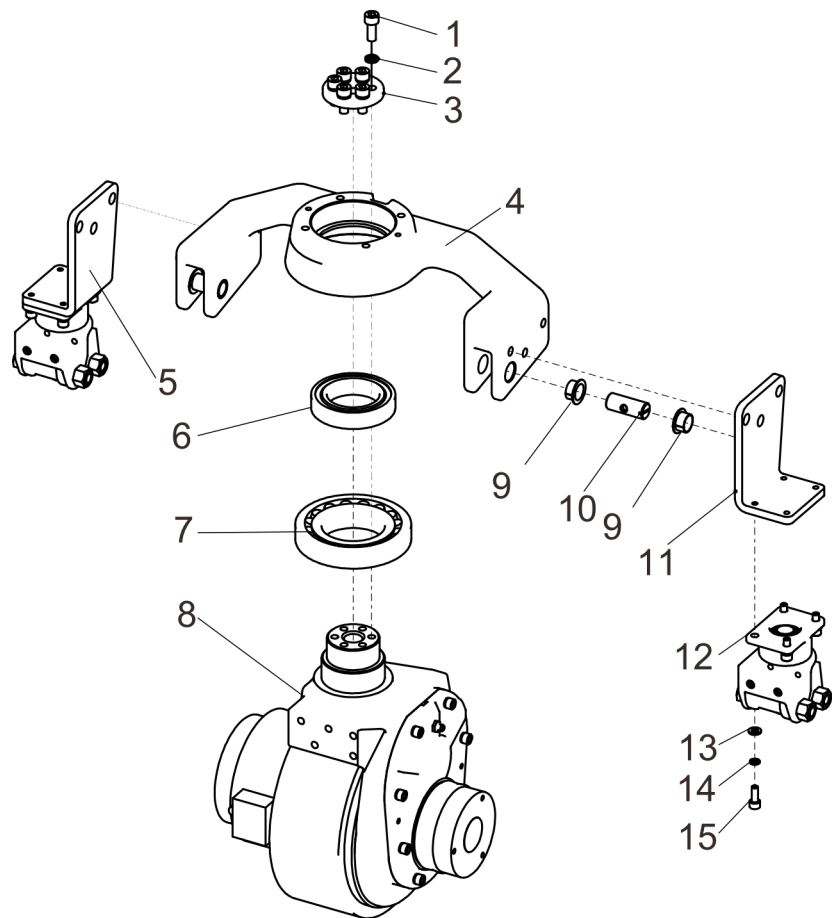
[illegible]

2.3 Driving Assembly 驱动总成

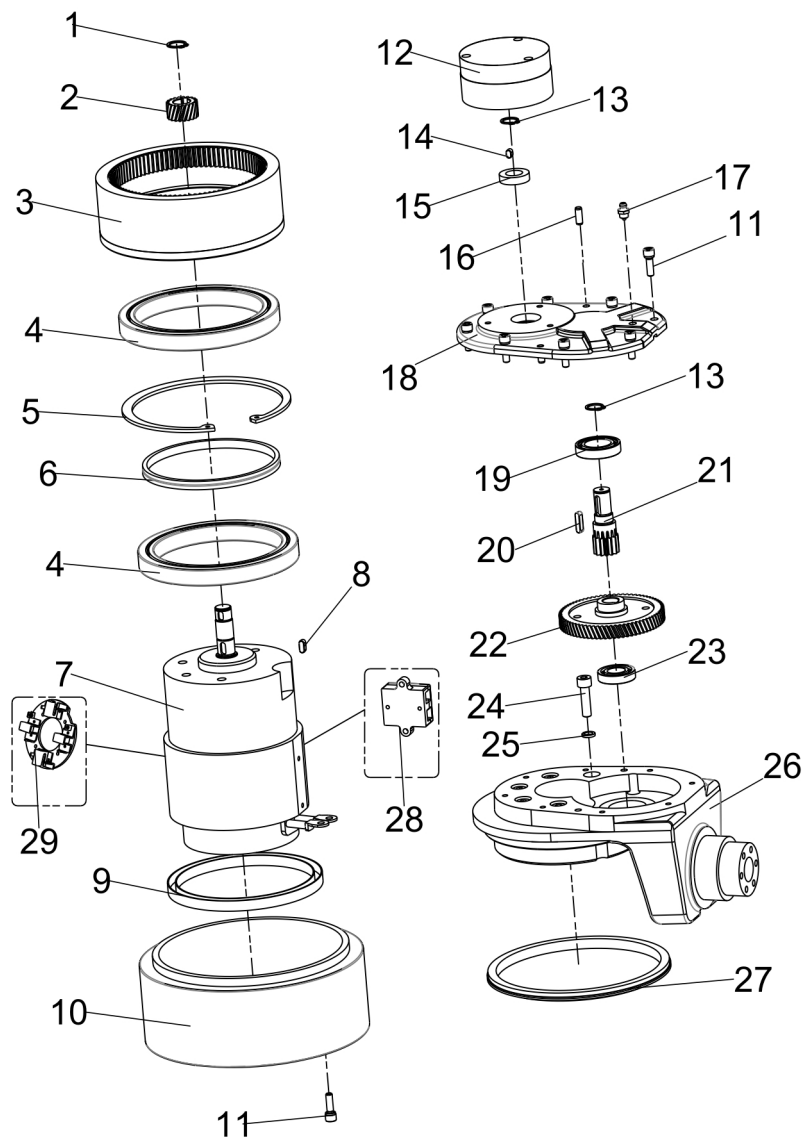


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	52101000021	Driving Assembly 驱动总成	1		02.QD. 00833
1	30421160001	Circlip For Shaft Φ16 轴用挡圈	1		03. 0062
2	52202120001	Driving Gear 主动斜齿轮	1		02. 01. 00702
3	52201150005	Internal Gear 内齿轮	1		02. 01. 00684
4	30701120003	Bearing 61824 轴承	2		02. 01. 006810
5	30421000002	Circlip For Hole Φ150 孔用挡圈	1		03. 0709
6	52105000040	Spacer 隔套	1		02. 01. 9294
7	70402000022	Motor 电机	1		02. DJ. 00850
8	30601050003	Flat Key Pin 平键销	1		03. 0716
9	30802128001	Oil Seal 油封	1		02. 01. 3703
10	51241000104	Driving Wheel 驱动轮	1		02. QDL. 0272
10	51210000013	Driving Wheel (Rubber) 驱动轮(橡胶)	1		02. QDL. 3316
11	30201060003	Screw M6×20 螺钉	16		03. 1180
12	55704000001	Brake Assembly 刹车总成	1		02. 01. 3596
13	30421150001	Circlip For Shaft Φ15 轴用挡圈	2		03. 0061
14	30601050005	Flat Key Pin 平键销	1		03. 0975
15	30802016001	Oil Seal 油封	1		03. 0719
16	30501060003	Cylindrical Pin Φ6×16 圆柱销	2		03. 0439
17	30821008001	Grease Fitting 黄油嘴	1		03. 0506
18	52105000041	Gearbox Cover 箱盖	1		02. 01. 210707
19	30701025001	Bearing 61905 轴承	1		03. 90. 075
20	30601050004	Flat Key Pin 平键销	1		03. 0717
21	52201150006	Transmission Gear 传动齿轮	1		02. 01. 00701
22	52202120004	Driven Gear 被动斜齿轮	1		02. 01. 00703
23	30701017001	Bearing 16003 轴承	1		03. 90. 074
24	30201080006	Screw M8×30 螺钉	5		03. 01571
25	30411080002	Lock Washer Φ8 弹垫	5		03. 0012
26	52105000054	Gearbox 齿轮箱	1		


2.3 Driving Assembly 驱动总成

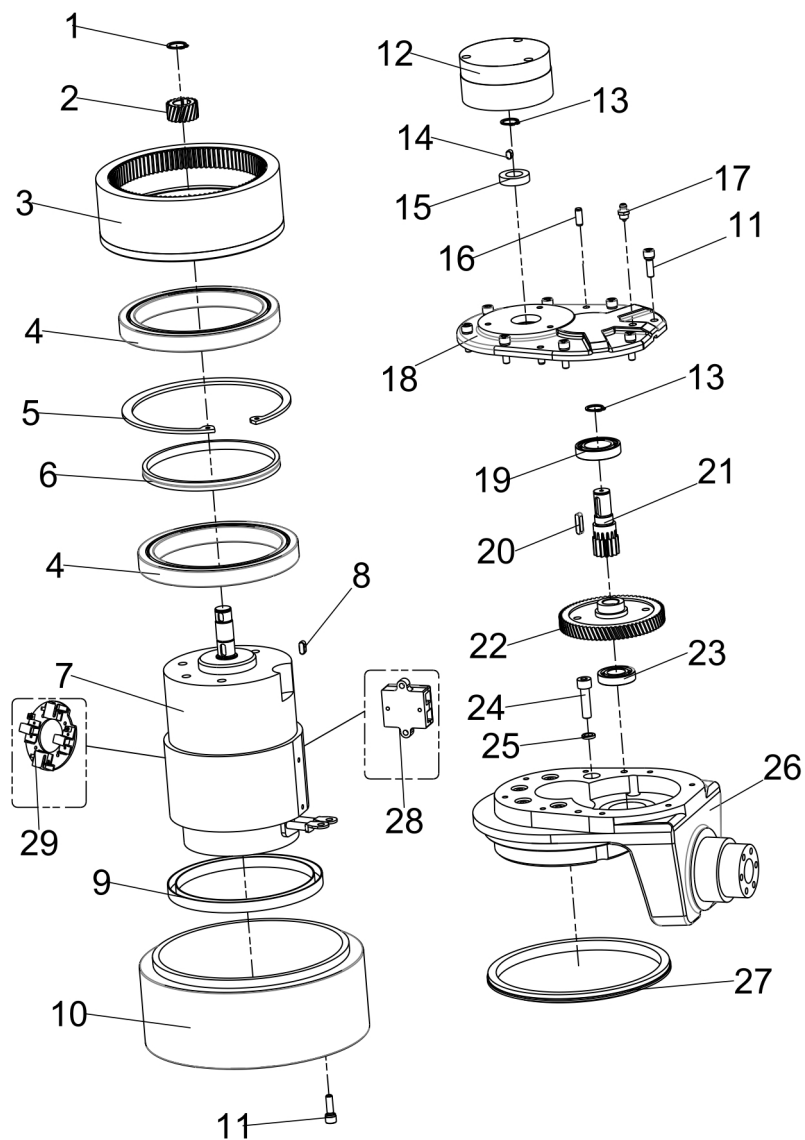[illegible]

2.4	Caster Assembly 辅助轮组件
-----	--------------------------

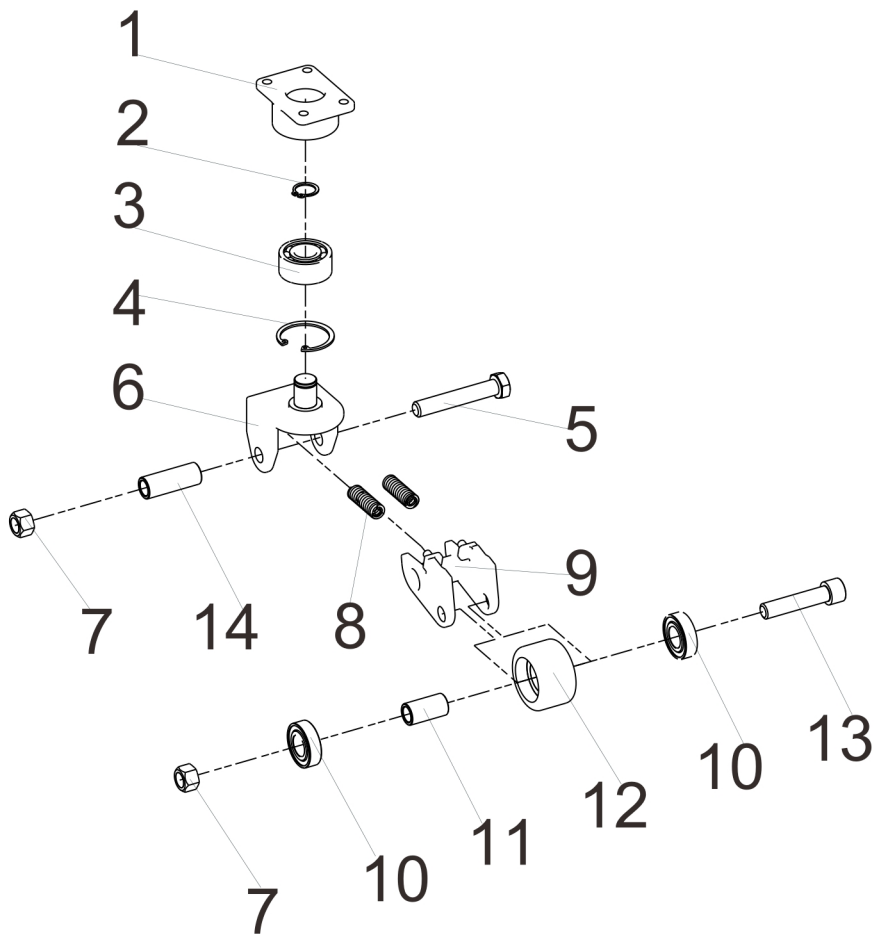
[illegible]

3.101 Operating Handle Assembly

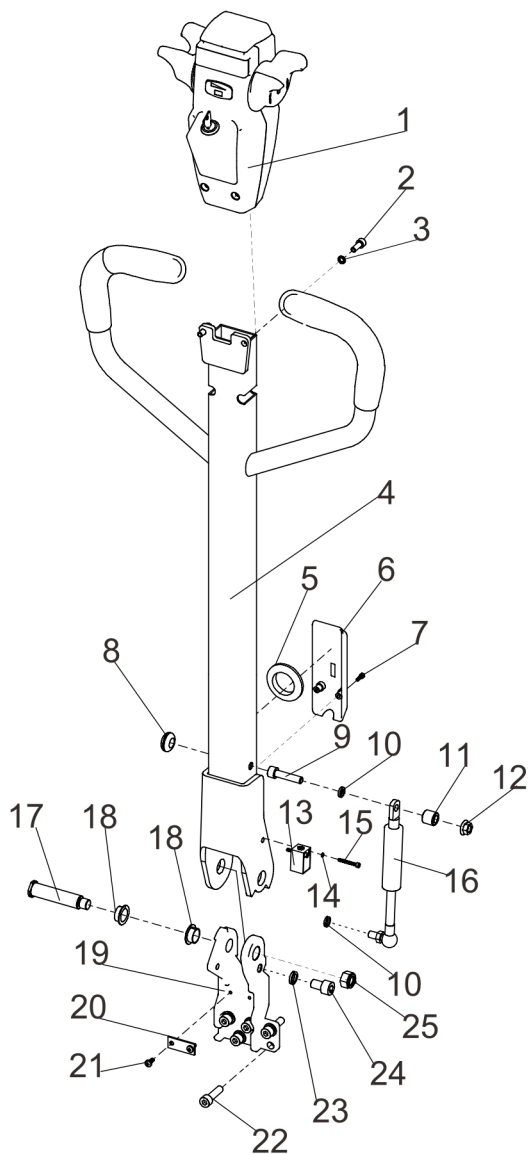


Item 序号		Part No. 代码	Description 名称		Qty 数量	Applied Date 适用日期	Remark 备注
A		55220000032	Operating Handle Assembly 操作手柄组件		1		
1		71501000016	Handle Head Assembly 手柄总成		1		02. SB. 3199
2		30201060020	Screw M6×16 螺钉		2		03. 0147
3		30411060002	Lock Washer Φ6 弹垫		2		03. 0011
4	01	55221000031	Handle 手柄杆		1	-240122	33. 028. 0014
4	02	55221000048	Handle 手柄杆		1	240122-	
5		54310000002	Grommet 护线圈		1		02. 01. 9449
6		20201000988	Cover Plate 盖板		1		40. 42. 005
7	01	30211060010	Screw M6×10 螺钉		2	-240122	03. 0352
7	02	30201030001	Screw M3×10 螺钉		2	240122-	03. 1083
8		54302000259	Shock Pad 防震垫		1		02. 01. 2133
9		30201080032	Screw M8×35 螺钉		1		03. 0158
10		30411080002	Lock Washer Φ8 弹垫		2		03. 0012
11		50301090004	Sleeve 隔套		1		40. 15. 006
12		30311080001	Nut M8 螺母		1		03. 0244
13		70109000004	Proximity Switch 24V 接近开关		1		19. 10520
14		30411030001	Lock Washer Φ3 弹垫		2		03. 00091
15		30201030004	Screw M3×25 螺钉		2		03. 01301
16		50407000036	Gas Spring 气弹簧		1		02. QTH. 3634
17	01	50101160010	Shaft 关节轴		1	-240122	40. 15. 005
17	02	20201001082	Shaft 关节轴		1	240122-	40. 15. 057
18	01	54001000008	Bushing Φ16×Φ18×10 带肩复合套		2	-240122	03. 0452
18	02	54001000014	Bushing Φ18×Φ16×8 带肩复合套		2	240122-	03. 0977
19		20201000774	Joint Seat 关节座		1		40. 15. 004
20		20201000295	Plate 压线板		1		40. 11. 064
21		30211040013	Screw M4×10 螺钉		2		03. 0230
22		30201080023	Screw M8×30 螺钉		5		03. 01573

3.101	Operating Handle Assembly 操作手柄组件
-------	-------------------------------------

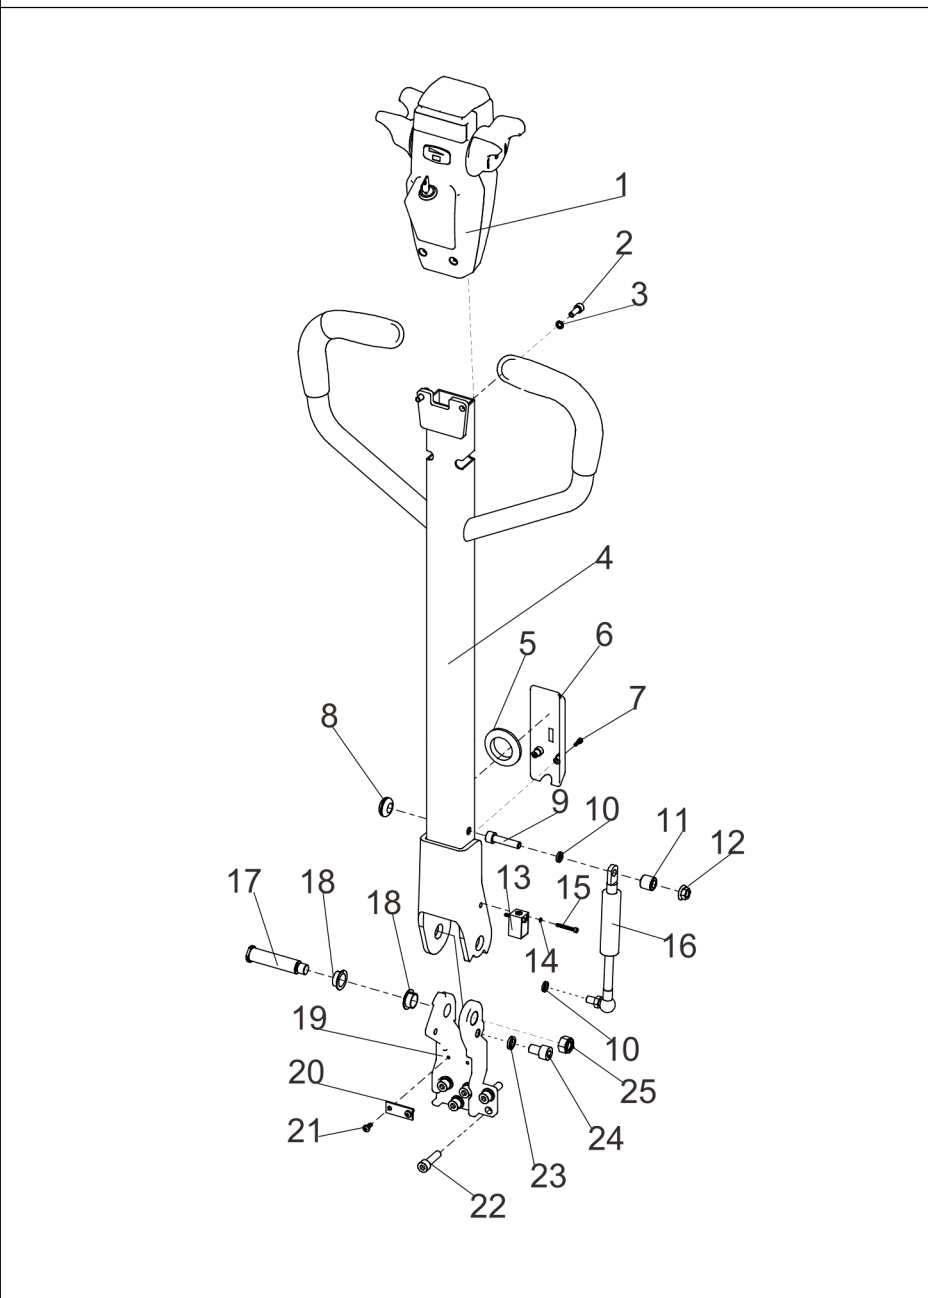
[illegible]

3.2 Control Pod Assembly 手柄头总成

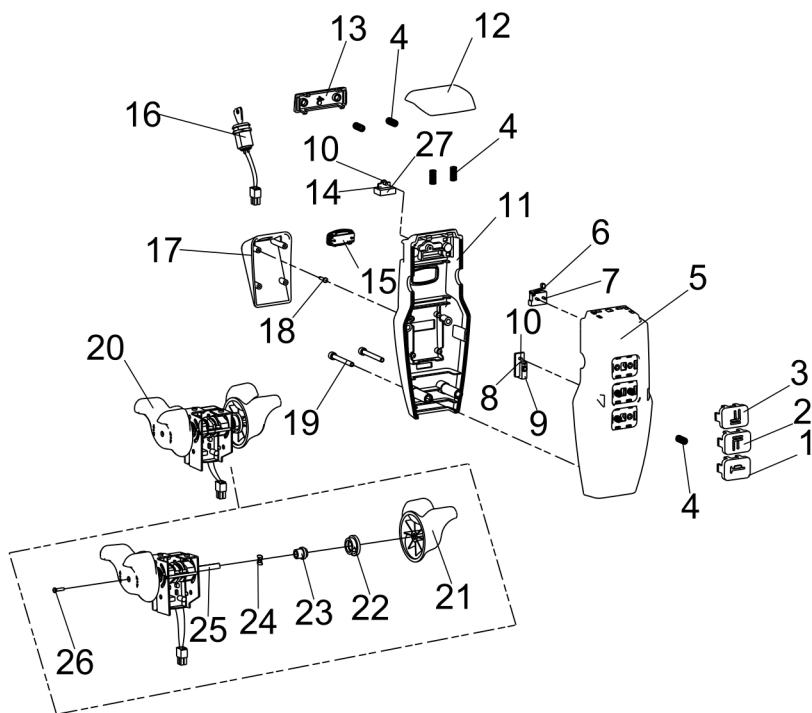


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	71501000016	Control Pod Assembly 手柄头总成	1		
1	71511000104	Horn Button 喇叭按钮	1		02. SB. PJ. 0004
2	71511000105	Rising Button 上升按钮	1		02. SB. PJ. 0005
3	71511000106	Decline Button 下降按钮	1		02. SB. PJ. 0009
4	71511000118	Spring 7×16 弹簧	10		02. SB. PJ. 0010
5	71511000101	Upper Cover 上盖	1		02. SB. PJ. 0002
6	70103000008	Micro Switch 微动开关	1		02. SB. PJ. 0002 7
7	30231020001	Screw ST2. 2×13 螺钉	2		02. SB. PJ. 0011
8	71511000107	Micro Switch Card 微动开关卡板	3		02. SB. PJ. 0006
9	70103000007	Reversing Switch 反方向开关	3		70103000009
10	30231030002	Screw ST2. 9×9. 5 螺钉	4		02. SB. PJ. 0012
11	71511000117	Lower Cover 下盖	1		
12	71511000103	Belly Switch 肚皮开关	1		02. SB. PJ. 0003
13	71511000108	Mode Button 模式开关	1		02. SB. PJ. 0015
14	71511000109	Mode Button Card 模式开关卡板	1		02. SB. PJ. 0016
15	70601000017	Meter 电量表	1		
16	20101040002	Key Switch Assembly 钥匙开关总成	1		
17	71511000110	Key Box 钥匙盒	1		02. SB. PJ. 0017
18	30231030004	Screw ST2. 9×13 螺钉	2		02. SB. PJ. 0021
19	30201050013	Screw M5×45 螺钉	2		03. 0134
20	70132000102	Accelerator Assembly 加速器总成	1		02. SB. PJ. 0022
21	71511000115	Accelerator Knob 加速器旋钮	2		02. SB. PJ. 0027
22	71511000113	Shaft Jacket 轴外套	2		02. SB. PJ. 0025
23	71511000111	Shaft Sleeve 轴内套	2		02. SB. PJ. 0024
24	30431080001	Spring Washer 波形弹性垫圈	2		03. 0735
25	70132000002	Accelerator 加速器	1		02. SB. PJ. 0023
26	30211030008	Screw M3×12 螺钉	2		03. 05364
27	70103000006	Micro Switch 微动开关	1		

3.301	Operating Handle Assembly(Intelligent) 操作手柄组件 (智能)
-------	---

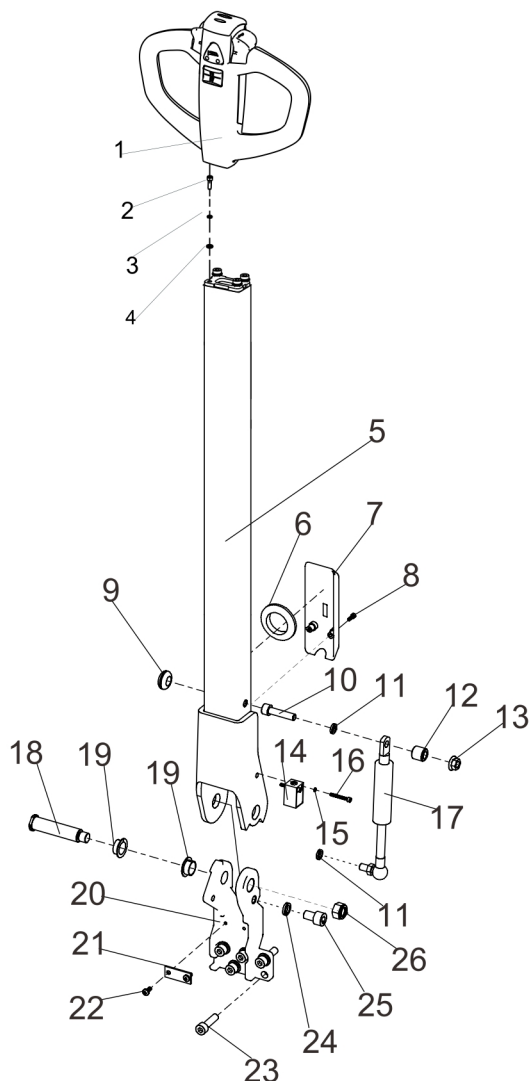

Item		Part No.	Description		Qty	Applied Date	Remark
序号		代码	名称		数量	适用日期	备注
A		55220000033	Operating Handle 操作手柄组件(德通) Assembly (DT)		1		
1		71501000018	Handle Head Assembly	手柄总成	1		02.01.31150
2		30201060021	Screw M6×20	螺钉	4		03.0149
3		30411060002	Lock Washer Φ6	弹垫	4		03.0011
4		30401060001	Flat Washer Φ6	平垫	4		03.0049
5		55221000047	Handle	手柄杆	1		
6		54310000008	Grommet	护线圈	1		02.01.01088
7		20201000988	Cover Plate	盖板	1		40.42.005
8		30201030001	Screw M3×10	螺钉	2		03.1083
9		54302000259	Shock Pad	防震垫	1		02.01.2133
10		30201080032	Screw M8×35	螺钉	1		03.0158
11		30411080002	Lock Washer Φ8	弹垫	2		03.0012
12		50301090004	Sleeve	隔套	1		40.15.006
13		30311080001	Nut M8	螺母	1		03.0244
14		70109000004	Proximity Switch 24V	接近开关	1		19.10520
15		30411030001	Lock Washer Φ3	弹垫	2		03.00091
16		30201030004	Screw M3×25	螺钉	2		03.01301
17		50407000036	Gas Spring	气弹簧	1		02.QTH.3634
18		20201001082	Shaft	关节轴	1		40.15.057
19		54001000014	Bushing Φ18×Φ16×8	带肩复合套	2		03.0977
20		20201000774	Joint Seat	关节座	1		40.15.004
21		20201000295	Plate	压线板	1		40.11.064
22		30211040013	Screw M4×10	螺钉	2		03.0230
23		30201080023	Screw M8×30	螺钉	5		03.01573
24		30411100002	Lock Washer Φ10	弹垫	1		03.0014
25		30201100021	Screw M10×16	螺钉	1		03.0162
26		30311120001	Nut M12	螺母	1		03.0820

3.4 Control Pod Assembly(Intelligent) 手柄头总成（智能）

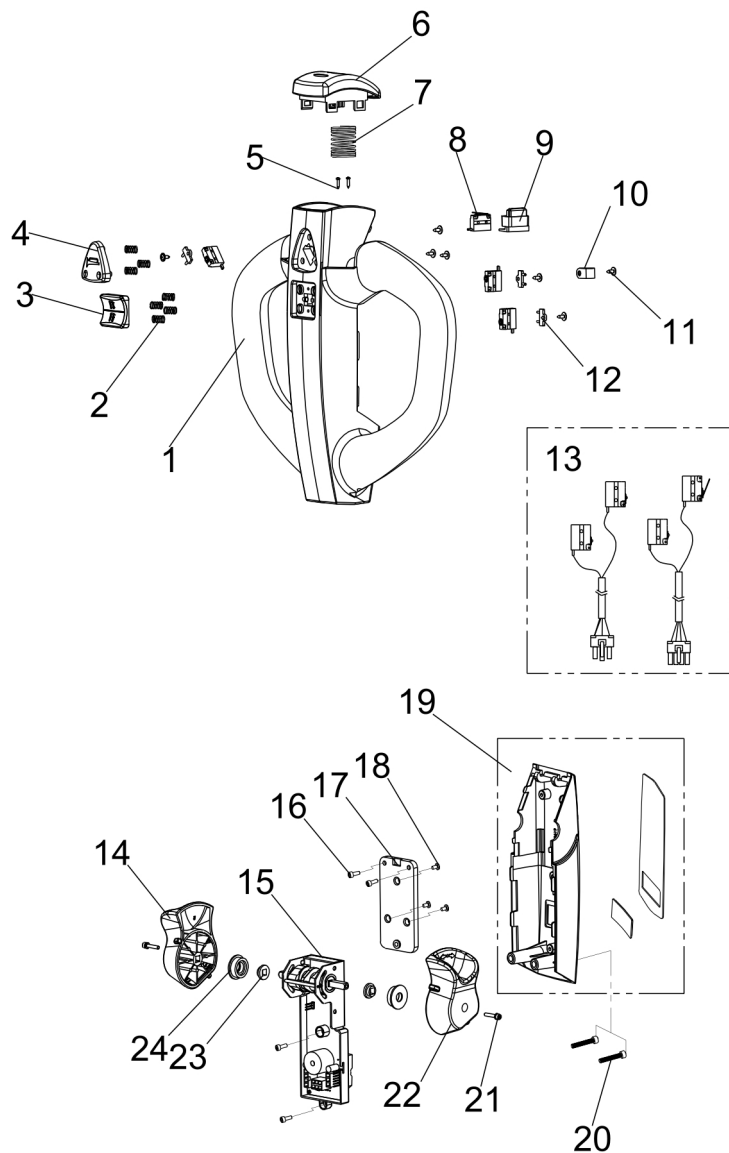


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	71501000018	Handle Head Assembly (DT) 手柄头总成(德通)	1		02. 01. 9472
1	71511000201	Upper Cover 上盖	1		02. SB. PJ. 0039
2	71511000202	Spring $\Phi 8 \times 12$ 弹簧	7		02. SB. PJ. 0040
3	71511000203	Lift Button 升降按钮	1		02. SB. PJ. 0041
4	71511000204	Horn Button 喇叭按钮	1		02. SB. PJ. 0042
5	30231020001	Screw ST2.2 $\times$ 8 螺钉	2		02. SB. PJ. 0060
6	71511000205	Belly Switch 肚皮开关	1		02. SB. PJ. 0043
7	71511000206	Spring $\Phi 23.6 \times 30$ 弹簧	1		02. SB. PJ. 0044
8	71511000207	Bracket 支架	1		02. SB. PJ. 0045
9	71511000208	Clamp 卡箍	1		02. SB. PJ. 0046
10	71511000209	Harness Clamp 线夹	1		02. SB. PJ. 0047
11	30201030001	Screw M3 $\times$ 8 螺钉	7		02. SB. PJ. 0061
12	71511000210	Card 定位片	3		02. SB. PJ. 0048
13	71511000211	Micro Switch 微动开关	1		02. SB. PJ. 0049
14	71511000214	Travelling Knob(R) 右加速旋钮	1		02. SB. PJ. 0052
15	71511000215	Accelerator Assembly 加速器总成	1		02. SB. PJ. 0053
16	30201040009	Screw M4 $\times$ 10 螺钉	4		03. 0123
17	71511000217	Bracket 固定板	3		02. SB. PJ. 0055
18	30201040012	Screw M4 $\times$ 6 螺钉	1		02. SB. PJ. 0063
19	71511000218	Lower Cover 下盖	2		02. SB. PJ. 0056
20	30201050005	Screw M5 $\times$ 50 螺钉	2		03. 03644
21	30201030002	Screw M3 $\times$ 16 螺钉	1		03. 0128
22	71511000219	Travelling Knob(L) 左加速旋钮	2		02. SB. PJ. 0057
23	71511000220	Shaft Sleeve 轴内套	2		02. SB. PJ. 0058
24	71511000221	Shaft Jacket 轴外套	2		02. SB. PJ. 0059

4.1


Hydraulic System

液压系统

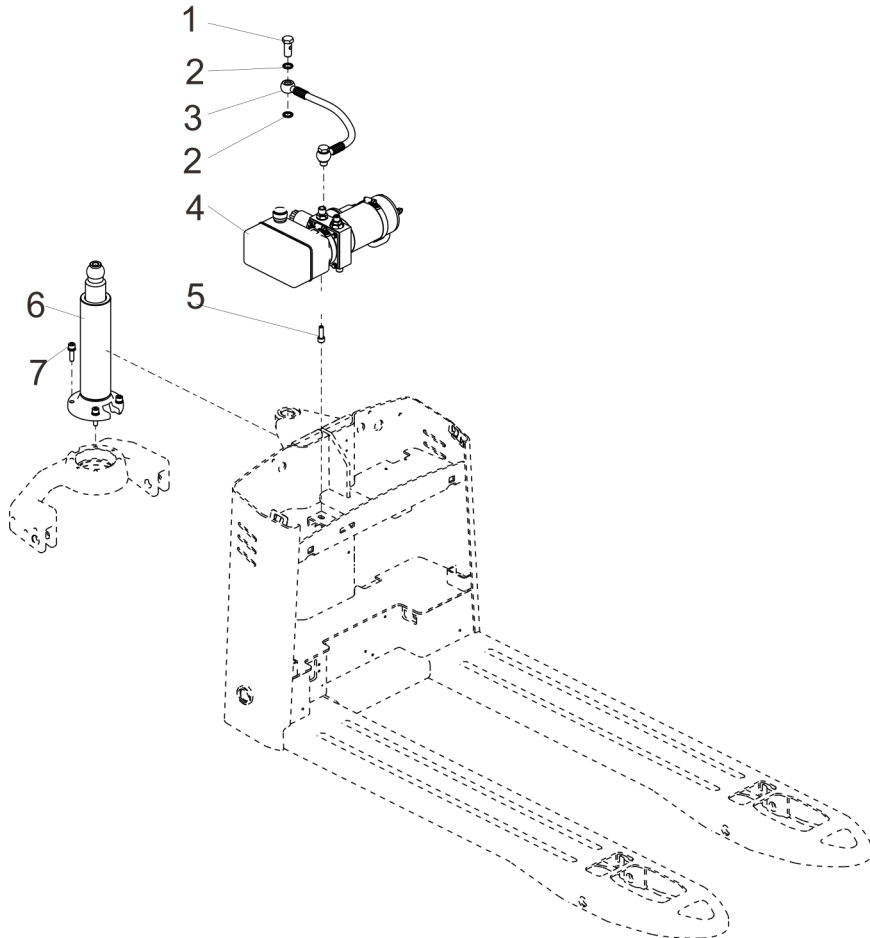


Item	Part No.	Description	Qty	Applied Date	Remark
序号	代码	名称	数量	适用日期	备注
1	40204000011	Hollow Bolt 空心螺栓	2		02.01.30810
2	30803014001	Gasket Seal Φ14 密封垫	4		03.0482
3	40103000003	Lifting Tubing 起升油管	1		02.YYL.20352
4	40401024023	Power Unit 24V0.8KW 动力单元	1		02.DLDY.01171
5	30201080024	Screw M8×25 螺钉	2		03.01562
6	40301400006	Lifting Cylinder 油缸	1		02.YG.2129
7	30201080023	Screw M8×30 螺钉	4		03.01573
					</

4.2 Power Unit Assembly
动力单元组件

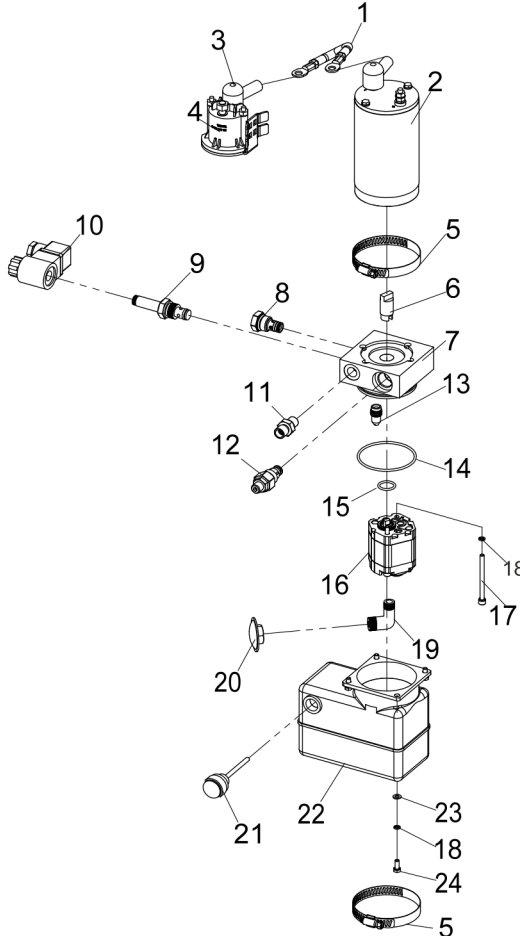


Item	Part No.	Description	Qty	Applied Date	Remark
序号	代码	名称	数量	适用日期	备注
A		Power Unit 动力单元	1		02.DLDY. 01171
1		Cable 接触器连接线	1		
2		Motor 提升电机	1		02.DJ. 33618
3		Cover 烟斗护套	2		02.01. 2231
4		Relay Starter 直流接触器	1		02.01. 2207
5		Clamp 抱箍	2		03. 1045
6		Coupling 联轴器	1		02.01. 9308
7		Adapter 中心块	1		02.01. 9309
8		Check Valve 单向阀	1		02.01. 9028
9		Valve Element 电磁阀	1		02.01. 9150
10		Electromagnet 电磁阀线圈	1		02.01. 9366
11		Connect 直接头	1		02.YYL. 3715
12		Relief Valve 溢流阀	1		02.01. 9151
13		Pressure Valve 压力补偿阀	1		02.01. 9385
14		O-ring 0 型圈	1		02.01. 9317
15		O-ring 0 型圈	1		02.01. 9157
16		Gear Pumps 齿轮泵	1		02.01. 9059
17		Screw M5×65 螺钉	2		03.0967
18		Gas Spring Φ5 弹垫	6		03.00132
19		Right Angle Joints 直角管	1		02.01. 0340
20		Filter 滤网	1		02.01. 9310
21		Cover 油箱盖	1		02.01. 30423
22		Tank 油箱	1		02.01. 9311
23		Flat Washer Φ5 平垫	4		03.00511
24		Bolt M5×12 螺栓	4		03.0911

4.3	Lifting Cylinder 油缸
-----	------------------------

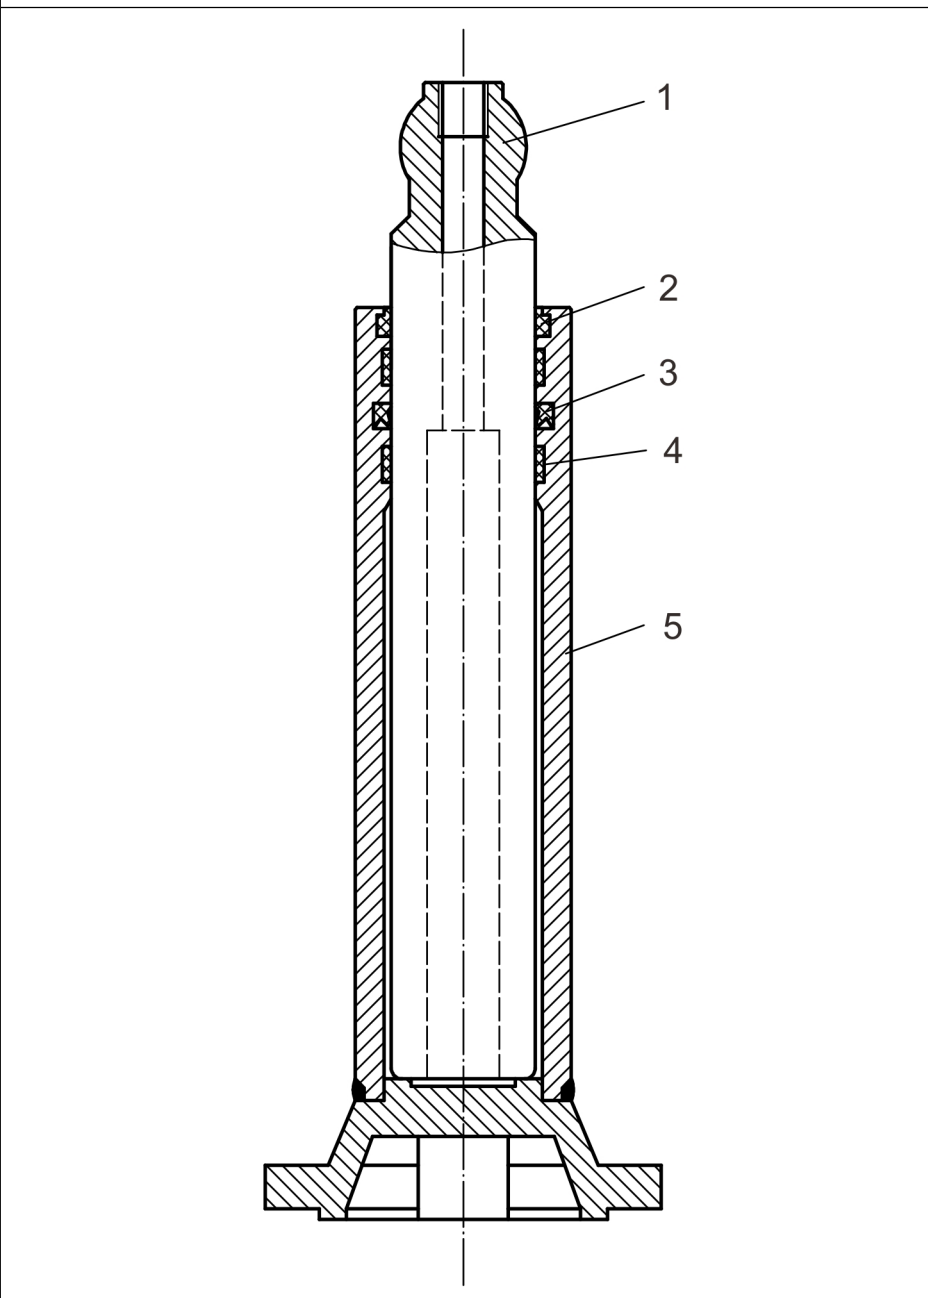
[illegible]

5.1 Electrical System
电气系统

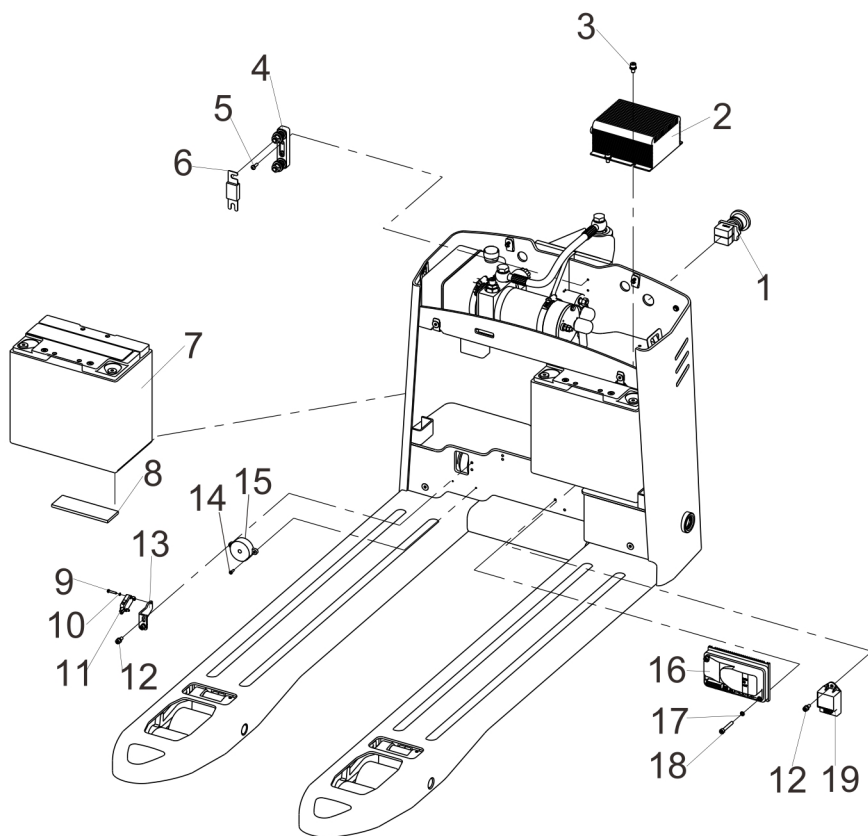


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
1	70104000003	Emergency Stop 急停开关	1		02.01.2169
2	70411010010	Charger 内置充电器 (24V8A)	1		02.CDQ.3465
2	70411010013	Charger 内置充电器 (24V10A)	1		02.CDQ.330513
2	70412010001	Charger 内置充电器 (24V10A)	1		
3	30201060038	Screw M6×12 螺钉	4		03.1231
4	70711000001	Fuse Base 熔断器座	1		02.01.3057
5	30211050003	Screw M5×12 螺钉	2		03.02261
6	70701000002	Fuse 保险丝	1		19.03450
7	70502120010	Battery 免维护电池	2		02.XDC.3460
7	70503240215	Lithium Battery 锂电池	1		
7	70503240210	Lithium Battery 锂电池	1		
7	70503240211	Lithium Battery 锂电池	1		
8	54316000005	Shock Pad 减震垫	2		30.46.0056
9	30211030004	Screw M3×16 螺钉	2		03.05360
10	30411030001	Spring Washer Φ3 弹垫	2		03.00091
11	70103000005	Micro Switch 微动开关	1		02.01.2178
12	30201050007	Screw M5×12 螺钉	3		03.1087
13	20201001295	Plate 微动开关安装板	1		
14	30211030005	Screw M3×10 螺钉	2		03.05361
15	70223000001	Horn 蜂鸣器	1		19.03620
16	70302000002	Controller 控制器 (1212P)	1		02.KZQ.2167
16	70302000113	Controller 控制器 (大能)	1		
16	70302000003	Controller 控制器 (1212C)	1		02.KZQ.2377
17	30411050001	Spring Washer Φ5 弹垫	2		03.00132
18	30201050014	Screw M5×35 螺钉	2		03.01340
19	70307000013	Low Voltage Alarm Module 低压报警模块 (铅酸)	1		


5.1	Electrical System 电气系统
-----	---------------------------

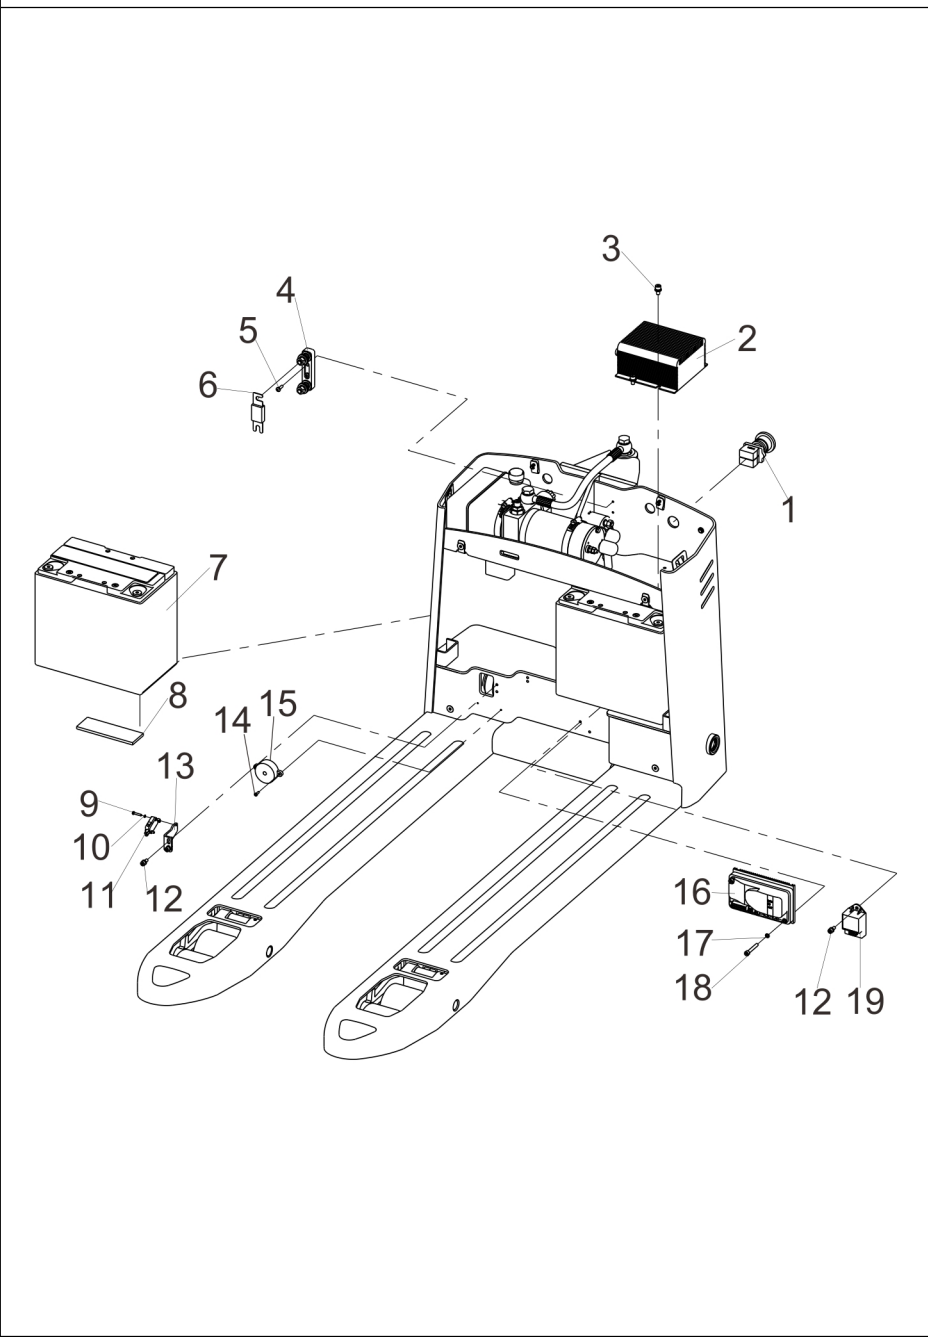[illegible]


5.2 Wiring Harness Assembly 线束总成

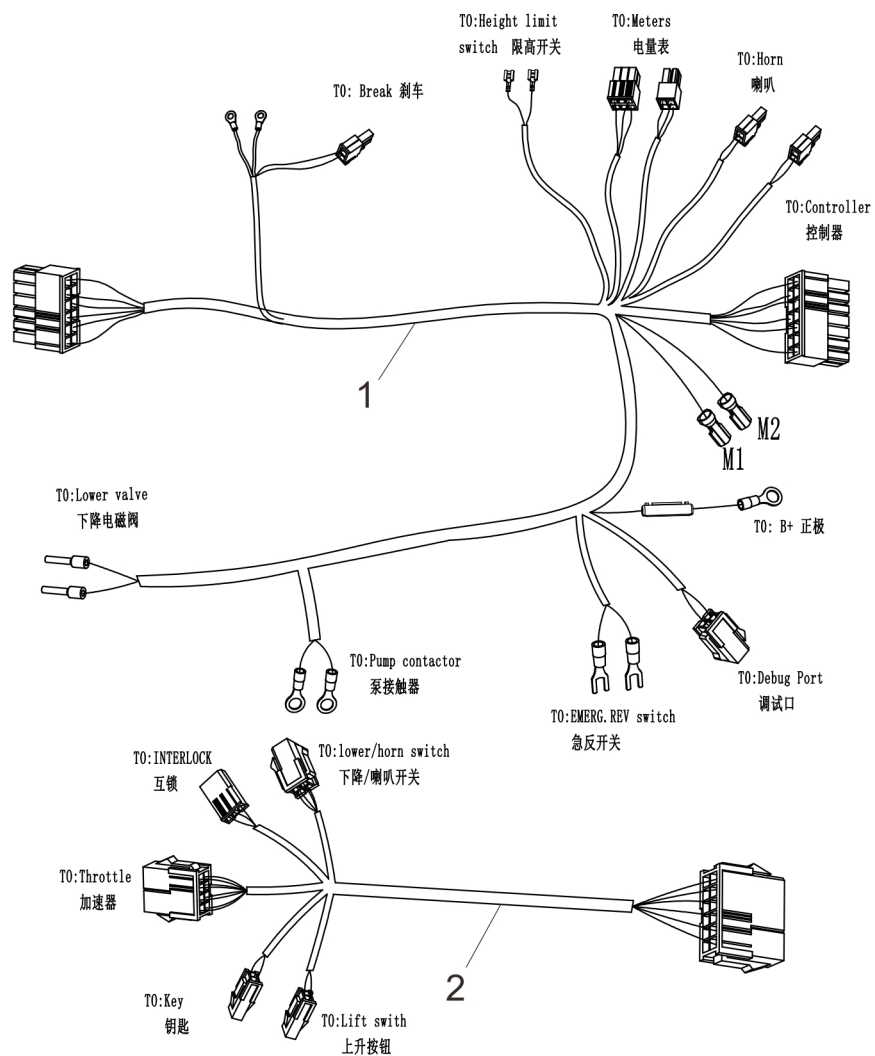[illegible]


5.3	Wiring Harness Assembly(Intelligent) 线束总成（智能）
-----	--

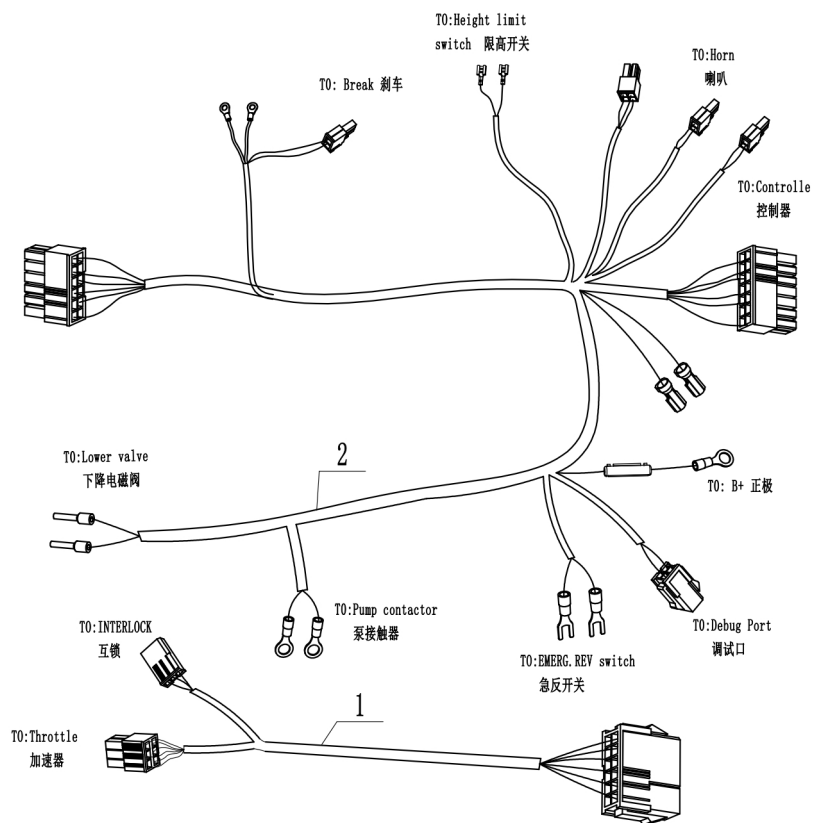[illegible]

5.4	Cable Assembly (lead acid battery) 电缆总成 (铅酸电池)
-----	---

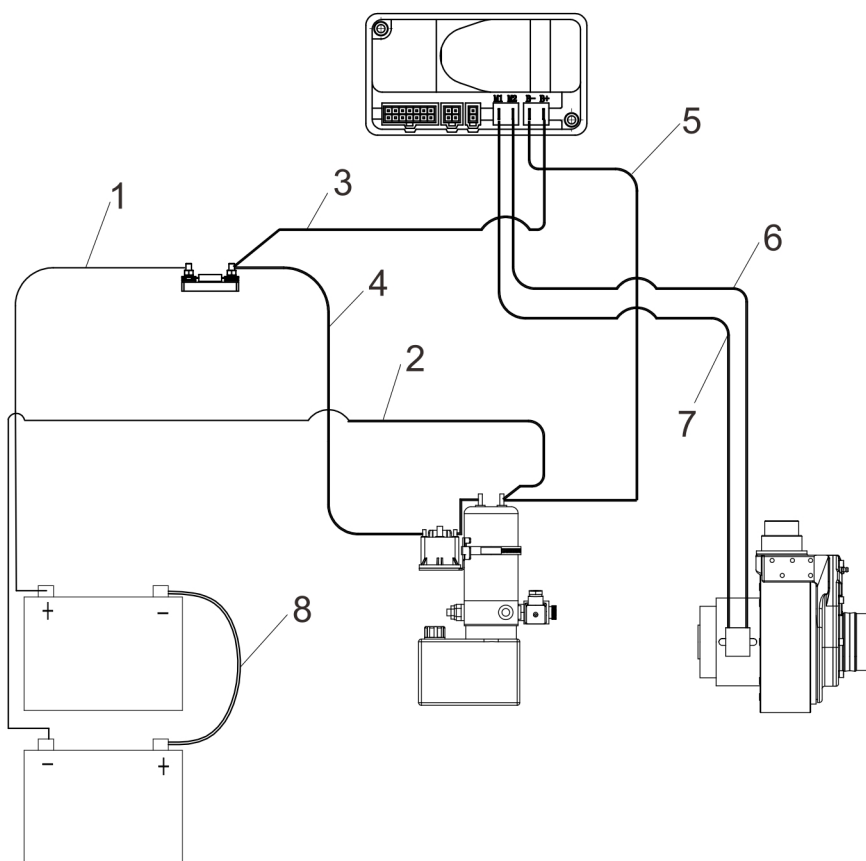[illegible]

5.5	Cable Assembly (Lithium Battery) 电缆总成(锂电)
-----	--

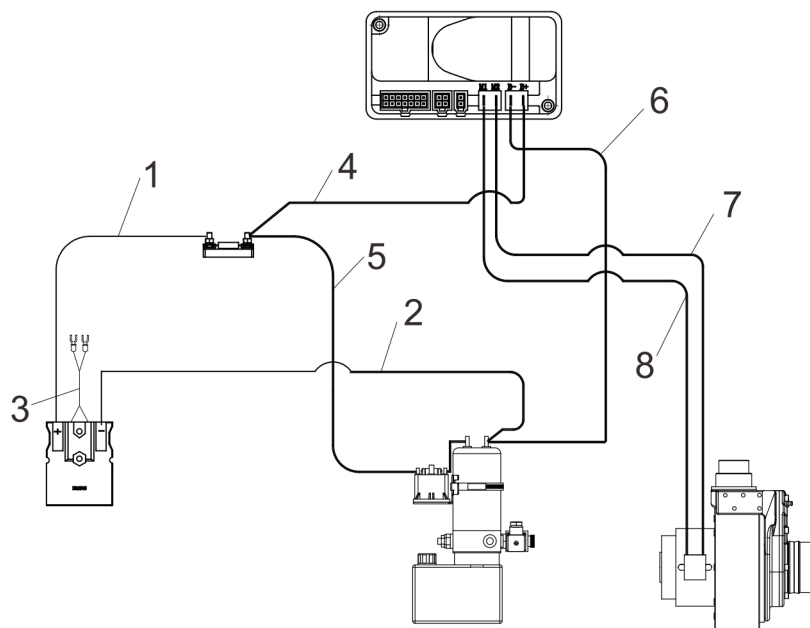[illegible]

零件目录最终由制造商保留解释权！

The power of interpretation of this part catalogue will be preserved by the manufacturer eventually!