


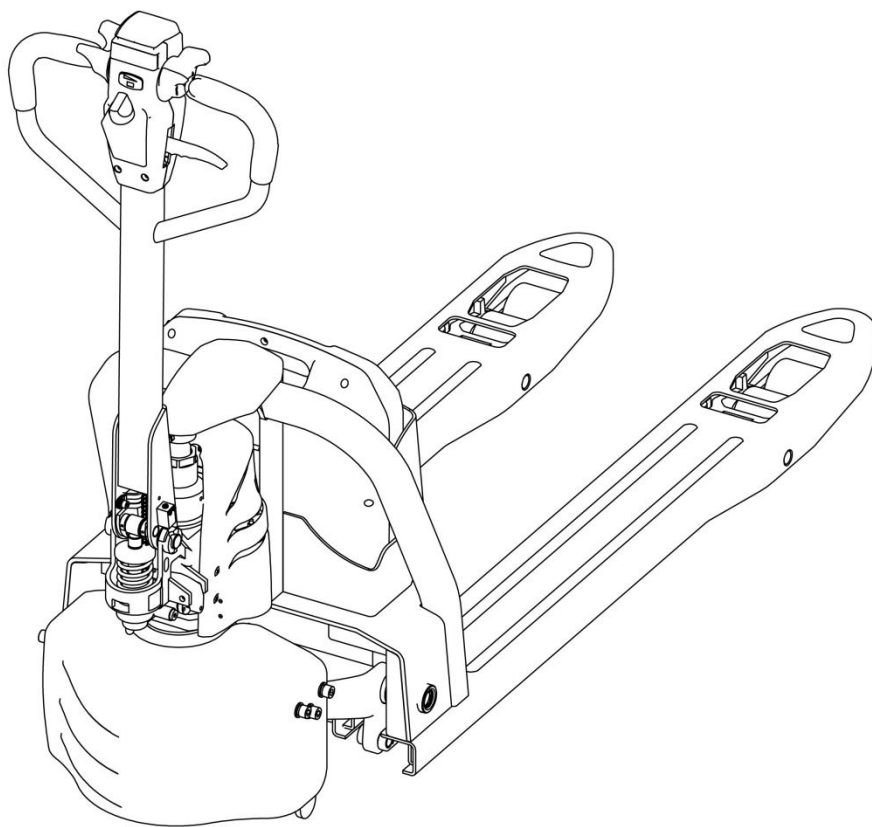

SL20L3

Electric pallet truck

电动托盘搬运车（低放手动下降）

Parts list 零件目录

20250321 V08

PARTS ORDERING INSTRUCTIONS

HOW TO ORDER

When you order, supply the part number, quantity, model and serial numbers of your machine. Supplying this information will assure prompt, efficient handing of your order.

Since your dealer carries many parts in stock and maintains up-to-date prices on all parts, he will be able to process your order immediately. If, for some reason, the part is not in stock, he will order it from the factory. In either event, he maintains a current file of service manuals, which give all available parts ordering or technical information.

WHERE TO ORDER

Always order parts from the dealer who sold you your truck. If it is necessary for the dealer to order parts from the factory, he is able to get prompt service for you. Parts are shipped in accordance with shipping instructions given on the order.

INSTRUCTIONS FOR RETURNING PARTS

Under NO CIRCUMSTANCES will parts be accepted at the factory for credit without prior approval. We cannot accept responsibility for parts returned without authorization.

If you have some parts which must be returned, contact your dealer. If he believes parts should be returned, he will arrange for authorization to return the parts.

CHANGES

When changes are made to the machine, revised pages for this manual will be issued. These pages must be inserted in your parts manual as soon as they are received.

Failure to keep your parts manuals up to date will result in confusion and may cause you to order wrong parts.

零件订购说明

如何订购

当您订购的时候，您需要提供叉车零件的编号，数量，型号和序列号。提供这些信息能够保证您的订购更加的高效。

因为您的经销商有很多零件的存货，而且需要保持所有零件的价格是最新的，所以他会尽快地处理您的订购需求。假如因为某些原因，存货中没有这个零件，那么他会从公司订货。无论怎样的情况，他手里都会有一份服务手册文件，它能提供所有可用的零件的订购信息或者技术信息。

订购地点

当您需要订购零件时，请到销售给您叉车的经销商那里订购。如果经销商有必要从公司订购零件，他能为您提供快捷的服务。根据您的订购信息，零件和它对应的操作说明会一起装好。

零件的退还说明

一般情况下，因为信用的关系，退还的零件没有事先的同意，是不会被公司认可的。我们不会对没有经过授权但退还过来的零件负责。

如果您有一些零件一定要退还，请联系您的经销商。若经销商确认零件可以退还，则其会安排授权要退还的零件。

技术修改

当叉车技术有修改时，这本手册的修正页会重新发行。当您拿到这些修正页时，您一定要立即把它们插入到您的零件手册中。若没有及时的更新您的零件手册，则可能会导致您订购、维护等方面的错误。

GENERAL INFORMATION

INDEX

This parts manual is arranged for easy identification of parts .The index at the front of the catalog gives location of major groups and assemblies.

PART LIST

The Item, describes the item on the Figure you are looking at. The Part No. is a numerical description of the item and the part ordering number. The Description is a description of the part number in alphabetical form. The Qty is the quantity used on the machine. The Applied Date is a description when the part is applicable.The Remark is the explanation of the part for a supplement such as the model the capability, the characteristic etc.

HOW TO READ PARTS MANUAL

HELP 1:

Item	Part No	Description	Qty	Applied Date	Remark
------	---------	-------------	-----	--------------	--------

A →

1		02.XDC.3556	Battery	1		24V/20AH
1		02.XDC.3557	Battery	1		24V/30AH
1		02.XDC.3558	Battery	1		24V/40AH
2		03.0132	Screw M5×8	5		

B →

7		03.0245	Nut M12	2		
8		03.04790	Spring	2		
9	01	30.01.6685	Wheel Frame	1	-210125	
9	02	40.11.048	Wheel Frame	1	210125-	

C →

6		02.KSCX.0001	Cover	1		
7		03.0243	Nut M10	2		Cancel
8		40.11.040	Roller	2		
9		03.1088	Bolt M10×60	2		

D →

3		33.054.0001	Frame (550)	1		
3		33.054.0002	Frame (685)	1		
4		03.02393	Screw M6×16	6		
5		40.18.005	Shaft (550)	1		
5		40.15.044	Shaft (685)	1		

E →

6		33.036.0007	Push Rod Welding	2		For 1800Kg
7		03.0691	Bushing Φ19×Φ16×15	4		
8		03.0305	Round Pin Φ5×30	10		

A:The part of Index 1 is Optional.

B:The part of Index 9 has an Applicability, because it's our policy to constantly improve our products.

C:The part of Index 7 indicates that the part is canceled. Note the version number when ordering.

D:The part of Index 3 indicates that the frame welds have different specifications, 550 or 685 indicates the outer width of the forks. Index 5 indicates the parts used for the outer width of the forks.

E:The part of Index 6 indicates that the part is used for model with load capacity of 1800KG.

1. Record by time

– 210125 : Ending on January 25, 2021.


210125- : Beginning on January 25, 2021.

2. Record by serial number

01 : Ending at 01

02 : Starting at 02

HELP 2:

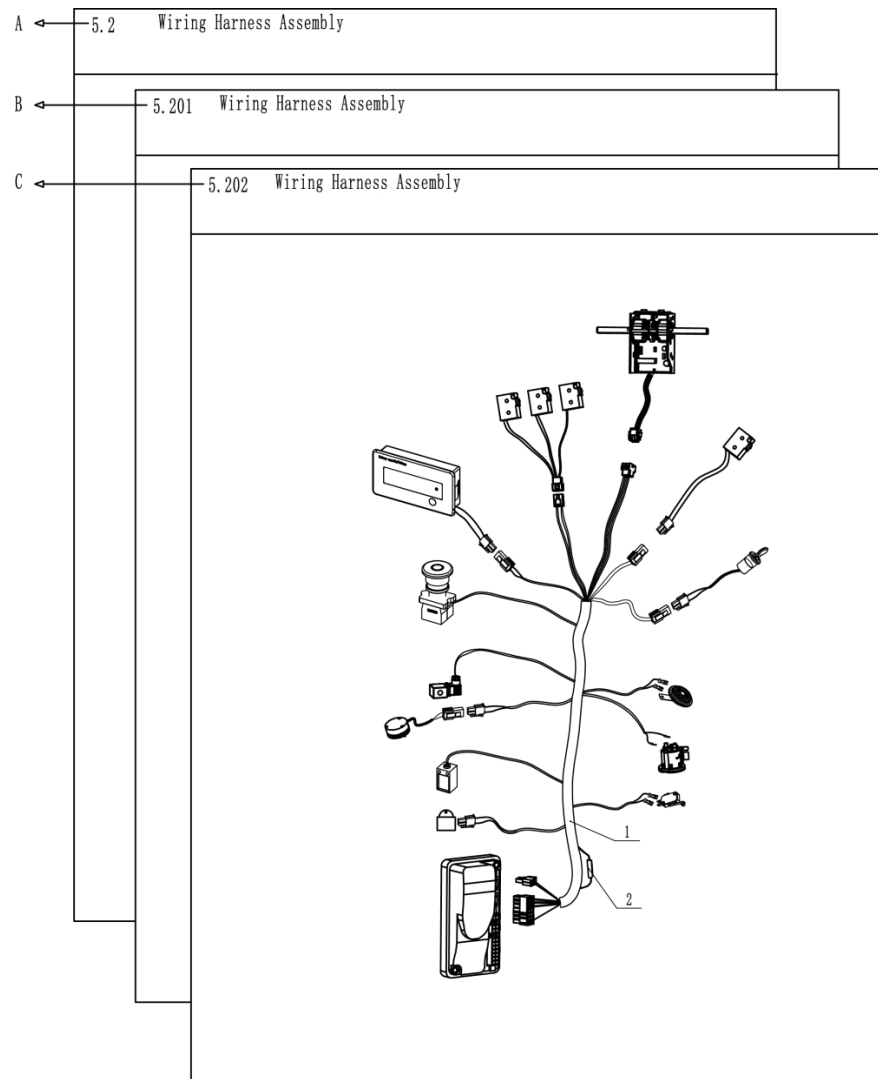

A:Section 5.2 is the original version.

B:Section 5.201 is the version that some parts in the Section 5.2 have been changed.

C:Section 5.202 is the version that some parts in the Section 5.201 have been changed.

When you order, Please locate specific parts information of your truck by the Applied Date of parts in each version.

概要
目录

将零件目录分组成几个易识别的部分，并把主要结构和总成放置在索引目录中。

零件明细表

Item 描述的是在插图上，您想要找的项目。**Part No.**是零件的一系列描述和它的订购号码。**Description** 是用文字的形式描述零件的号码。**Qty** 代表的是零件在叉车上使用的数量。**Applied Date** 表示的是零件适用的时间范围。**Remark** 是用来补充说明零件信息(例如车型、性能和特征等)。

怎么读取零件明目录

帮助 1:

Item 序号		Part No 代码	Description 名称		Qty 数量	Applied Date 适用日期	Remark 备注
A	➡	1		02. XDC. 3556	Battery 锂电池	1	24V/20AH
		1		02. XDC. 3557	Battery 锂电池	1	24V/30AH
		1		02. XDC. 3558	Battery 锂电池	1	24V/40AH
		2		03. 0132	Screw M5×8 螺钉	5	
B	➡	7		03. 0245	Nut M12 螺母	2	
		8		03. 04790	Spring 弹簧	2	
		9	01	30. 01. 6685	Wheel Frame 轮架	1	-210125
		9	02	40. 11. 048	Wheel Frame 轮架	1	210125-
C	➡	6		02. KSCX. 0001	Cover 前盖板	1	
		7		03. 0243	Nut M10 螺母	2	Cancel/取消
		8		40. 11. 040	Roller 滚子	2	
		9		03. 1088	Bolt M10×60 螺栓	2	
D	➡	3		33. 054. 0001	Frame (550) 车架	1	
		3		33. 054. 0002	Frame (685) 车架	1	
		4		03. 02393	Screw M6×16 螺钉	6	
		5		40. 18. 005	Shaft (550) 支撑轴	1	
		5		40. 15. 044	Shaft (685) 支撑轴	1	
E	➡	6		33. 036. 0007	Push Rod Welding 推杆	2	For 1800Kg
		7		03. 0691	BushingΦ19×Φ16×15 复合套	4	
		8		03. 0305	Round PinΦ5×30 弹性圆柱销	10	

A: 序号 1 表示该零件有几个品种可供您的选择。

B: 序号 9 表示该零件有一个适用的时间范围。这是因为我们在不断地进行产品的升级。

C: 序号 7 表示该零件取消，订购时注意版本号。

D: 序号 3 表示车架焊接体有不同的规格，550 或 685 表示货叉的外宽。序号 5 表示配用于货叉外宽的零部件。

E: 序号 6 表示该零件配用载重 1800KG 车型。

1. 用时间记录

– **210125** : 截止到 2021 年 01 月 25 日


210125- : 起始于 2021 年 01 月 25 日

2. 用序列号记录

01 : 截止序列号 01

02 : 起始序列号 02

帮助 2:

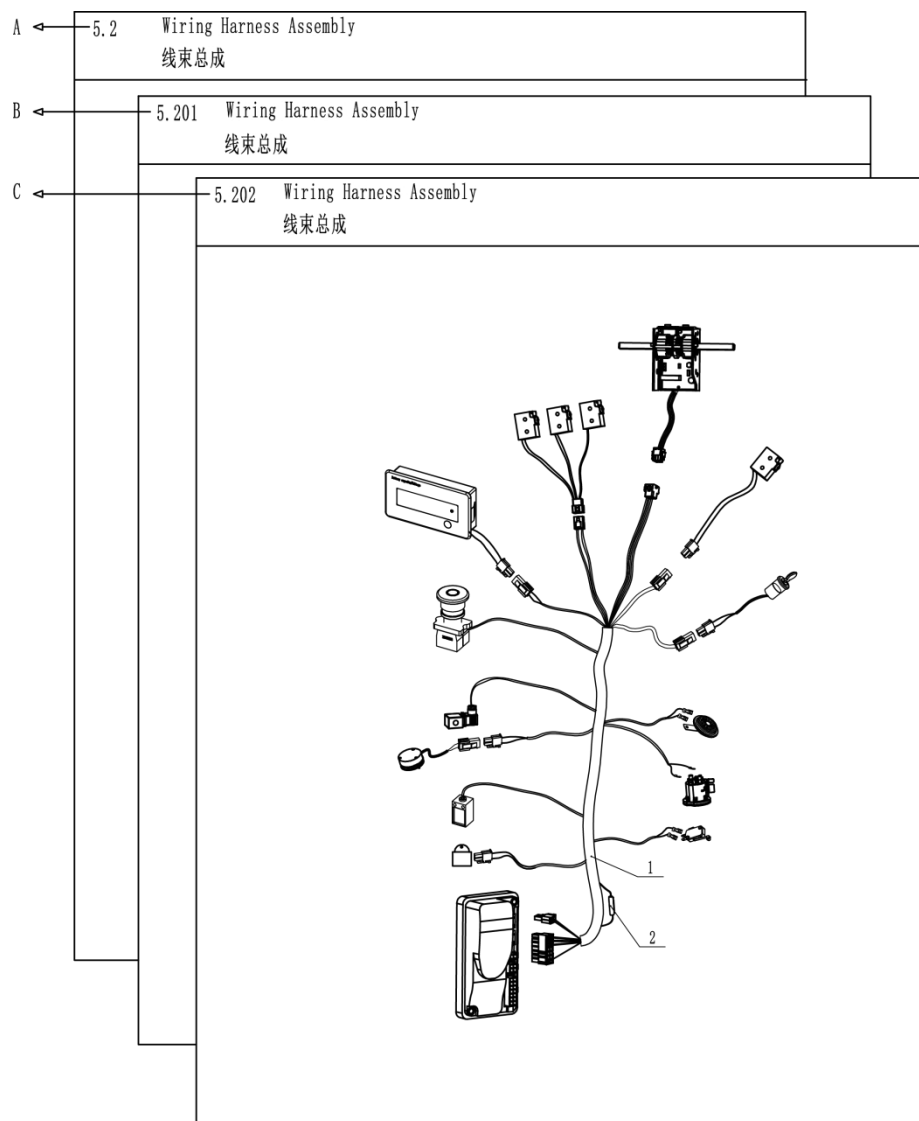

A: 章节 5.2 表示原始版本;

B: 章节 5.201 表示在原始版本 (章节 5.2) 上零件有所变更;

C: 章节 5.202 表示在变更版本 (章节 5.201) 上零件有所变更。

当您订购零件时, 请根据每个版本中零件的适用时间来判断您所选购车型的零件信息。

Index 目录

1. Frame System 车身系统

1.101 Frame System 车架系统.....	1
1.2 Connecting Rod Rocker Assembly(Double Wheel)连杆摇臂组件（双轮）	2
1.3 Connecting Rod Rocker Assembly 连杆摇臂组件（双轮 双面托盘）	3
1.4 Connecting Rod Rocker Assembly(Single Wheel)连杆摇臂组件（单轮）	4
1.5 Connecting Rod Rocker Assembly 连杆摇臂组件（单轮 双面托盘）	5
1.6 Cover Assembly 外罩总成.....	6

2. Driving System 驱动系统

2.101 Driving System 驱动系统.....	7
2.201 Driving System(For Caster Assembly)驱动系统(带辅助轮).....	8
2.301 Driving Assembly 驱动总成.....	9
2.4 Caster Assembly 辅助轮组件.....	11

3. Operating System 操作系统

3.101 Operating Handle Assembly 操作手柄组件.....	12
3.2 Control Pod Assembly 手柄头总成.....	14


4. Hydraulic System 液压系统

4.101 Hydraulic System 液压系统.....	15
4.201 Power Unit Assembly 动力单元组件.....	16
4.3 Lifting Cylinder 起升油缸.....	17
5. Electric System 电气系统	
5.1 Electric System 电气系统.....	19
5.2 Wiring Harness Assembly 线束总成(1226BL-4101)	20
5.3 Wiring Harness Assembly 线束总成(PVM48S09)	21
5.4 Cable Assembly 电缆总成(1226BL-4101)	22
5.5 Cable Assembly 电缆总成(PVM48S09)	23

修订记录

版 本	修订人	更改编号	修订事项
20250213 V07	朱阳敏	NO. 2024246	①：2. 101 代码 52101000054 驱动总成更改为 52101000122 驱动总成； ②：2. 201 代码 52101000054 驱动总成更改为 52101000122 驱动总成； ③：2. 301 代码 52101000054 驱动总成更改为 52101000122 驱动总成，代码 30601050004 平键销更改为 30601050006 平键销，代码 52201150006 传动齿轮更改为 52201150011 传动齿轮，代码 52202120004 被动斜齿轮更改为 52202120013 被动斜齿轮，代码 30701017001 轴承更改为 30701017003 轴承，代码 52105000005 齿轮箱更改为 52105000067 齿轮箱。 ④：3. 101 新增代码 20371025010 指状把手拉杆组件。
20250321 V08	莫敏萍	No. 2025090	4. 101 中 40401048001 动力单元更改为 40401048017 动力单元； 4. 201 中 40401048001 动力单元更改为 40401048017 动力单元；70402000023 提升电机更改为 70402000015 提升电机；取消 40411000084 联轴器；

1.101 Frame System
车架系统

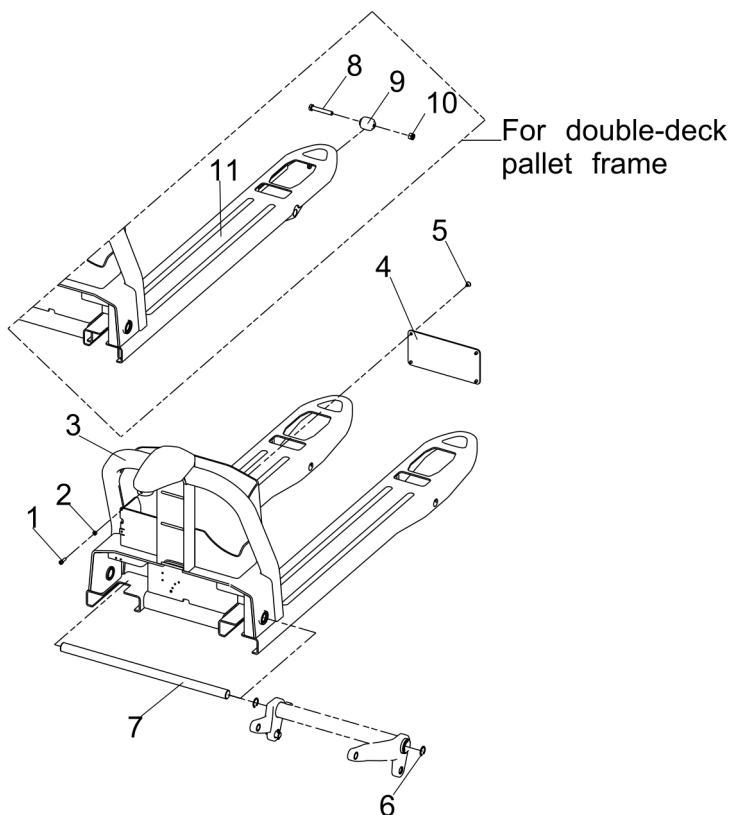

Note 1:Item 3 is the lowest height of forks(to the ground), 75mm,65mm are available. 注释1:
序号3为车架的货叉离地高度, 有75mm,65mm。

Note 2:Item 8.9.10.11 Used for double-sided pallet frame.


注释 2: 序号 8.9.10.11 用于双面托盘车架。

[illegible]

1.2


Connecting Rod Rocker Assembly(Double Wheel)

连杆摇臂组件（双轮）

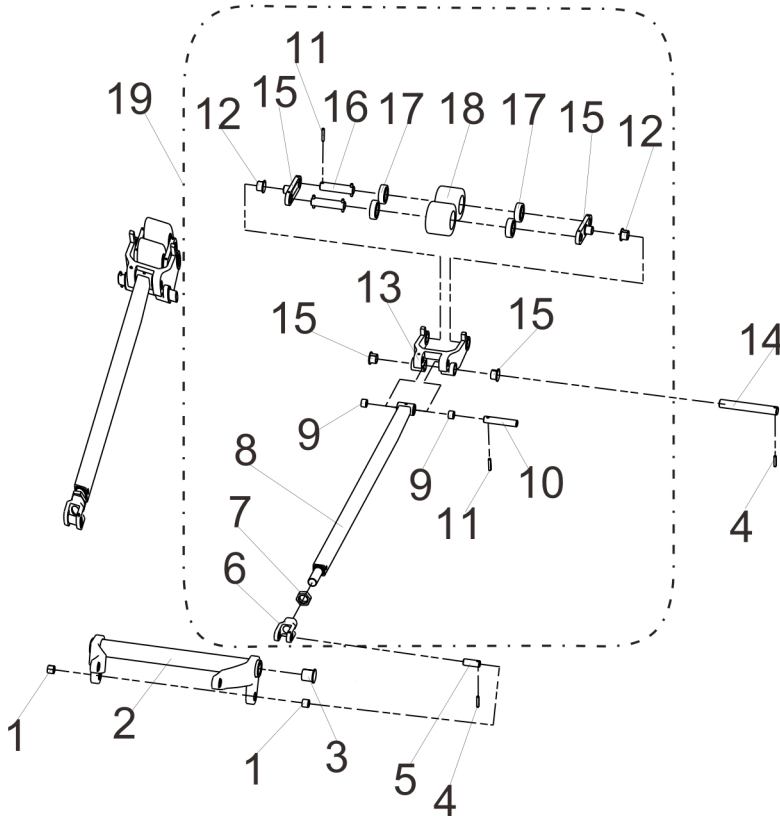


Item	Part No.	Description	Qty	Applied Date	Remark
序号	代码	名称	数量	适用日期	备注
A		20302020210 Connecting Rod Rocker arm Assembly 连杆摇臂组件	2		
1		54002000017 Bushing $\Phi 19 \times \Phi 16 \times 15$ 复合套	4		03. 0691
2		55102000106 Ring Rod (550) 圆环棒 (H=75mm)	1		33. 050. 0012
2		55102000108 Ring Rod (685) 圆环棒 (H=75mm)	1		33. 050. 0013
2		55102000070 Ring Rod (550) 圆环棒 (H=65mm)	1		
2		55102000071 Ring Rod (685) 圆环棒 (H=65mm)	1		
3		54001000003 Bushing $\Phi 28 \times \Phi 25 \times 27$ 带肩复合套	2		03. 04422
4		30501050008 Round Pin $\Phi 5 \times 30$ 弹性圆柱销	4		03. 0305
5		50101160009 Shaft 小轴	2		40. 14. 052
6		55502000003 Push Rod Bracket 推杆叉	2		40. 14. 048
7		30301220002 Nut M22 $\times$ 1. 5 螺母	2		03. 0286
8		55501000186 Push Rod Welding 推杆 (H=75mm)	2		
8		55501000102 Push Rod Welding 推杆 (H=65mm)	2		
9		54002000024 Bushing $\Phi 19 \times \Phi 16 \times 12$ 复合套	4		03. 0451
10		50101160004 Shaft 推杆安装轴	2		40. 11. 038
11		30501050003 Round Pin $\Phi 5 \times 35$ 弹性圆柱销	10		03. 0303
12		54001000009 Bushing $\Phi 23 \times \Phi 20 \times 16. 5$ 带肩复合套	8		03. 0453
13		55103000011 Wheel Bracket 轮架 (H=75mm)	2		
13		55103000012 Wheel Bracket 轮架 (H=65mm)	2		
14		50101200055 Shaft 轮架安装轴	2		
15		51251000014 Bracket 连板	4		30. 01. 1290
16		50101200008 Shaft 承载轮销轴	4		40. 11. 039
17		30701020003 Bearing 6904 轴承 (H=75/65mm)	8		03. 90. 005
18		51241000031 Loading Wheel 承载轮 (H=75mm)	4		02. LZ. 01261
18		51241000028 Loading Wheel 承载轮 (H=65mm)	4		02. LZ. 0126
19		20302020211 Double Wheel linkage wheel Frames 双轮连杆轮架	2		

1.3 Connecting Rod Rocker Assembly
连杆摇臂组件(双轮 双面托盘)

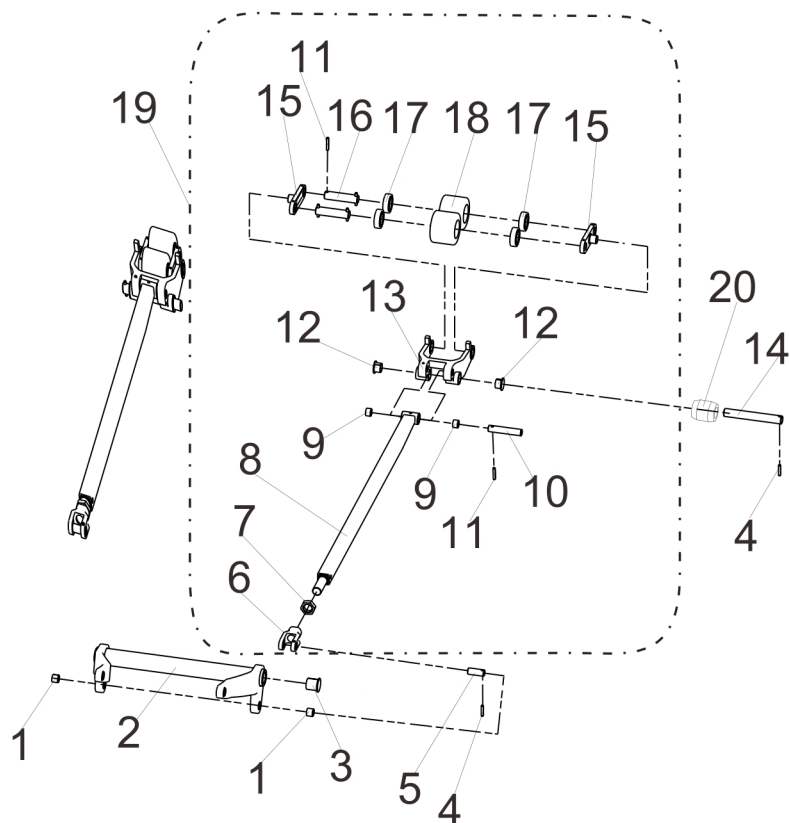


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	20301020797	Connecting Rod Rocker arm Assembly 连杆摇臂组件	2		
1	54002000017	Bushing $\Phi 19 \times \Phi 16 \times 15$ 复合套	4		03. 0691
2	55102000106	Ring Rod (550) 圆环棒 (H=75mm)	1		33. 050. 0012
2	55102000108	Ring Rod (685) 圆环棒 (H=75mm)	1		33. 050. 0013
3	54001000003	Bushing $\Phi 28 \times \Phi 25 \times 27$ 带肩复合套	2		03. 04422
4	30501050008	Round Pin $\Phi 5 \times 30$ 弹性圆柱销	4		03. 0305
5	50101160009	Shaft 小轴	2		40. 14. 052
6	55502000003	Push Rod Bracket 推杆叉	2		40. 14. 048
7	30301220002	Nut M22 $\times 1.5$ 螺母	2		03. 0286
8	55501000186	Push Rod Welding 推杆 (H=75mm)	2		
9	54002000024	Bushing $\Phi 19 \times \Phi 16 \times 12$ 复合套	4		03. 0451
10	50101160004	Shaft 推杆安装轴	2		40. 11. 038
11	30501050003	Round Pin $\Phi 5 \times 35$ 弹性圆柱销	10		03. 0303
12	54001000009	Bushing $\Phi 23 \times \Phi 20 \times 16.5$ 带肩复合套	4		03. 0453
13	55103000011	Wheel Bracket 轮架 (H=75mm)	2		
14	50101200004	Shaft 轮架安装轴	2		40. 11. 036
15	51251000014	Bracket 连板	4		30. 01. 1290
16	50101200008	Shaft 承载轮销轴	4		40. 11. 039
17	30701020003	Bearing 6904 轴承 (H=75mm)	8		03. 90. 005
18	51241000031	Loading Wheel 承载轮 (H=75mm)	4		02. LZ. 01261
19	20301020798	Double Wheel linkage wheel Frames 双轮连杆轮架	2		
20	51108000016	Roller 滚子	2		40. 11. 041

1.4 Connecting Rod Rocker Assembly(Single Wheel)
连杆摇臂组件（单轮）

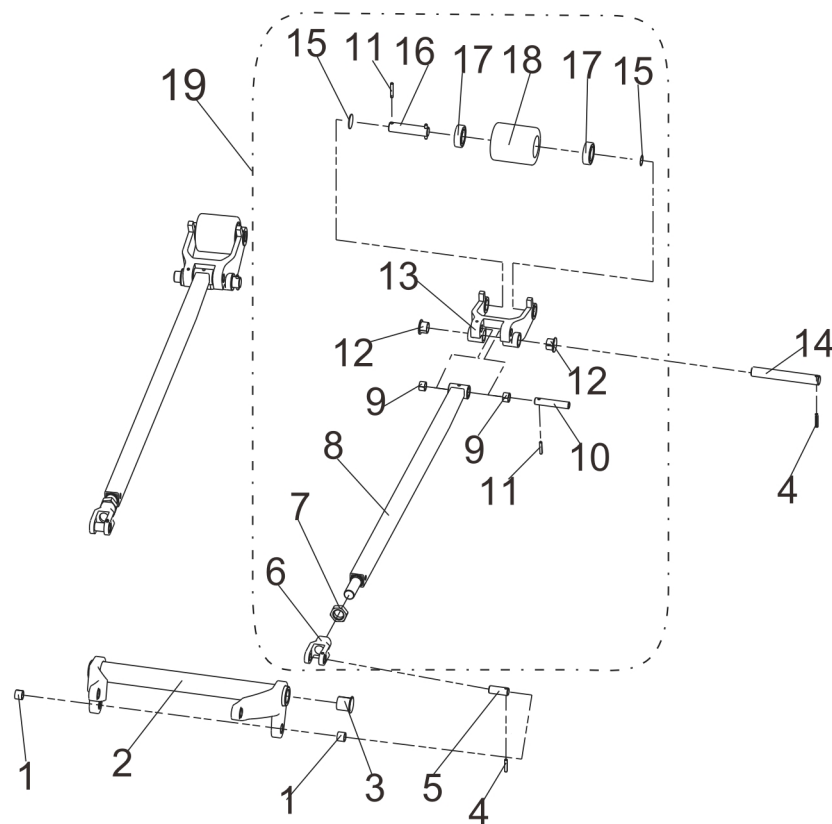


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	20302020212	Connecting Rod Rocker arm Assembly 连杆摇臂组件	2		
1	54002000017	Bushing $\Phi 19 \times \Phi 16 \times 15$ 复合套	4		03. 0691
2	55102000106	Ring Rod (550) 圆环棒 (H=75mm)	1		33. 050. 0012
2	55102000108	Ring Rod (685) 圆环棒 (H=75mm)	1		33. 050. 0013
2	55102000070	Ring Rod (550) 圆环棒 (H=65mm)	1		
2	55102000071	Ring Rod (685) 圆环棒 (H=65mm)	1		
3	54001000003	Bushing $\Phi 28 \times \Phi 25 \times 27$ 带肩复合套	2		03. 04422
4	30501050008	Round Pin $\Phi 5 \times 30$ 弹性圆柱销	4		03. 0305
5	50101160009	Shaft 小轴	2		40. 14. 052
6	55502000003	Push Rod Bracket 推杆叉	2		40. 14. 048
7	30301220002	Nut M22 $\times 1.5$ 螺母	2		03. 0286
8	55501000186	Push Rod Welding 推杆 (H=75mm)	2		
8	55501000102	Push Rod Welding 推杆 (H=65mm)	2		
9	54002000024	Bushing $\Phi 19 \times \Phi 16 \times 12$ 复合套	4		03. 0451
10	50101160004	Shaft 推杆安装轴	2		40. 11. 038
11	30501050003	Round Pin $\Phi 5 \times 35$ 弹性圆柱销	4		03. 0303
12	54001000009	Bushing $\Phi 23 \times \Phi 20 \times 16.5$ 带肩复合套	4		03. 0453
13	55103000006	Wheel Bracket 轮架 (H=75mm)	2		40. 11. 037-2
13	55103000014	Wheel Bracket 轮架 (H=65mm)	2		40. 11. 089
14	50101200055	Shaft 轮架安装轴	2		
15	50301200019	Washer 垫圈	Req.		03. 0950
16	50101200019	Shaft 承载轮销轴	2		30. 01. 3629
17	30701020007	Bearing 6204 轴承 (H=75mm)	4		03. 90. 057
17	30701020003	Bearing 6904 轴承 (H=65mm)	4		03. 90. 005
18	51241000132	Loading Wheel 承载轮 (H=75mm)	2		
18	51241000102	Loading Wheel 承载轮 (H=65mm)	2		
19	20302020213	Single Wheel linkage wheel Frames 单轮连杆轮架	2		


1.5 Connecting Rod Rocker Assembly 连杆摇臂组件(单轮 双面托盘)						
Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注	
A	20301020799	Connecting Rod Rocker arm Assembly 连杆摇臂组件	2			
1	54002000017	Bushing $\Phi 19 \times \Phi 16 \times 15$	复合套	4		03. 0691
2	55102000106	Ring Rod (550)	圆环棒 (H=75mm)	1		33. 050. 0012
2	55102000108	Ring Rod (685)	圆环棒 (H=75mm)	1		33. 050. 0013
3	54001000003	Bushing $\Phi 28 \times \Phi 25 \times 27$	带肩复合套	2		03. 04422
4	30501050008	Round Pin $\Phi 5 \times 30$	弹性圆柱销	4		03. 0305
5	50101160009	Shaft	小轴	2		40. 14. 052
6	55502000003	Push Rod Bracket	推杆叉	2		40. 14. 048
7	30301220002	Nut M22 $\times 1.5$	螺母	2		03. 0286
8	55501000186	Push Rod Welding	推杆 (H=75mm)	2		
9	54002000024	Bushing $\Phi 19 \times \Phi 16 \times 12$	复合套	4		03. 0451
10	50101160004	Shaft	推杆安装轴	2		40. 11. 038
11	30501050003	Round Pin $\Phi 5 \times 35$	弹性圆柱销	4		03. 0303
12	54001000009	Bushing $\Phi 23 \times \Phi 20 \times 16.5$	带肩复合套	4		03. 0453
13	55103000006	Wheel Bracket	轮架 (H=75mm)	2		40. 11. 037-2
14	50101200004	Shaft	轮架安装轴	2		40. 11. 036
15	50301200019	Washer	垫圈	Req.		03. 0950
16	50101200019	Shaft	承载轮销轴	2		30. 01. 3629
17	30701020007	Bearing 6204	轴承 (H=75mm)	4		03. 90. 057
18	51241000132	Loading Wheel	承载轮 (H=75mm)	2		
19	20301020800	Single Wheel linkage wheel Frames 单轮连杆轮架	2			
20	51108000016	Roller	滚子	2		40. 11. 041

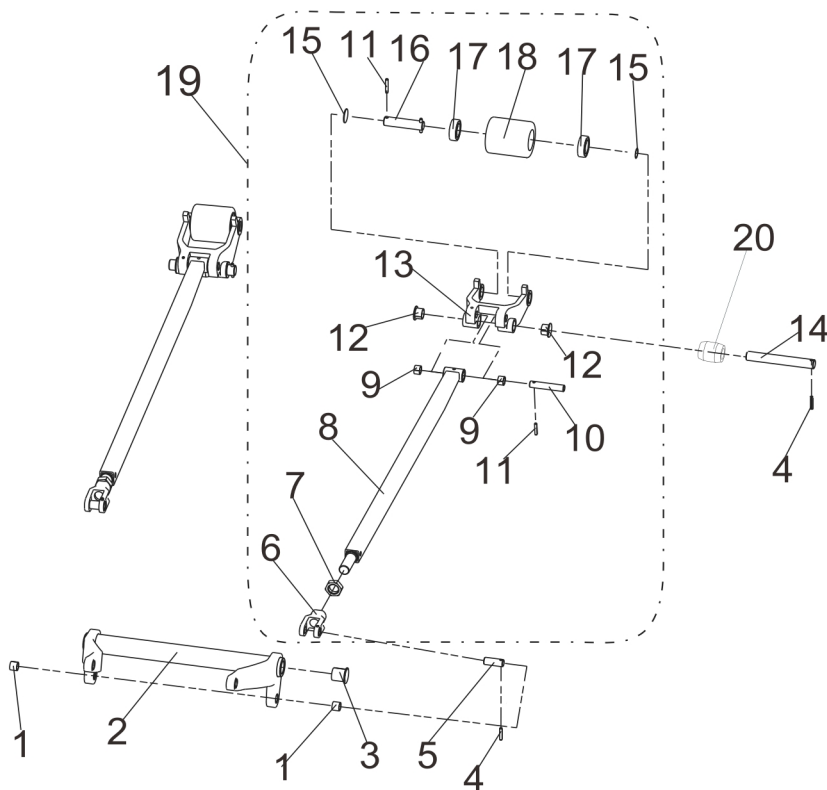


1.6	Cover Assembly 外罩总成
-----	------------------------

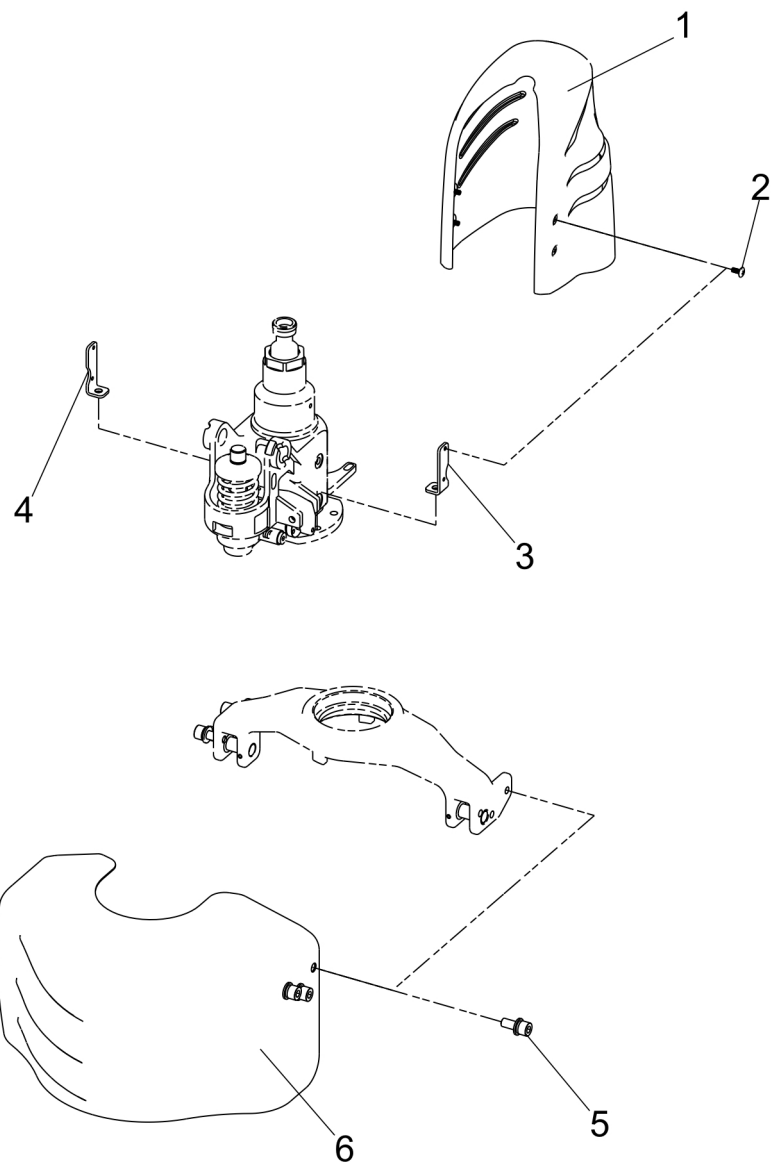[illegible]


2.101 Driving System

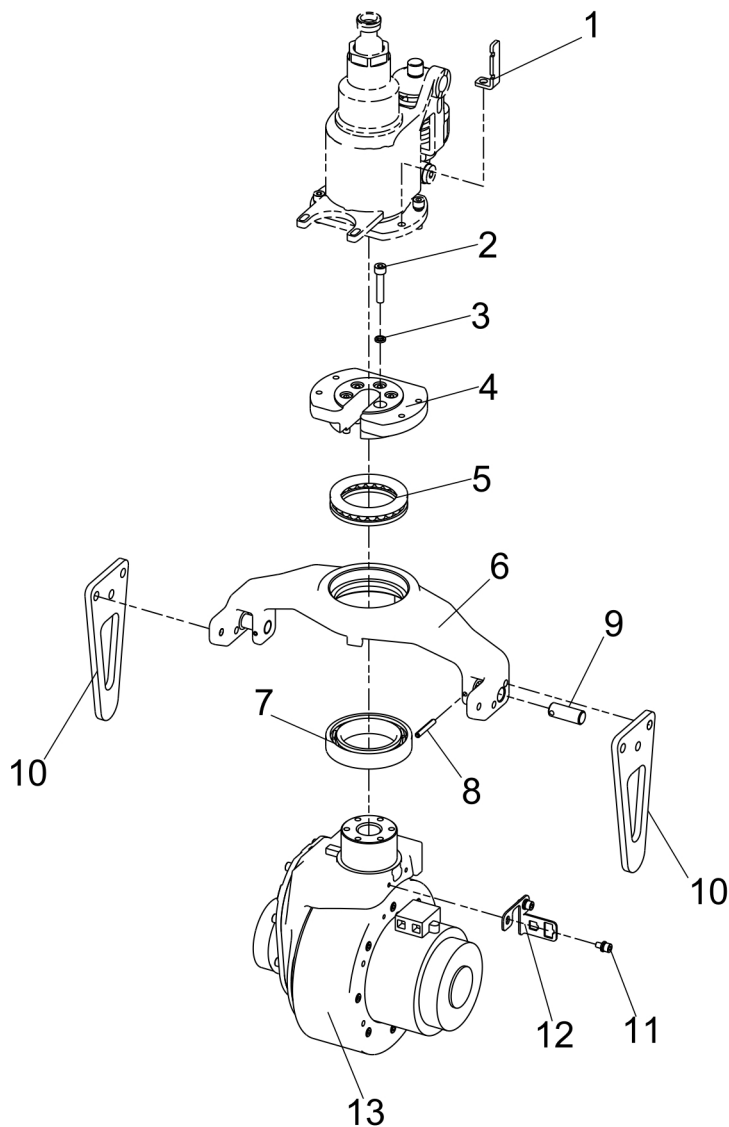[illegible]

2.201 Driving System(For Caster Assembly) 驱动系统(带辅助轮)

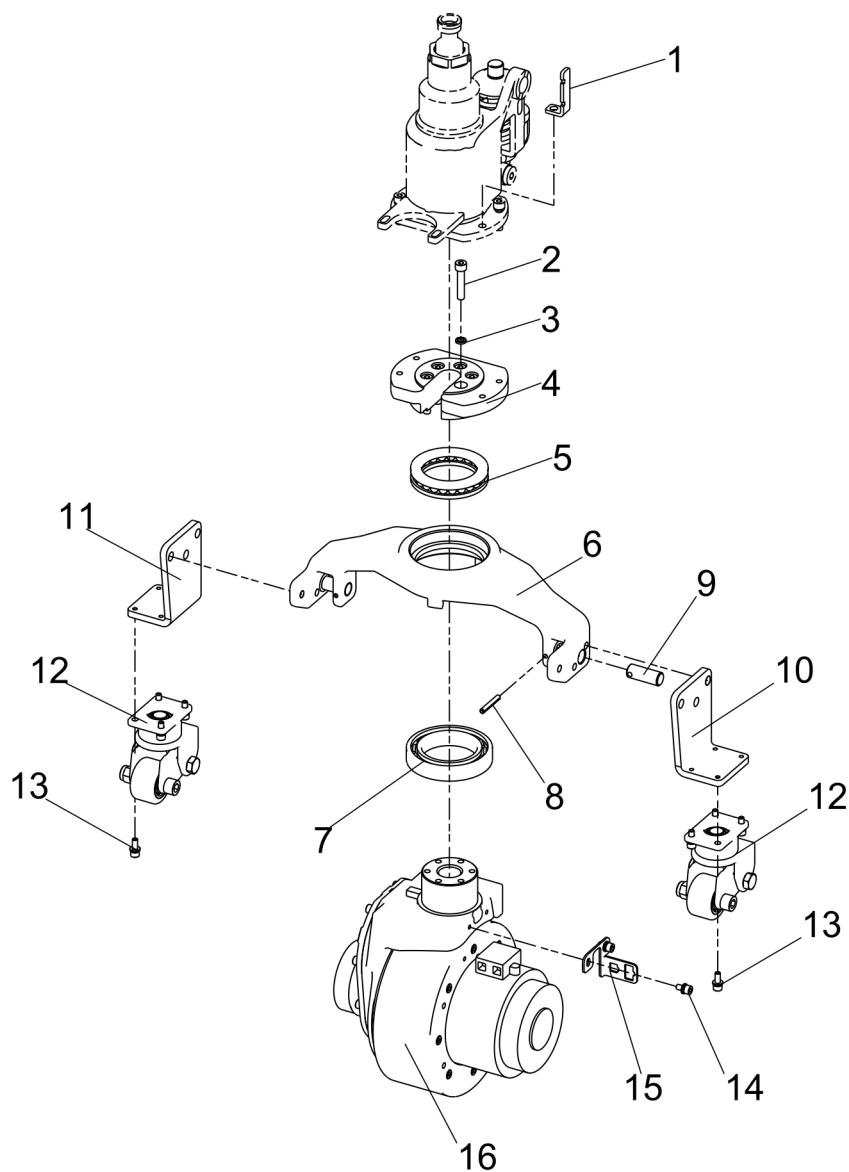
[illegible]

2.301 Driving Assembly
驱动总成

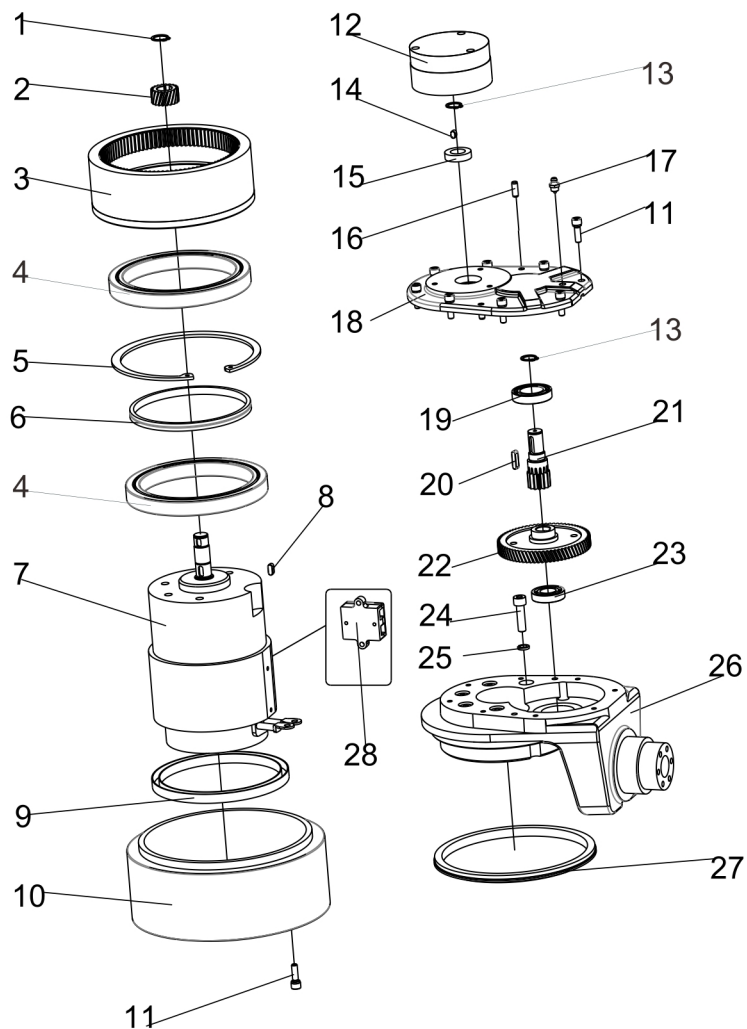


Item 序号		Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	01	52101000054	Driving Assembly 驱动总成	1	-250213	02.QD.0289
A	02	52101000122	Driving Assembly 驱动总成	1	250213-	
1		30421160001	Cir clip For Shaft Φ16 轴用挡圈	1		03.0062
2		52202120001	Driving Gear 主动斜齿轮	1		02.01.00702
3		52201150005	Internal Gear 内齿轮	1		02.01.00684
4		30701120003	Bearing 61824 轴承	2		02.01.006810
5		30421000002	Cir clip For Hole Φ150 孔用挡圈	1		03.0709
6		52105000040	Spacer 隔套	1		02.01.9294
7		70402000021	Motor 电机	1		02.DJ.33636
8		30601050003	Flat Key Pin 平键销	1		03.0716
9		30802128001	Oil Seal 油封	1		02.01.3703
10		51241000104	Driving Wheel 驱动轮	1		02.QDL.0272
11		30201060003	Screw M6×20 螺钉	16		03.1180
12		55704000002	Brake Assembly 刹车总成	1		02.QD.0285
13		30421150001	Cir clip For Shaft Φ15 轴用挡圈	2		03.0061
14		30601050005	Flat Key Pin 平键销	1		03.0975
15		30802016001	Oil Seal 油封	1		03.0719
16		30501060003	Cylindrical Pin Φ6×16 圆柱销	2		03.0439
17		30821008001	Grease Fitting 黄油嘴	1		03.0506
18		52105000041	Gearbox Cover 箱盖	1		02.01.210707
19		30701025001	Bearing 61905 轴承	1		03.90.075
20	01	30601050004	Flat Key Pin 平键销	1	-250213	03.0717
20	02	30601050006	Flat Key Pin 平键销	1	250213-	
21	01	52201150006	Transmission Gear 传动齿轮	1	-250213	02.01.00701
21	02	52201150011	Transmission Gear 传动齿轮	1	250213-	
22	01	52202120004	Driven Gear 被动斜齿轮	1	-250213	02.01.00703
22	02	52202120013	Driven Gear 被动斜齿轮	1	250213-	
23	01	30701017001	Bearing 16003 轴承	1	-250213	03.90.074


2.301	Driving Assembly 驱动总成
-------	--------------------------

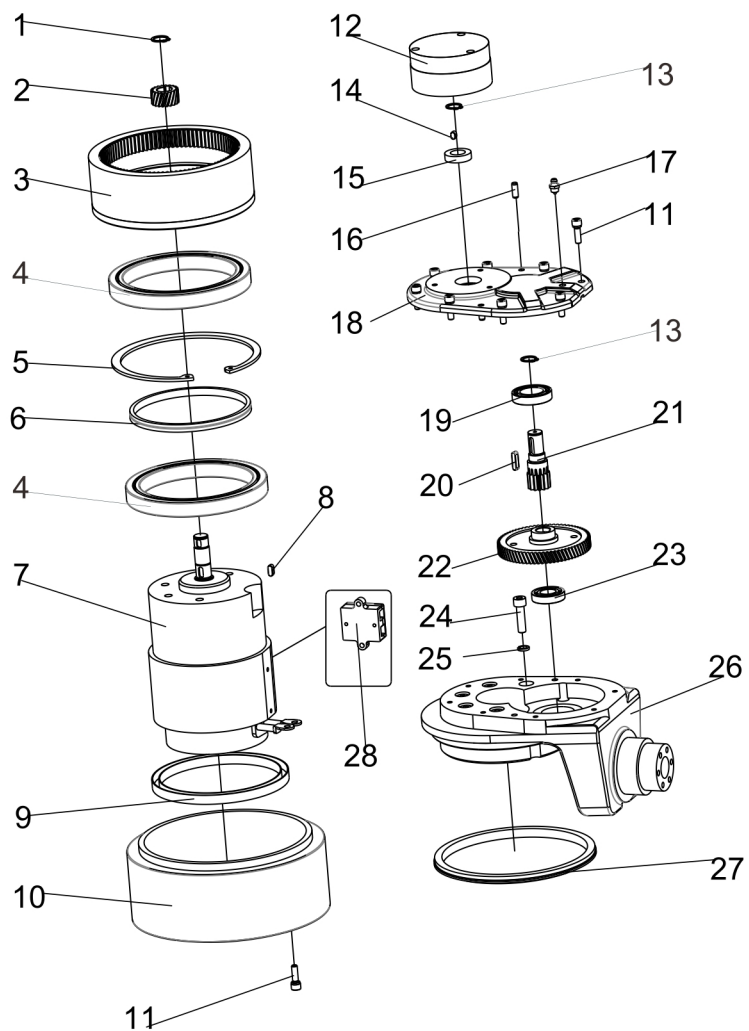[illegible]

2.4	Caster Assembly 辅助轮组件
-----	--------------------------

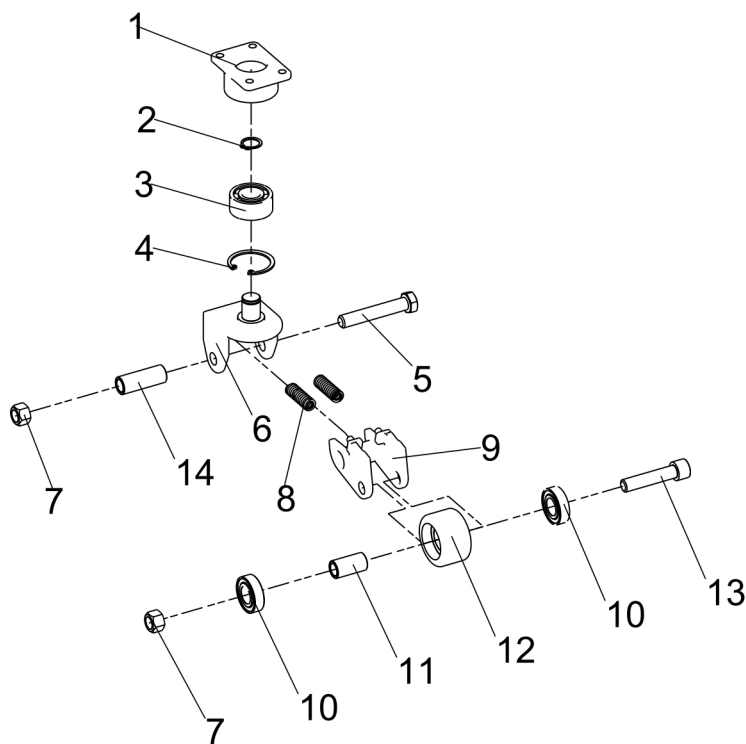
[illegible]

3.101	Operating Handle Assembly 操作手柄组件
-------	-------------------------------------

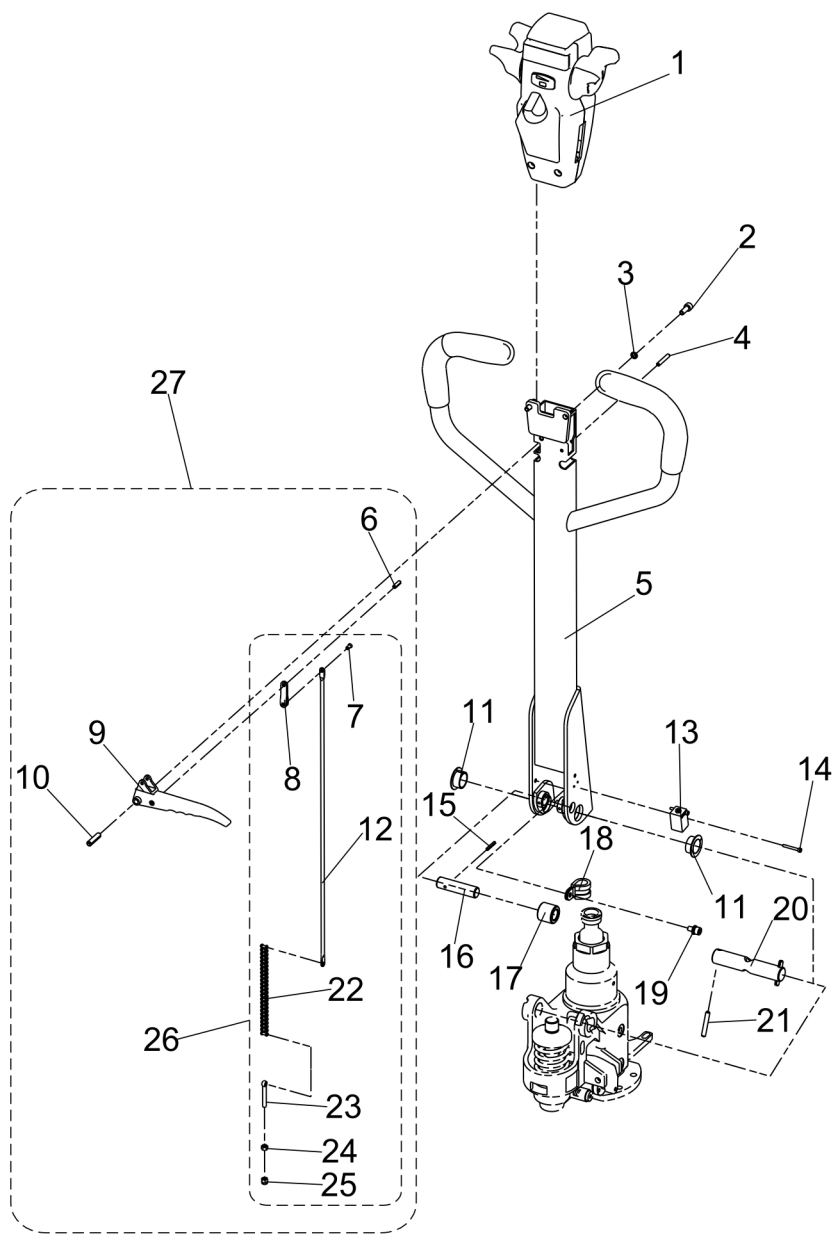


Item		Part No.	Description		Qty	Applied Date	Remark
序号		代码	名称		数量	适用日期	备注
A		20302020206	Operating Handle Assembly	操作手柄组件	1		
1		71501000015	Control Pod Assembly	手柄头总成	1		
2		30201060020	Screw M6×16	螺钉	2		03. 0147
3		30411060002	Lock Washer Φ6	弹垫	2		03. 0011
4		30501040006	Round PinΦ4×30	弹性圆柱销	1		03. 03101
5		55221000001	Control Handle	手柄杆	1		30. 20. 0010
6		30501040008	Round PinΦ4×16	弹性圆柱销	1		03. 0312
7		30511040008	Pin Shaft Φ4×8	销轴	1		03. 0703
8		55222000010	Connecting Board	连板	1		30. 01. 3268
9		55222000037	Knob	拉手	1		30. 01. 3270
10		30501060007	Round PinΦ6×30	弹性圆柱销	1		03. 0440
11		54001000001	BushingΦ23×Φ20×10	带肩复合套	1		03. 0692
12		55222000049	Pull Rod	拉杆	1		
13		70109000003	Proximity Switch	接近开关	1		19. 1052
14		30201030004	Screw M3×25	螺钉	2		03. 01301
15		30501030004	Round PinΦ3×22	弹性圆柱销	1		03. 0702
16		50101150001	Shaft	压轴	1		40. 14. 008
17		51108000018	Pressing Roller	下压滚子	1		40. 14. 009
18		54101000039	Clamp	卡箍	1		03. 0601
19		30201060037	Screw M6×16	螺钉	1		03. 0934
20		50101200015	Shaft	转动轴	1		40. 14. 010
21		30501050003	Round PinΦ5×35	弹性圆柱销	2		03. 0303
22		53102000032	Chain	链条	1		
23		55222000002	Eye Bolt	带孔螺栓	1		30. 01. 3272
24		30301050002	Nut M5	螺母	1		03. 0255
25		30311050001	Nut M5	螺母	1		03. 02441
26		20371020025	Pull Rod Chain Assembly	拉杆链条组件	1		02. LT. 3511

3.101	Operating Handle Assembly 操作手柄组件
-------	-------------------------------------

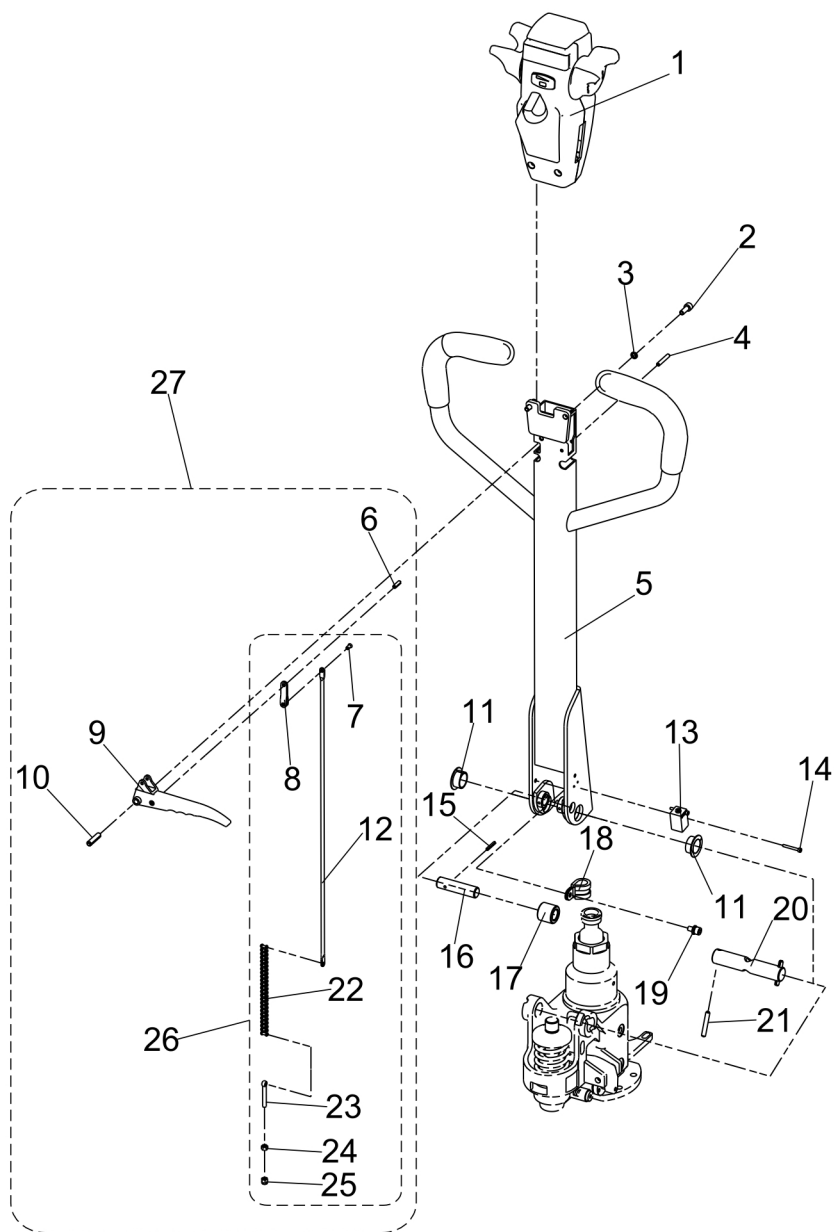
[illegible]

3.2 Control Pod Assembly 手柄头总成

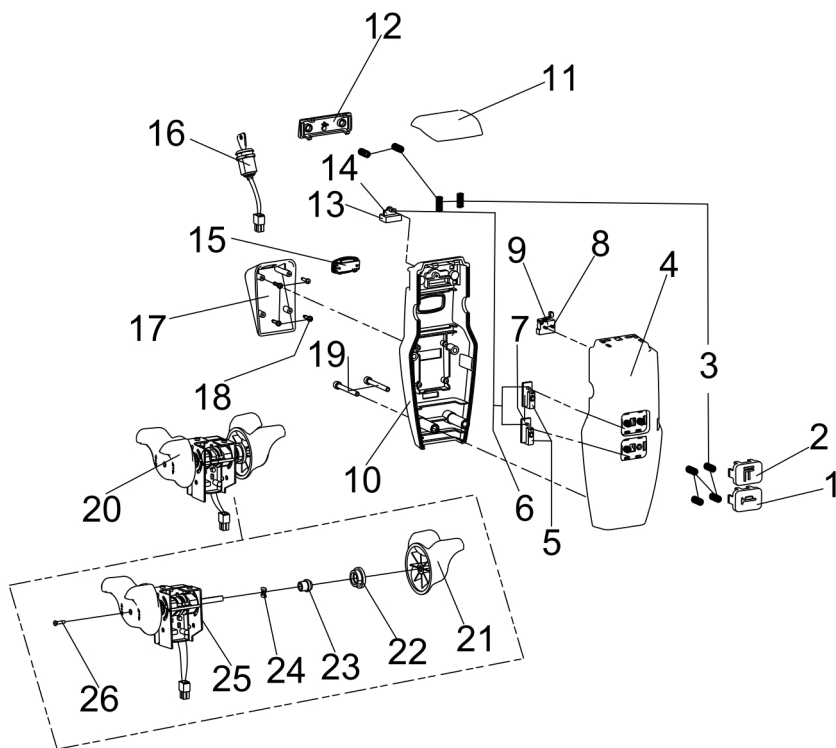


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
A	71501000015	Handle Head Assembly 手柄头总成	1		
1	71511000104	Horn Button 喇叭按钮	1		02. SB. PJ. 0004
2	71511000105	Rising Button 上升按钮	1		02. SB. PJ. 0005
3	71511000118	Spring 7×16 弹簧	8		02. SB. PJ. 0010
4	71511000100	Upper Cover 上盖	1		02. SB. PJ. 0029
5	70103000007	Switch 微动开关	2		
6	30231030002	Screw ST2.9×9.5 螺钉	3		02. SB. PJ. 0012
7	71511000107	Micro Switch Card 微动开关卡板	2		02. SB. PJ. 0006
8	30231020001	Screw ST2.2×13 螺钉	2		02. SB. PJ. 0011
9	70103000008	Reverse Direction Switch 反方向开关	1		02. SB. PJ. 00027
10	71511000102	Lower Cover 下盖	1		02. SB. PJ. 0031
11	71511000103	Belly Switch 肚皮开关	1		02. SB. PJ. 0003
12	71511000108	Mode Button 模式开关	1		02. SB. PJ. 0015
13	70103000006	Micro Switch 微动开关	1		
14	71511000109	Mode Button Card 模式开关卡板	1		02. SB. PJ. 0016
15	70601000018	Meter 电量表	1		
16	70105000009	Key Switch Assembly 钥匙开关总成	1		
17	71511000110	Key Box 钥匙盒	1		02. SB. PJ. 0017
18	30231030004	Screw ST2.9×13 螺钉	4		02. SB. PJ. 0021
19	30201050022	Screw M5×40 螺钉	2		
20	70132000104	Accelerator Assembly 加速器总成	1		
21	71511000115	Accelerator Knob 加速器旋钮	2		02. SB. PJ. 0027
22	71511000113	Shaft Jacket 轴外套	2		02. SB. PJ. 0025
23	71511000111	Shaft Sleeve 轴内套	2		02. SB. PJ. 0024
24	30431080001	Spring Washer 波形弹性垫圈	2		03. 0735
25	70132000004	Accelerator 加速器	1		
26	30211030008	Screw M3×12 螺钉	2		03. 05364


4.101	Hydraulic System 液压系统
-------	--------------------------

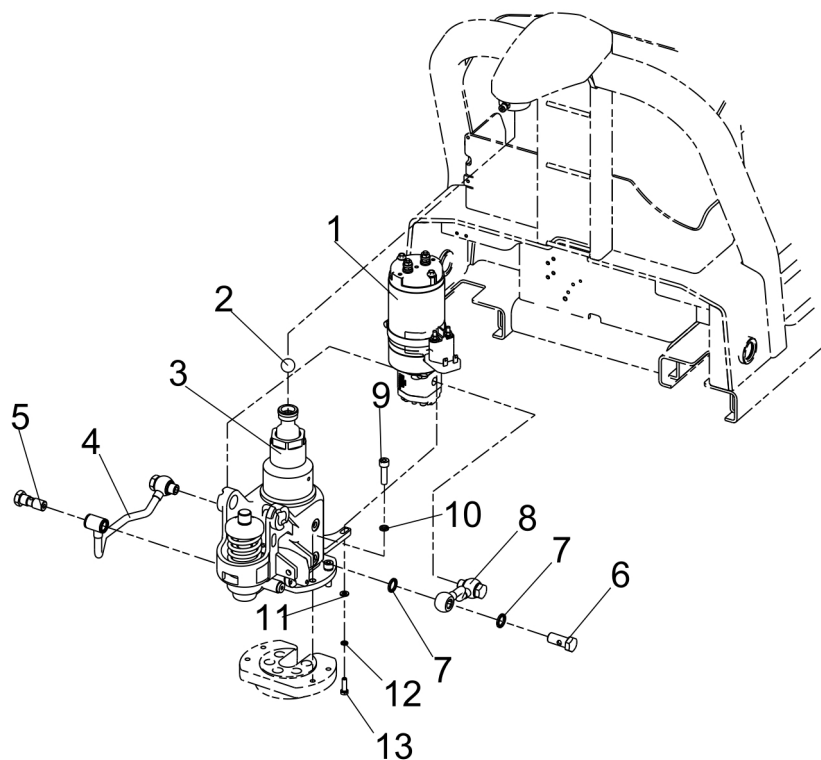[illegible]

4.201	Power Unit Assembly 动力单元组件
-------	-------------------------------

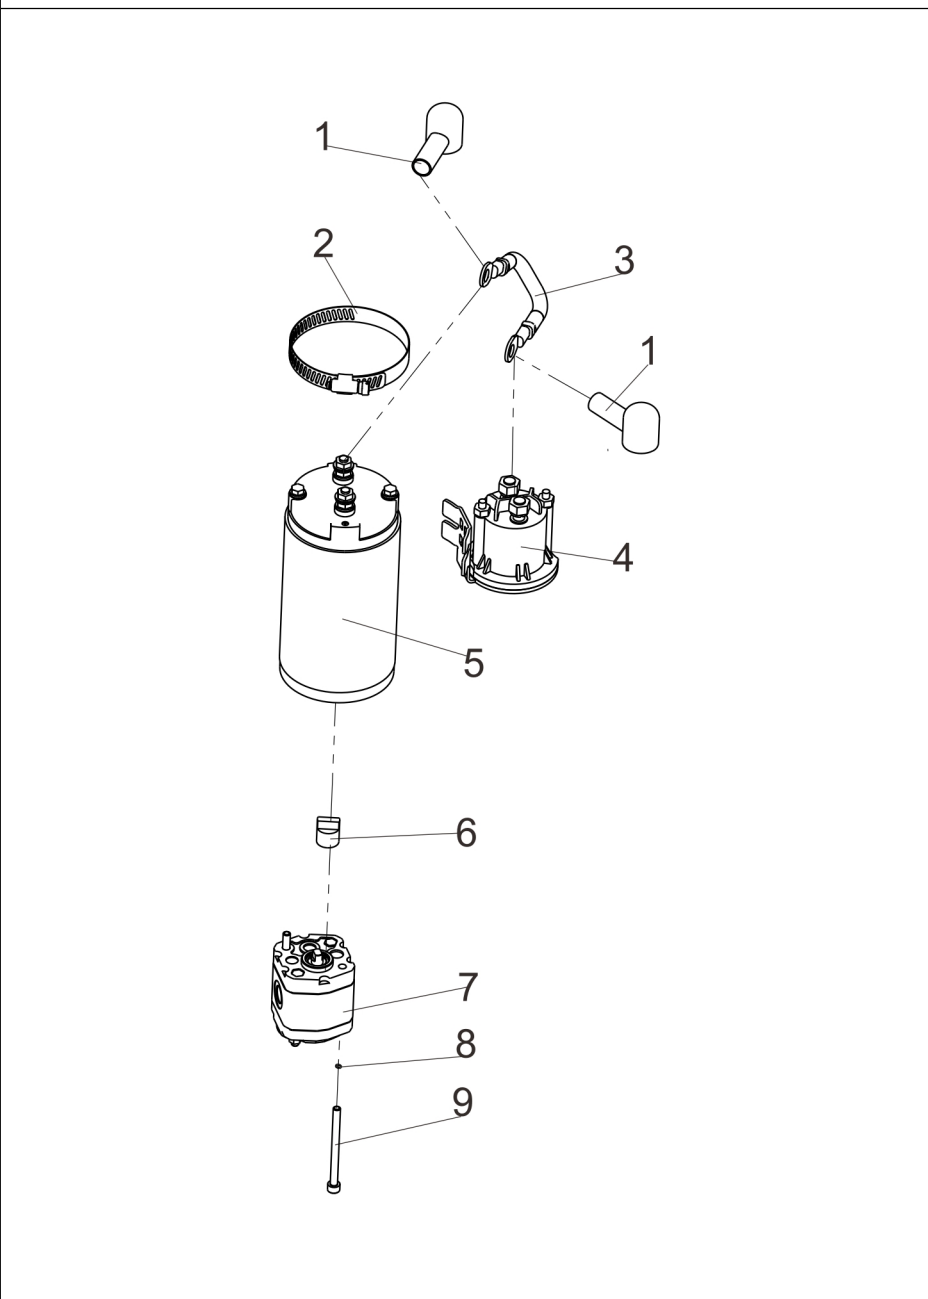
[illegible]

4.3 Lifting Cylinder
起升油缸

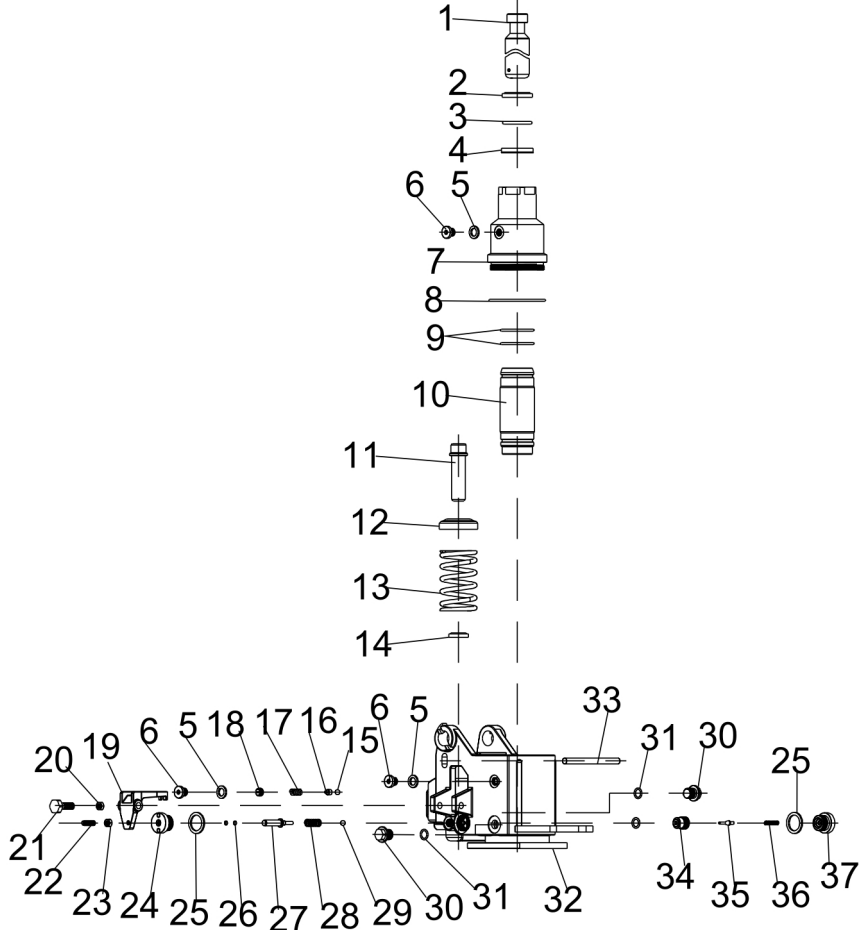


Item	Part No.	Description	Qty	Applied Date	Remark
序号	代码	名称	数量	适用日期	备注
A	40402000007	Lifting Cylinder Assembly 电动油缸	1		02. YG. 3716
1	40320000227	Plunger Lever 柱塞杆	1		
2	40321350002	Dust Ring 防尘圈	1		02. 01. 9210
3	40320000252	O-Ring O型圈	1		
4	40323350001	Seal Ring 密封圈	1		02. 01. 9146
5	30803010001	Gasket Φ10 密封垫	6		03. 0480
6	40320000228	Plug Screw 螺塞	6		
7	40320000229	Outer Cylinder 外缸	1		
8	40320000251	O-Ring O型圈	1		
9	40320000250	O-Ring O型圈	2		
10	40320000230	Inner Cylinder 内缸	1		
11	40320000231	Pump Core 泵芯	1		
12	40320000232	Gland 压盖	1		
13	40320000233	Spring 弹簧	1		
14	40321350004	Dust Ring 防尘圈	1		
15	40320000234	Steel Ball 钢球	1		
16	40320000235	Safety Seat 安全阀座	1		
17	40320000236	Relief Valve Spring 安全阀弹簧	1		
18	40320000237	adjusting Screw 调节螺钉	1		
19	40320000238	Switch Plate 开关板	1		
20	30301080001	Nut 螺母	1		03. 0258
21	30101080021	Screw 螺钉	1		03. 0672
22	30221060014	Screw 螺钉	1		03. 1162
23	30301060001	Nut 螺母	1		03. 0257
24	40320000239	Cooper Nut 铜螺母	1		
25	30803020001	Gasket Φ20 密封垫	2		03. 0485
26	30801011001	O-Ring O型圈	2		03. 0816
27	40320000240	Mandrel 顶杆	1		

4.3	Lifting Cylinder 起升油缸
-----	--------------------------

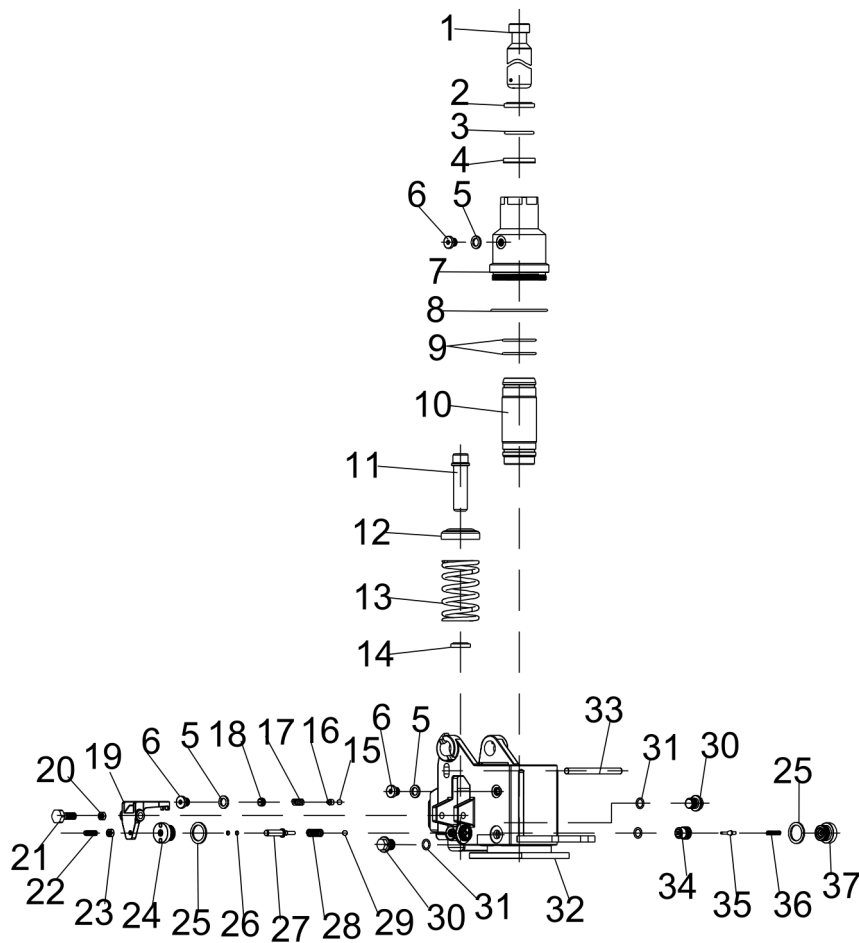
[illegible]

5.1 Electrical System
电气系统

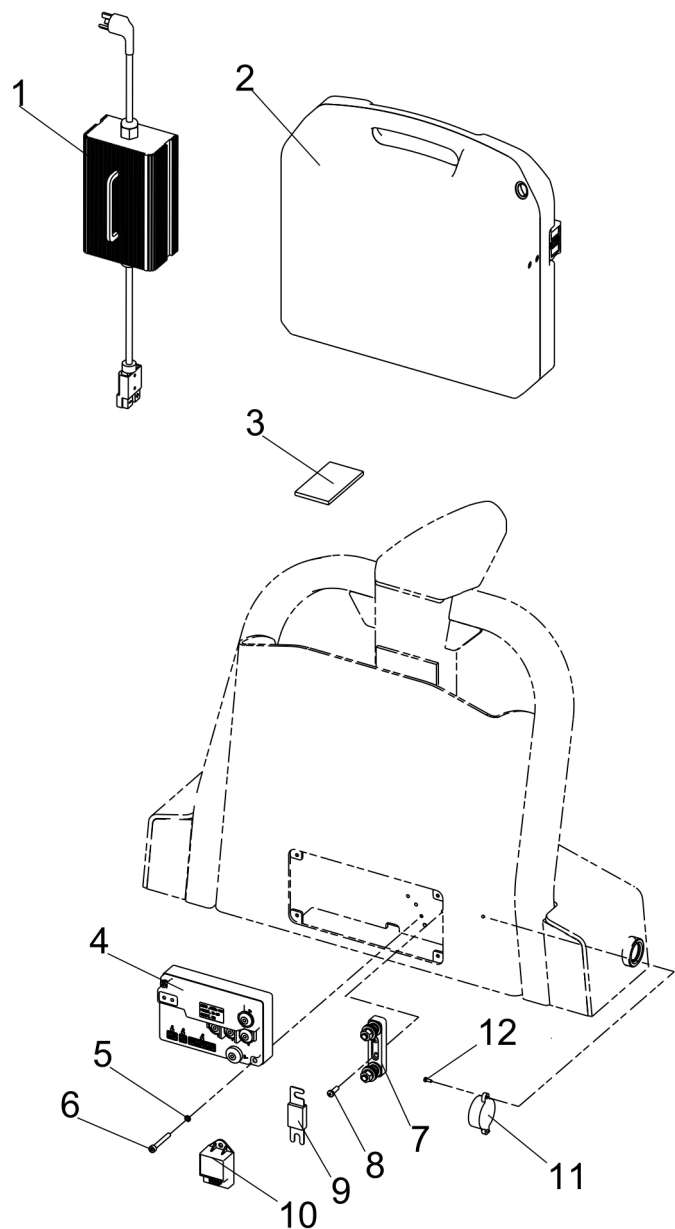


Item 序号	Part No. 代码	Description 名称	Qty 数量	Applied Date 适用日期	Remark 备注
1	70412010087	Asia Charger (48V5A) 亚标充电器	1		02. CDQ. 3411
1	70412010088	EU Charger (48V5A) 欧标充电器	1		02. CDQ. 3412
1	70412010089	U. S Charger (48V5A) 美标充电器	1		02. CDQ. 3439
1	70412010091	U. K Charger (48V5A) 英标充电器	1		02. CDQ. 3440
1	70412010096	Charger (48V5A) 澳标充电器	1		
1	70412010147	Asia Charger (48V10A) 亚标充电器	1		
1	70412010219	U. S Charger (48V10A) 美标充电器	1		
1	70412010188	EU Charger (48V10A) 欧标充电器	1		
1	70412010154	U. K Charger (48V10A) 英标充电器	1		
1	70412011116	Charger (48V10A) 澳标充电器	1		
1	70412010160	Asia Charger (48V15A) 亚标充电器	1		02. CDQ. 3433
1	70412010110	U. S Charger (48V15A) 美标充电器	1		
1	70412010109	EU Charger (48V15A) 欧标充电器	1		
1	70412010112	U. K Charger (48V15A) 英标充电器	1		
1	70412010117	Charger (48V15A) 澳标充电器	1		
2	70503480012	Battery 48V/20Ah 锂电池	1		02. XDC. 3418
2	70503480029	Battery 48V/30Ah 锂电池	1		02. XDC. 3424
3	20201002295	Patch 贴片	Req.		
4	70302000117	Controller PVM48S09 控制器	1		
4	70302000005	Controller 1226BL-4101 控制器	1		02. KZQ. 2374
5	30411050001	Lock Washer Φ5 弹垫	2		03. 00132
6	30201050022	Screw M5×40 螺钉	2		
7	70711000001	Fuse Stand 保险丝座	1		02. 01. 3057
8	30211050003	Screw M5×12 螺钉	2		03. 02261
9	70701000002	Fuse 保险丝	1		19. 03450
10	70307000013	Low Voltage Protection 低压报警模块	1		
11	70223000002	Horn 蜂鸣器组件	1		19. 03621
12	30211030002	Screw M3×8 螺钉	2		03. 02151


5.2	Wiring Harness Assembly 线束总成(1226BL-4101)
-----	--

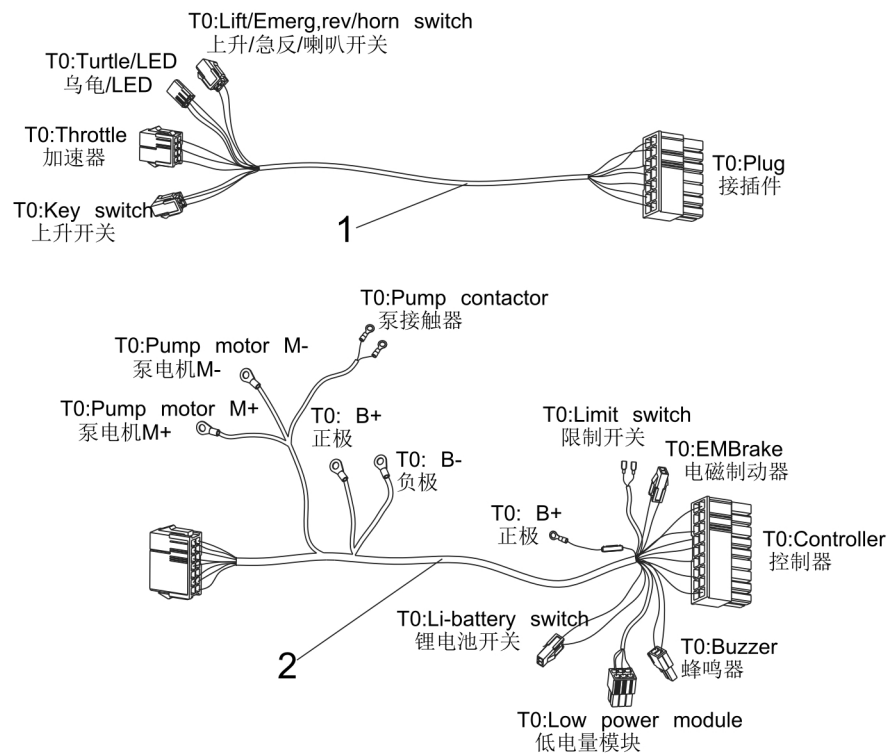[illegible]


5.3	Wiring Harness Assembly 线束总成(PVM48S09)
-----	---

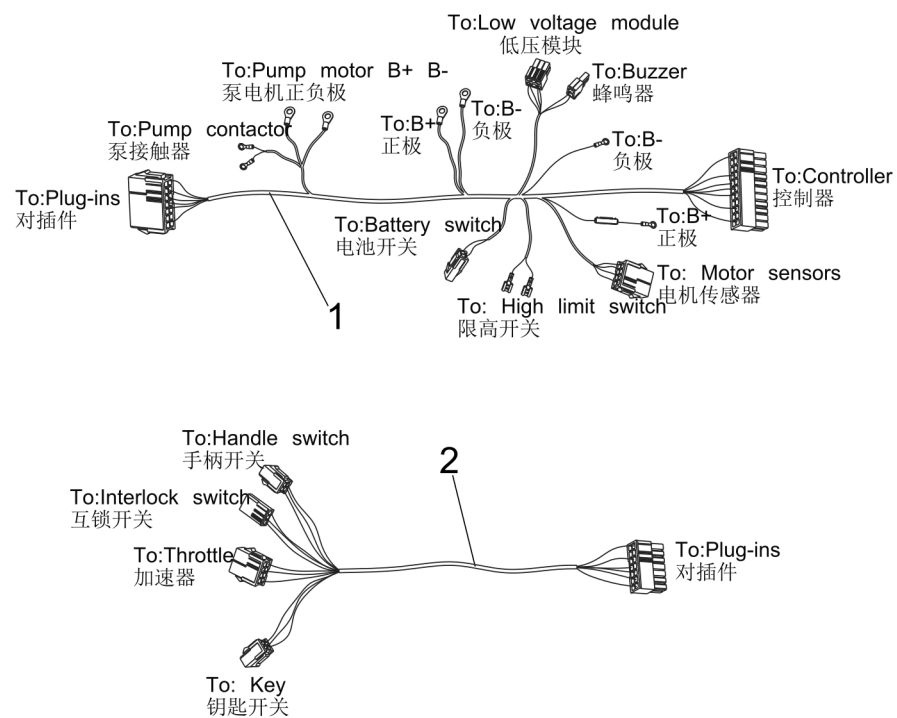[illegible]

5.4	Cable Assembly 电缆总成(1226BL-4101)
-----	-------------------------------------

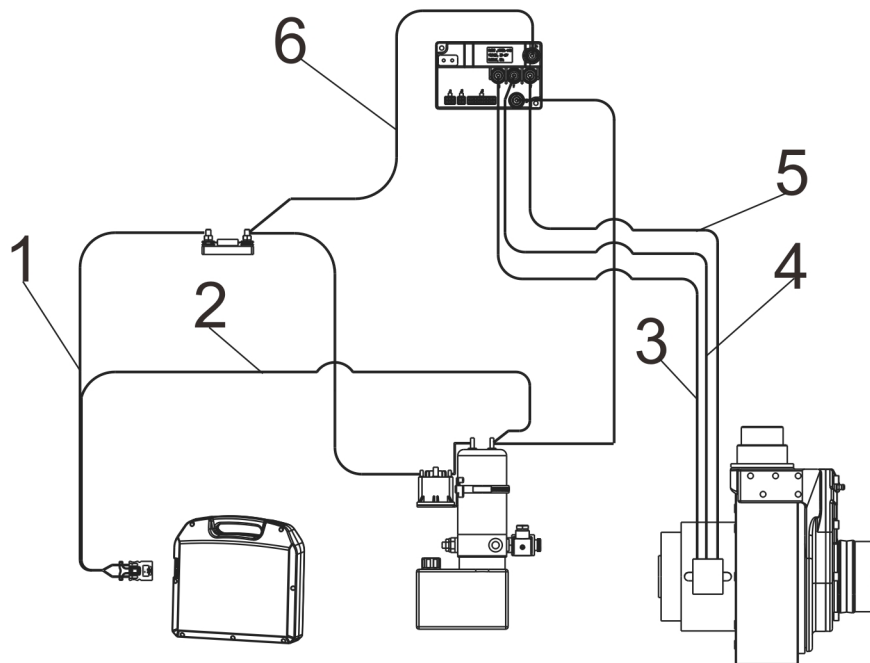[illegible]

5.5	Cable Assembly 电缆总成(PVM48S09)
-----	----------------------------------

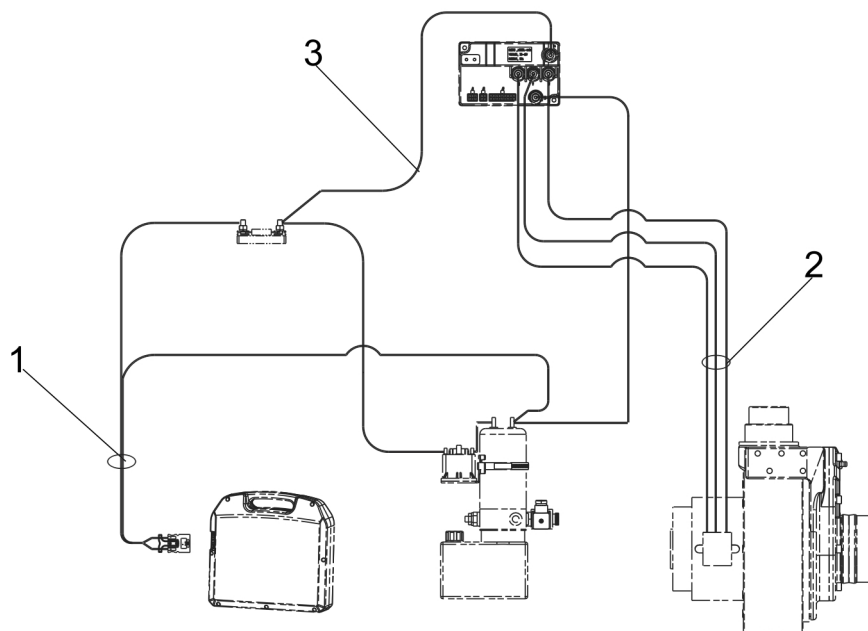[illegible]

零件目录最终由制造商保留解释权！

The power of interpretation of this part catalogue will be preserved by the manufacturer eventually!